



HPE ProLiant DL380 Gen9 Server Fan Replacement

This guide illustrates the process for removing and replacing a fan.


Written By: Michael Johnson



INTRODUCTION


The fans are hot-pluggable and can be removed without powering down the server.

Step 1 — Extend the server from the rack.

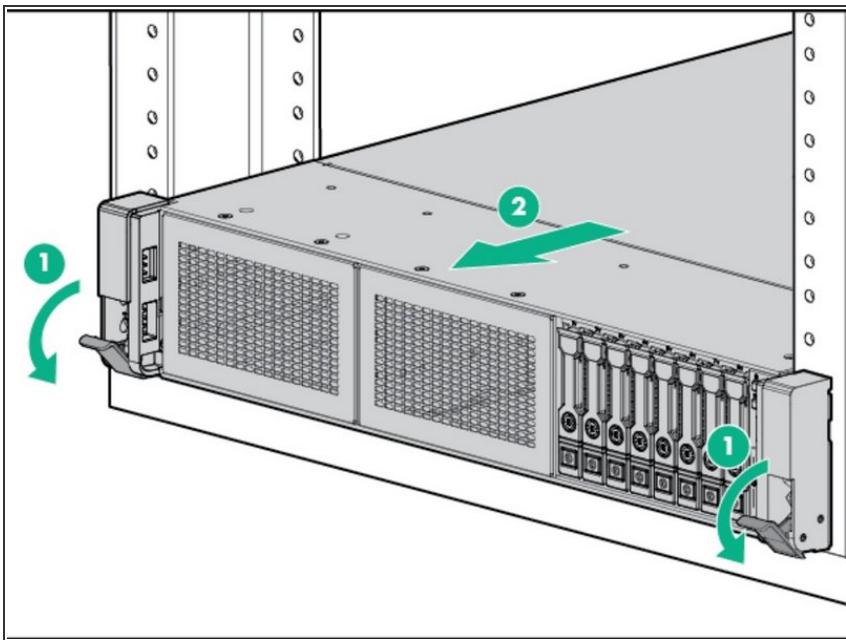


- Pull down on the quick release levers on each side of the server.

Step 2 — Remove the access panel

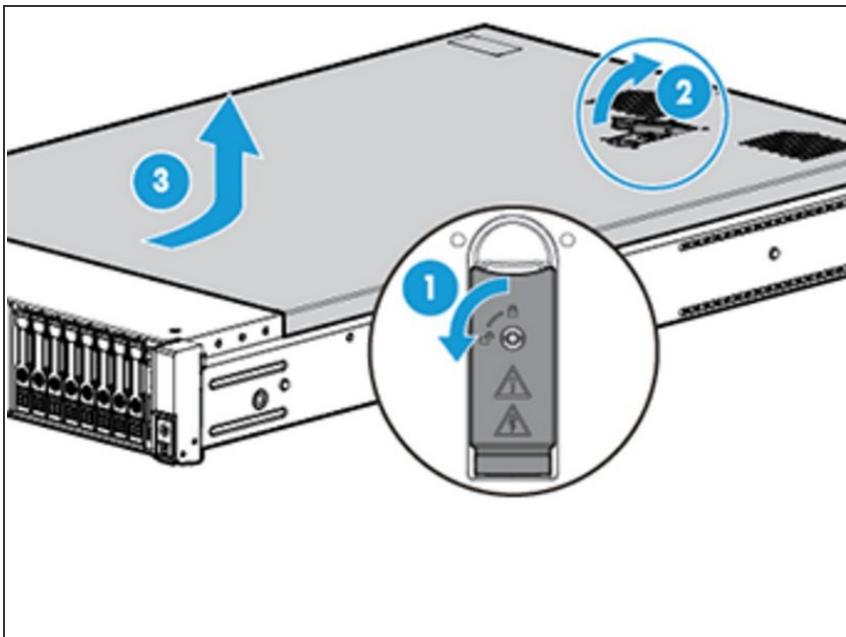

- Unlock or open the latch, slide the access panel to the rear of the server, and then remove the access panel.

Step 3 — Remove the fan

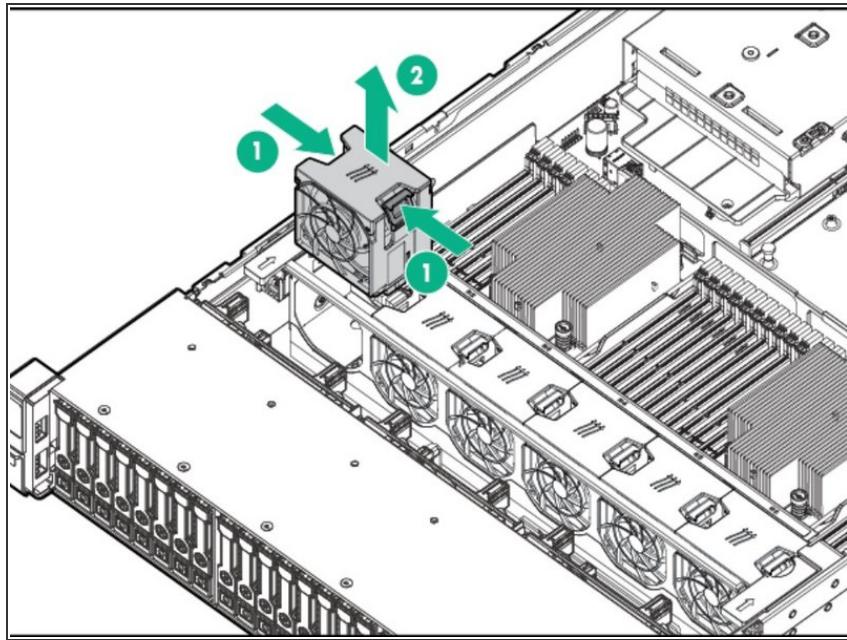

- Release the fan by grabbing the top, pressing the release tab, and lifting it out of the server.

To reassemble your device, follow these instructions in reverse order.