




# HTC Amaze Loud Speaker Replacement

This guide will show you how to remove the HTC Amaze loud speaker.

Written By: Akshat Shah

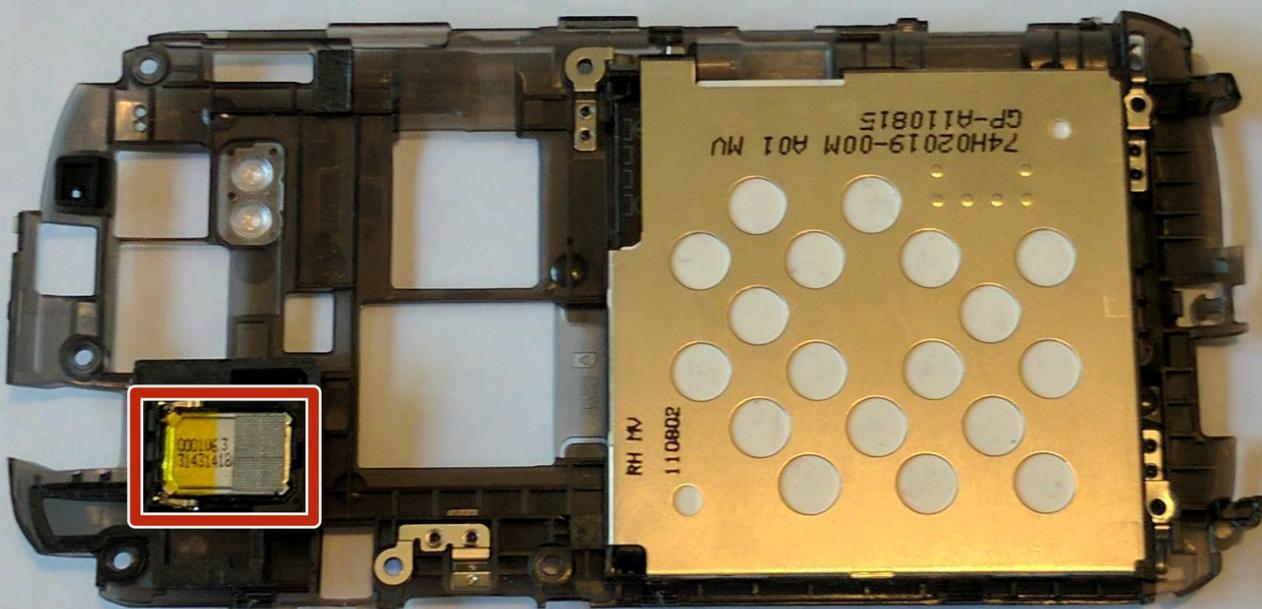


## INTRODUCTION

The loudspeaker is located within the back panel of the device. This makes it relatively simple to access.

### TOOLS:

- [T5 Torx Screwdriver](#) (1)
- [Metal Spudger](#) (1)
- [Precision Tweezers Set](#) (1)
- [Phillips #000 Screwdriver](#) (1)

## Step 1 — Battery

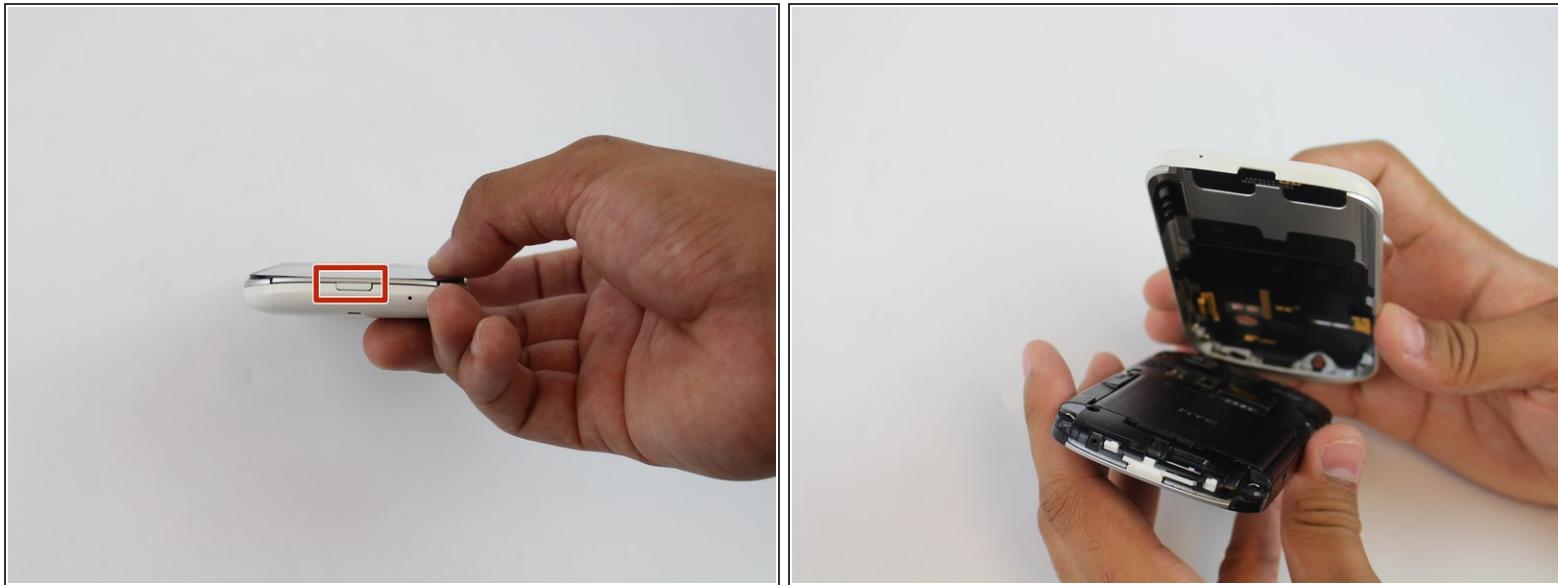


- Gently press the Release Button located at the bottom of the phone in order to remove the back panel of the device.

## Step 2




- Once you locate the battery, look for a notch below it.
- Gently insert your fingernails into the notch.
- Lift the battery out of its recess.

## Step 3 — HTC Amaze Back Panel Disassembly

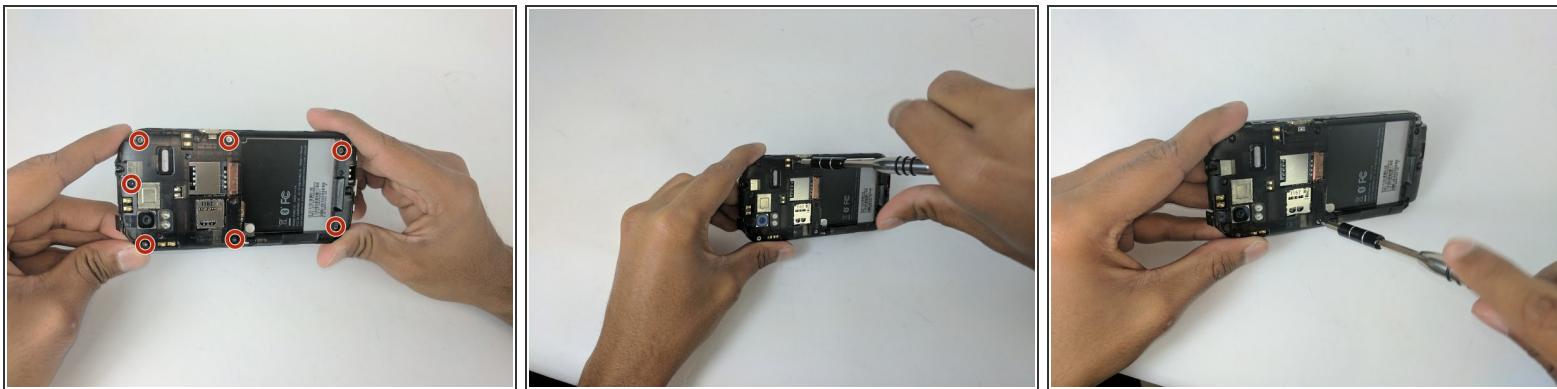


- Use the Torx T5 screwdriver to remove the 7 Torx Screws (3mm) attached to the back housing of the device.
- One of the Screws may have a tape attached to it that says void. Removing this screw will void the devices warranty.

## Step 4

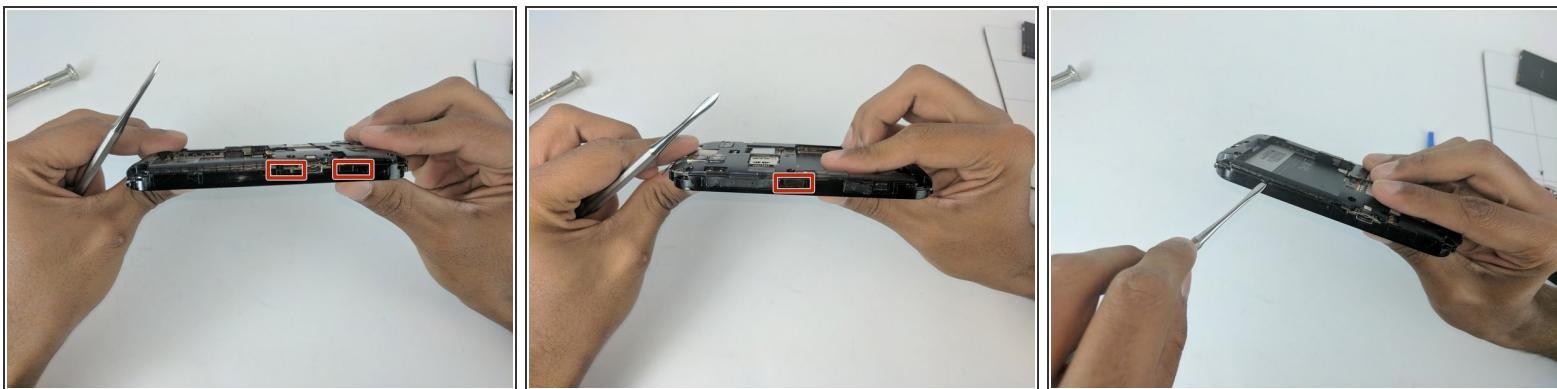


- Proceed to remove the back housing by using the spudger to gently unclip each clip holding the back housing in place and then lift the outer edges of the back housing
- If you're having trouble opening the back try using the spudger to gently pry all around the panel before you attempt to remove it.

## Step 5

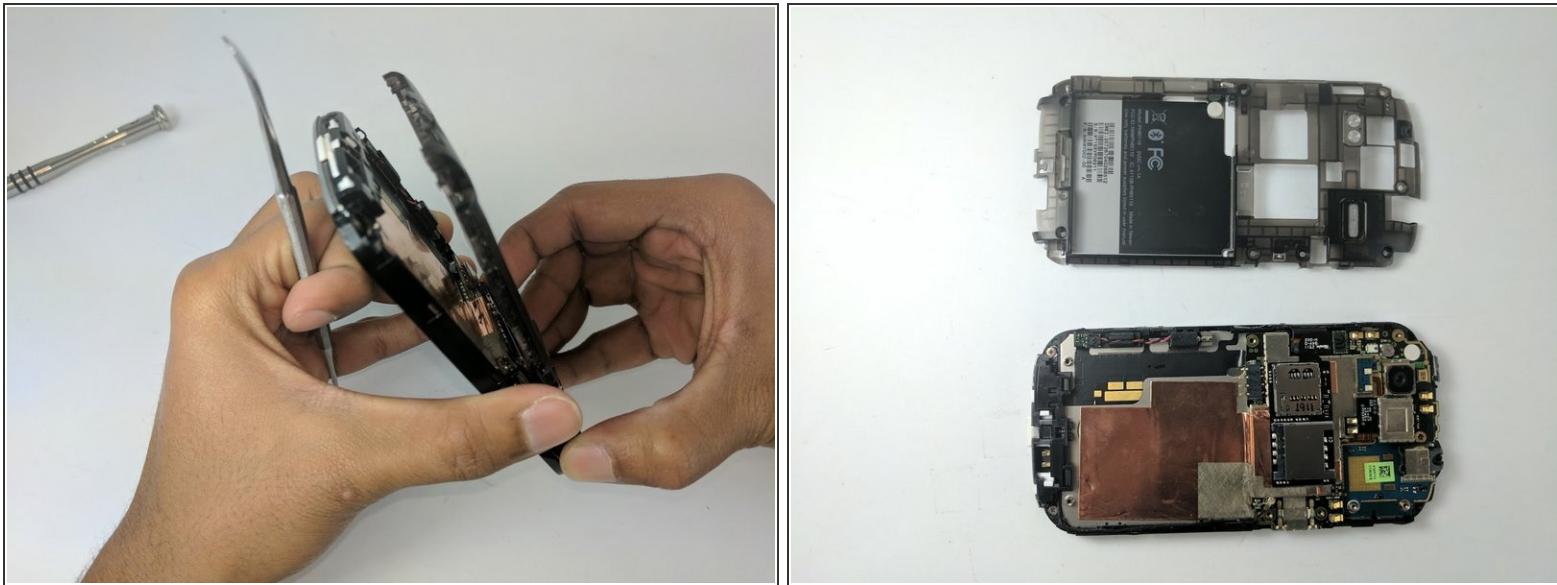

- Now simply remove the back panel by gently pulling. This will make it easier to access the devices internal components.

## Step 6 — Loud Speaker

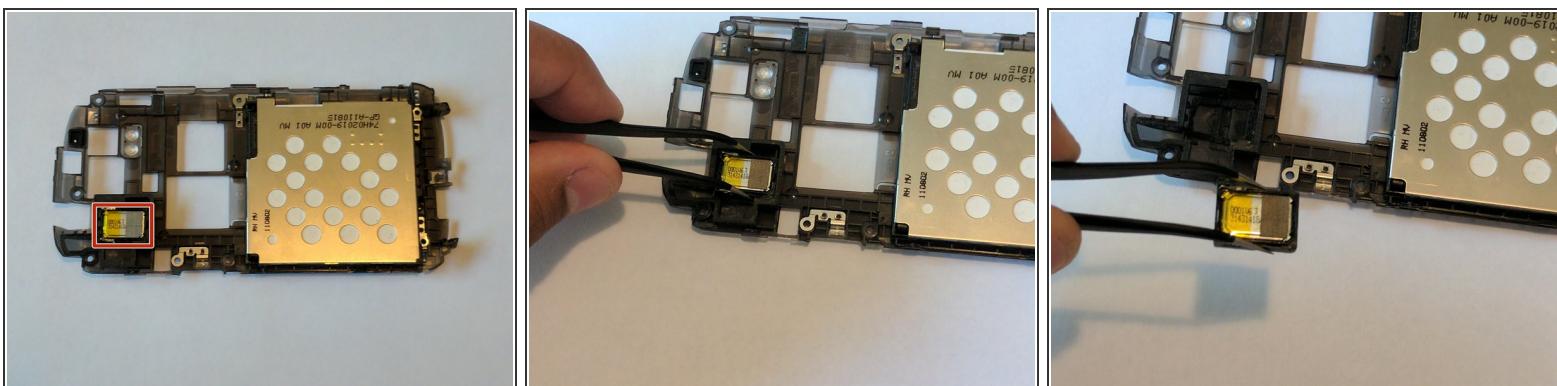

- Turn the back panel over to access its interior, and locate the loudspeaker marked in the picture.
- Remove it by gently pulling with the precision tweezers.

To reassemble your device, follow these instructions in reverse order.