




HTC Desire 530 Speaker Replacement

This guide will show you how to replace the top and bottom speakers of an HTC Desire 530.

Written By: Thomas Morin

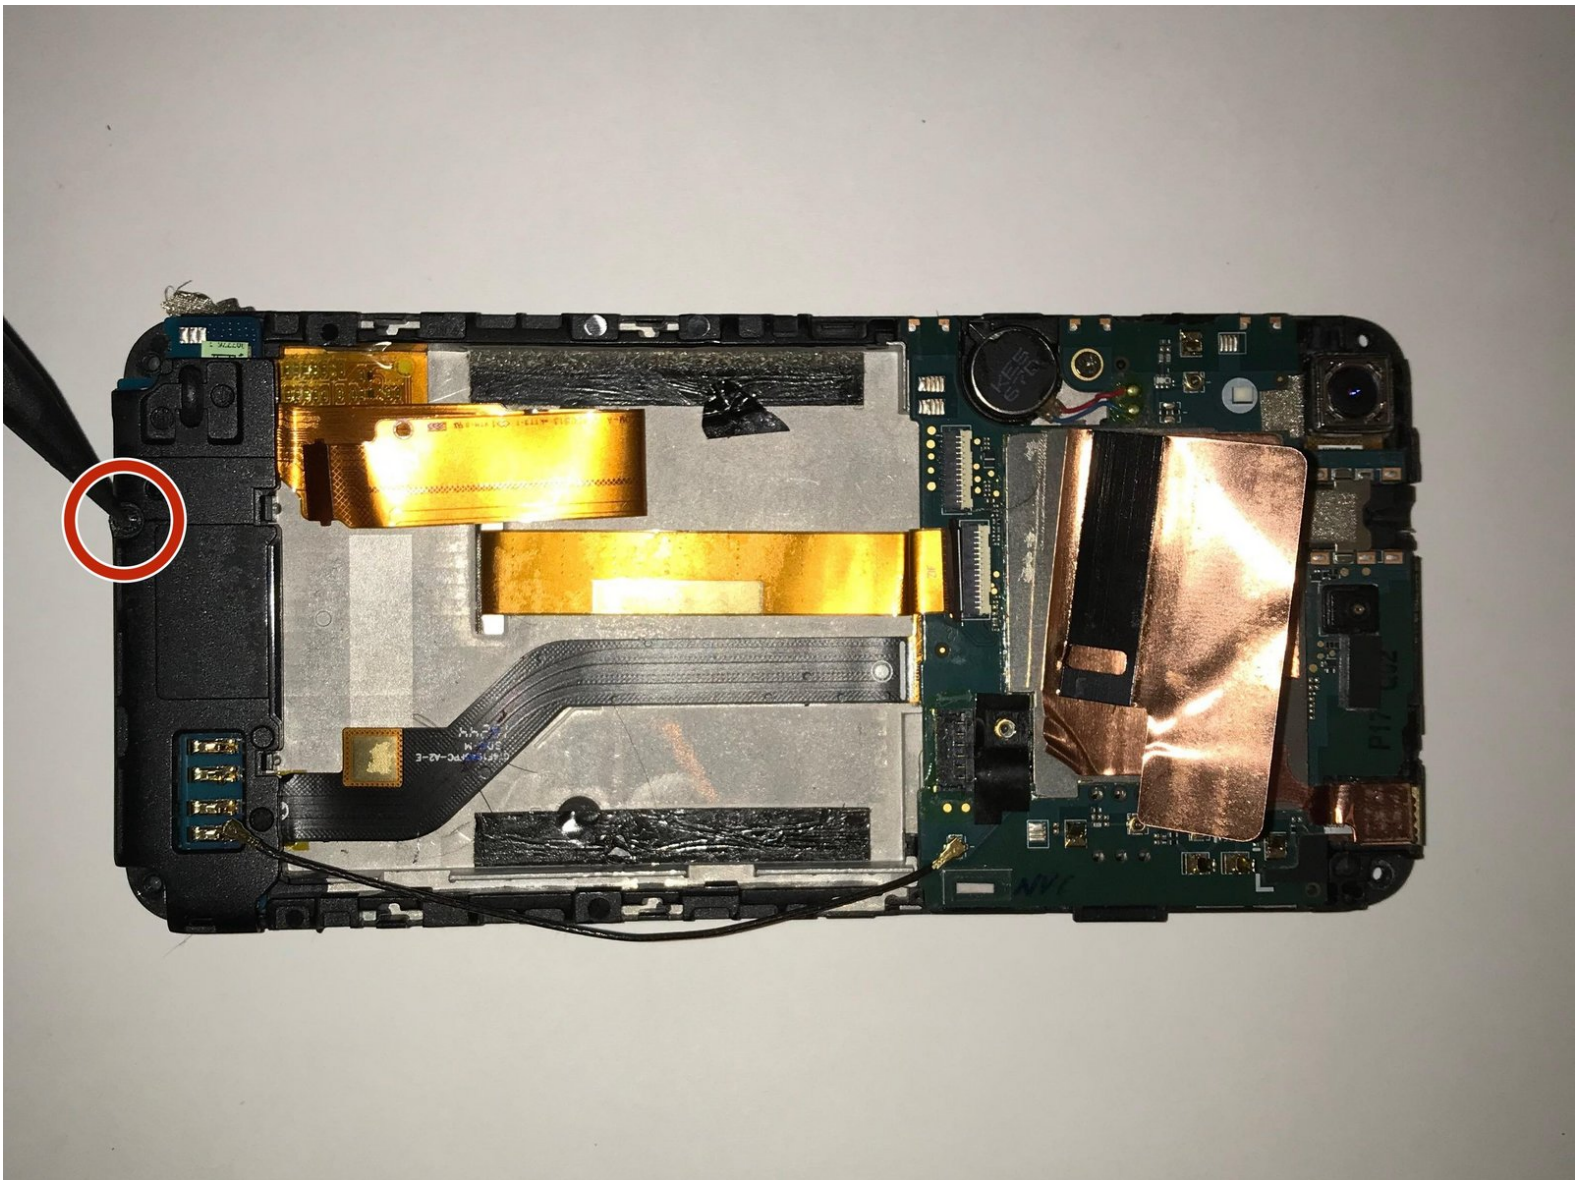

INTRODUCTION


Do the speakers of your HTC Desire 530 sound distorted or not work? If so, this guide will show you all the steps necessary to take a part your phone and replace the broken speakers. The only tools required for this job are a T5 Torx screwdriver and plastic opening tools.



TOOLS:



- [iFixit Opening Tools](#) (1)
 - [T5 Torx Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Battery

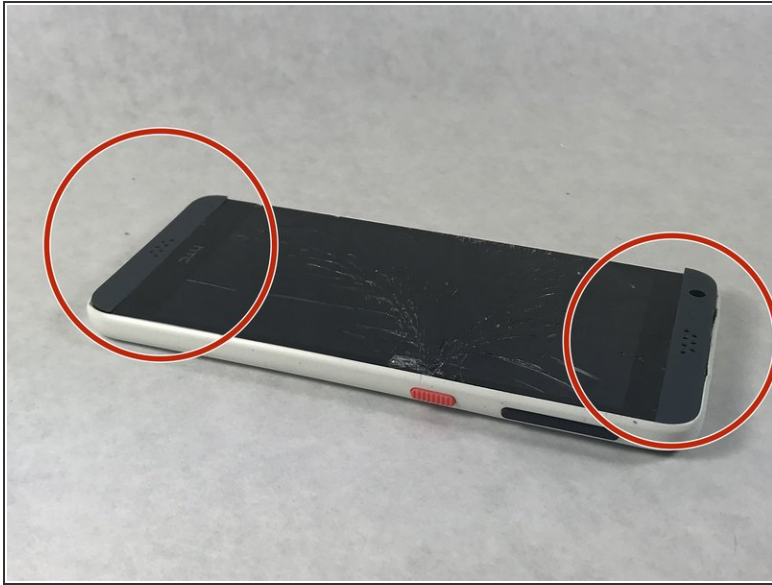



- Use the plastic opening tools to remove the plastic speaker covers that are attached through an adhesive layer.
- ⓘ They may be difficult to peel off and you might want to consider loosening the adhesive layer by running a hair dryer or a heat gun over it briefly to allow them to peel off easily.

Step 2

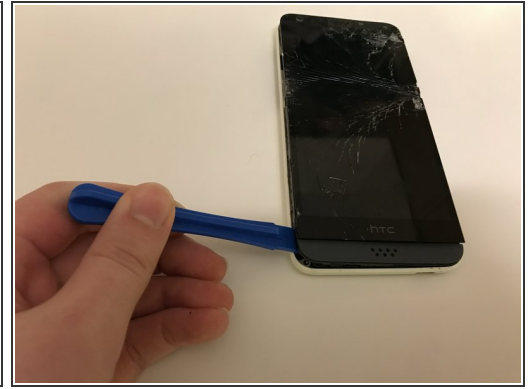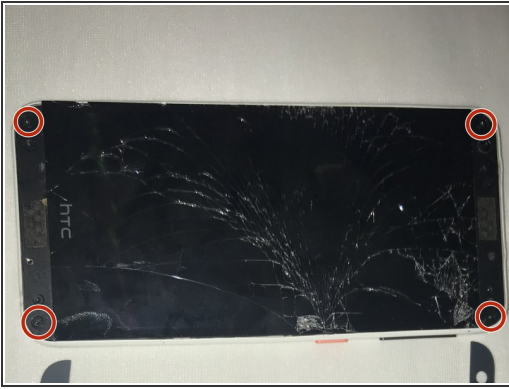


- Use the T5 Torx screwdriver to remove the four screws in each corner.
- Make sure to take out any SD cards, located on the left side of the phone before proceeding to the next step.
- Use the plastic opening tool to pry the front of the device off. Fully go around the front with the plastic opening tool before attempting to pull it off.

Step 3

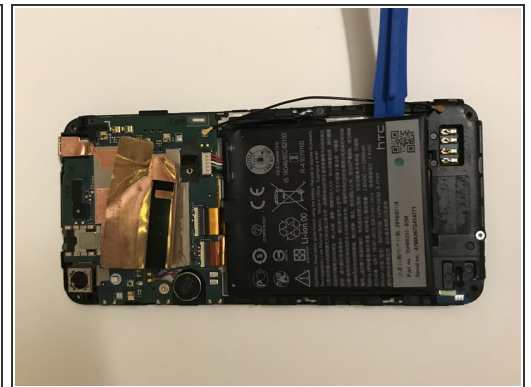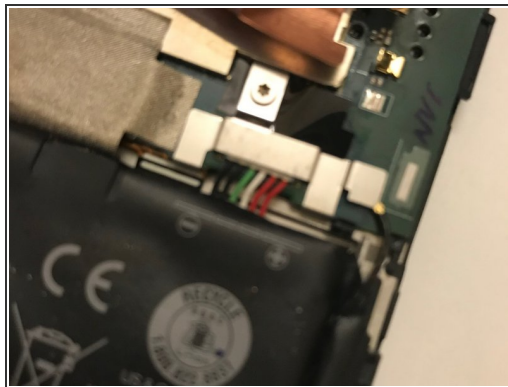


- Dislocate the small piece with the wires connected using a nylon spudger.
- Loosen the adhesive layer for the battery by running a hair dryer over it briefly. After the adhesive is loosened you can pry the battery out with a plastic opening tool.

Step 4

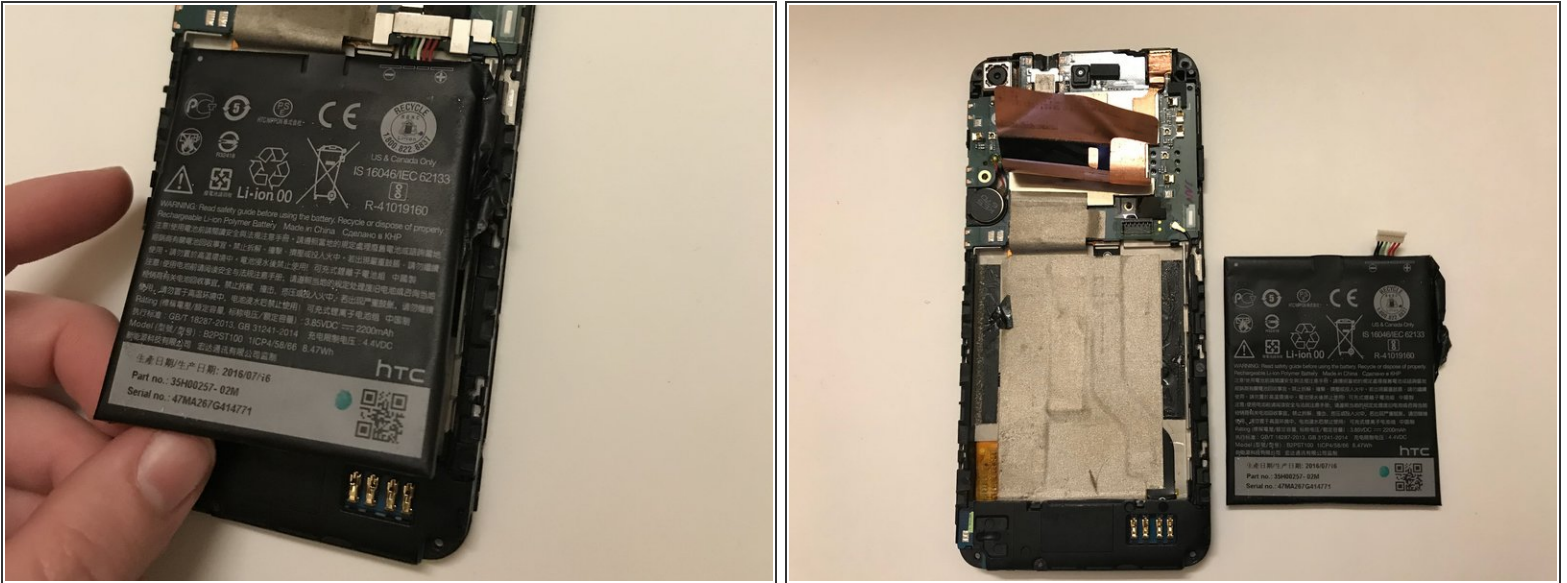


- After prying, simply lift the battery up and out of the device.

Step 5 — Speaker

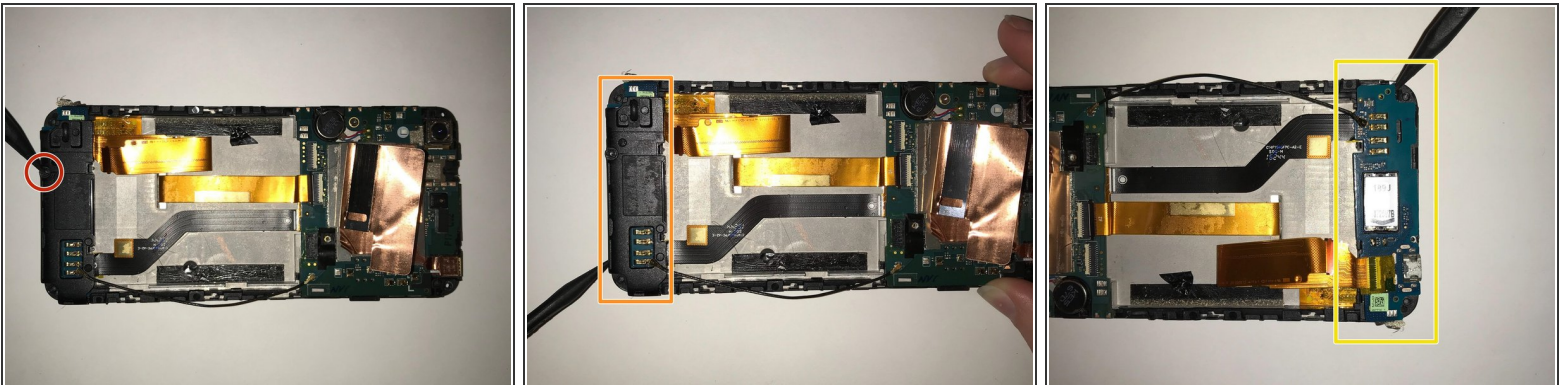


- Use the T5 Torx screwdriver to remove the screw located on the left side.
- Use the spudger to slowly pry off the black cover.
- Slowly pry off the circuit board with the spudger in a very cautious manner.

Step 6

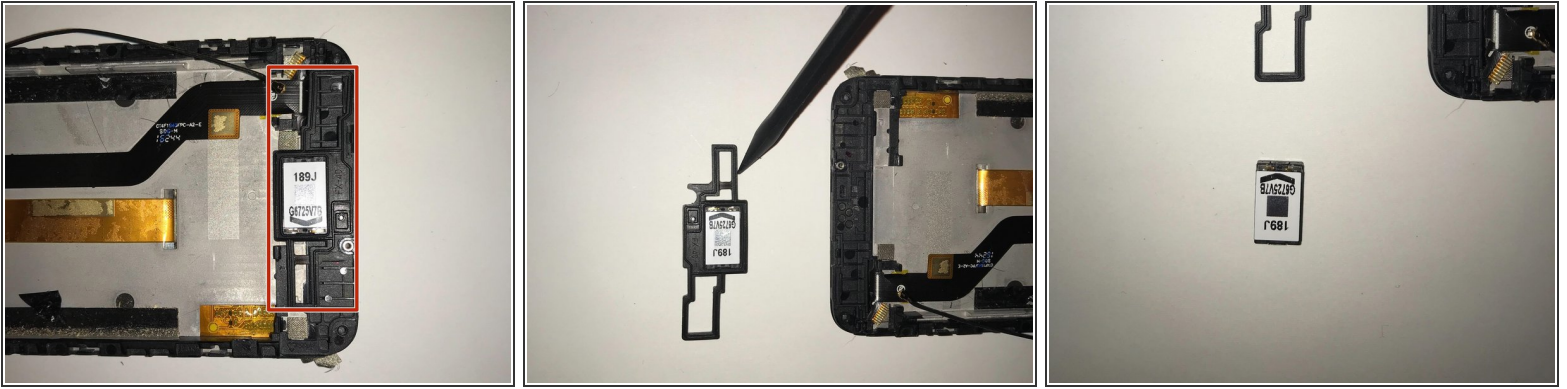


- Remove the rubber object by pinching and pulling it out.
- Take the speaker out of the holder.

Step 7

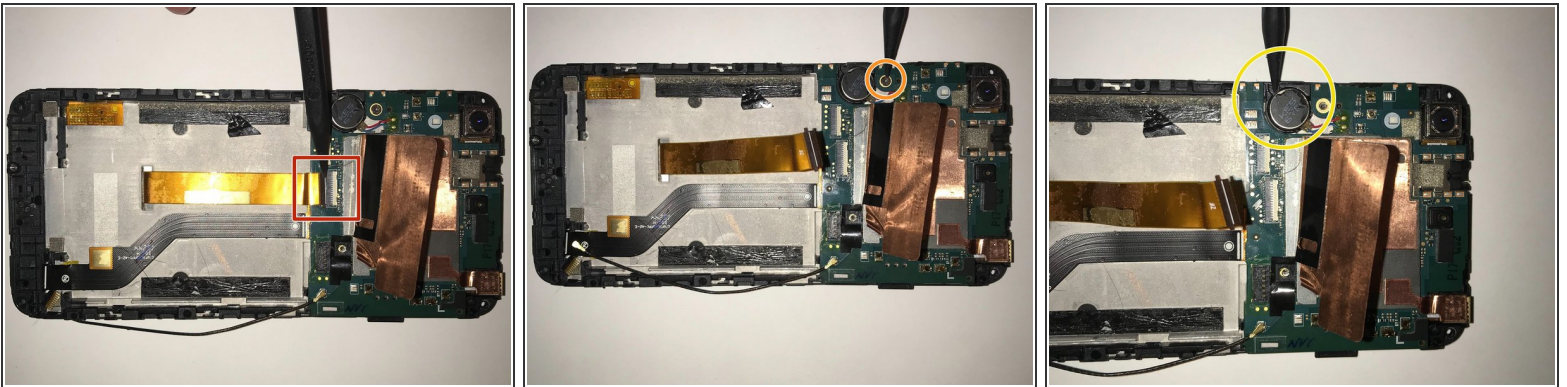

- To access the top speaker, you must first detach the orange cable from its holder with your fingers.
 - Remove the T5 Torx screw.
 - Carefully pry off the circular object with the spudger.
- ⚠ Do not accidentally disconnect this object from the phone. It is connected by 2 short wires.

Step 8

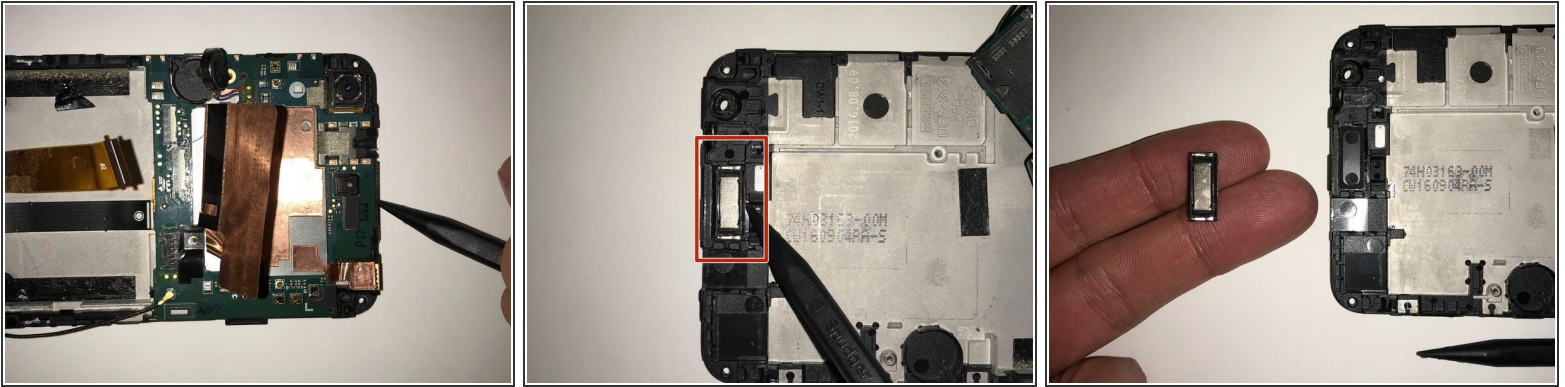

- Use the spudger to carefully work your way around the edge of the motherboard and slowly pry it off.
- Use the spudger to pry off the speaker.

To reassemble your device, follow these instructions in reverse order.