



HTC Desire 610 Daughterboard Replacement

In this repair guide you will be replacing the daughterboard in the HTC Desire 610.

Written By: Austin Phelps



INTRODUCTION

In this repair guide you will be replacing the daughterboard in the HTC Desire 610. After doing this replacement, you will fix the micro USB port and also be able to successfully charge your phone again.



TOOLS:

- [Phillips #000 Screwdriver](#) (1)
 - [T5 Torx Screwdriver](#) (1)
 - [Tweezers](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Daughterboard



- Open the SD card slot.

Step 2



- Using plastic opening tool, take off the back cover of the phone.

Step 3




- Using Phillips #000 Screwdriver, remove the two 2.5mm phillips head screws.

Step 4




- Using Torx T5 Screwdriver, remove the four 5mm silver torx head screws.

Step 5

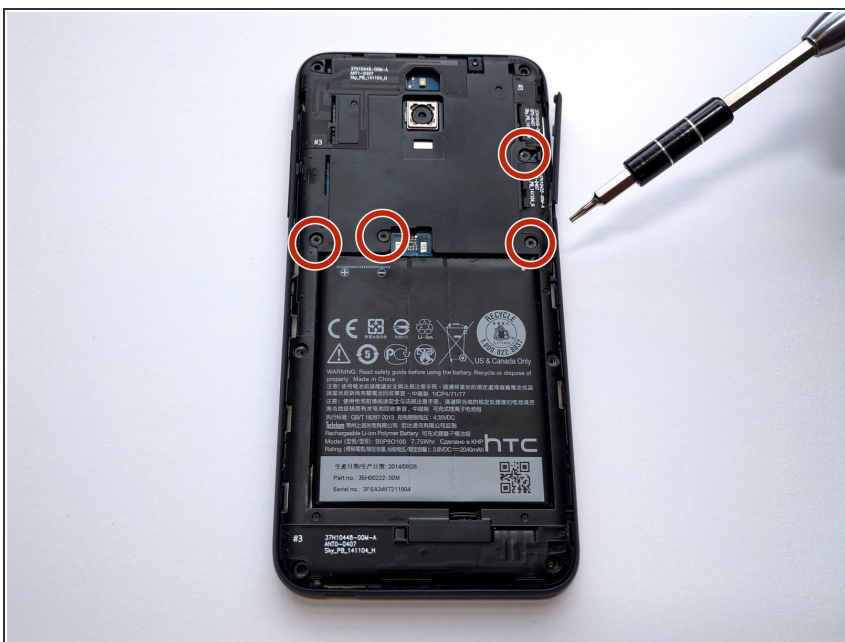

- Using Torx T5 Screwdriver, remove the four 4mm black torx screws

Step 6

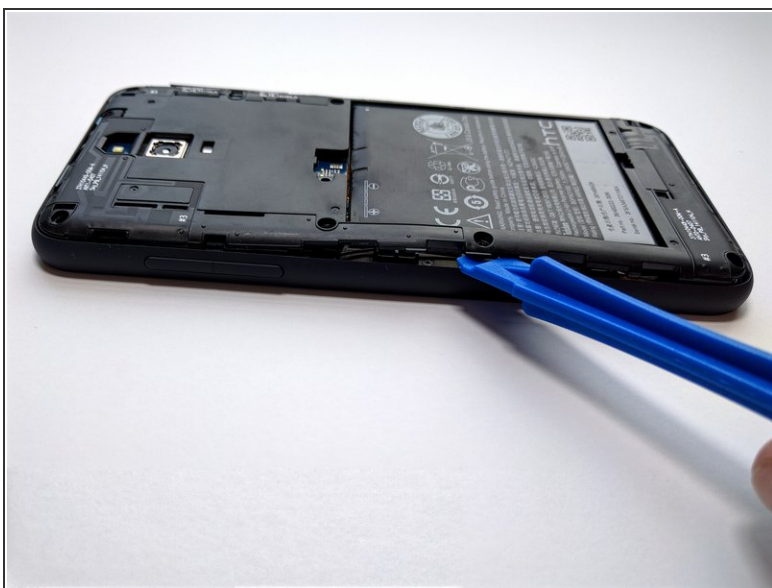

- Using plastic opening tool, remove the black plastic circuit cover.

Step 7



- Using Torx T5 Screwdriver, remove the 4mm black torx screw.

Step 8



- Using Tweezers, disconnect antenna wire.


Step 9



- Using Tweezers, remove loud speaker that is being held by small adhesive.

- ⓘ When putting loud speaker back on, the prongs sticking up should be on the side closer to the top of the phone.

Step 10

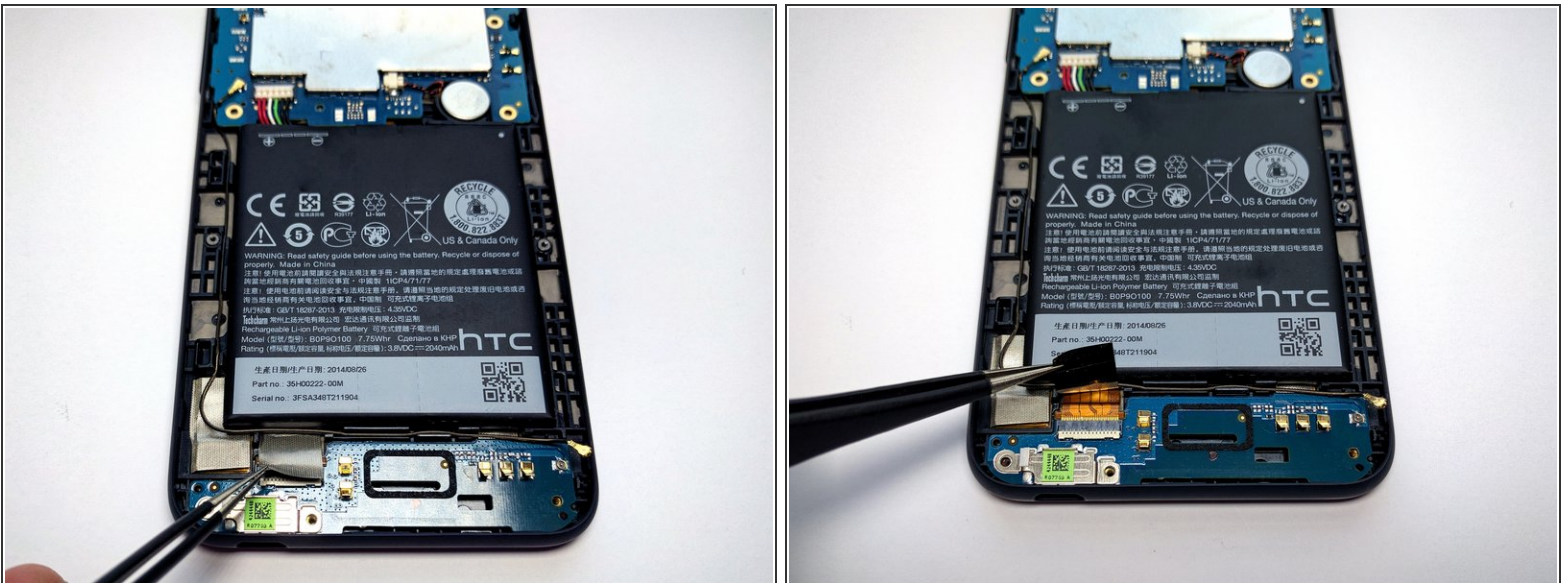

- Using Tweezers, peel back gray adhesive.

Step 11



- Using Tweezers, flip the white strip upward so it sits 90°.

Step 12



- Using plastic opening tool, pry up green plate and pull outward.
- ⓘ Daughterboard is off. Get new daughterboard and reverse steps.

To reassemble your device, follow these instructions in reverse order.