



# HTC Desire 626s Loud Speaker Replacement

Replacing the loud speaker on a HTC Desire 626S smart phone.

Written By: Blake Bartlett



## INTRODUCTION

This is a device removal guide for your HTC Desire 626s if you ever need to replace the loud speaker.

### TOOLS:


- [T5 Torx Screwdriver](#) (1)
- [JIS #000 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

## Step 1 — Backplate




- Insert plastic opening tool in between the back cover and grey plastic.
- Gently work your way around the phone while sliding the tool.
- Gently pry on plastic cover as needed to release fasteners.

## Step 2

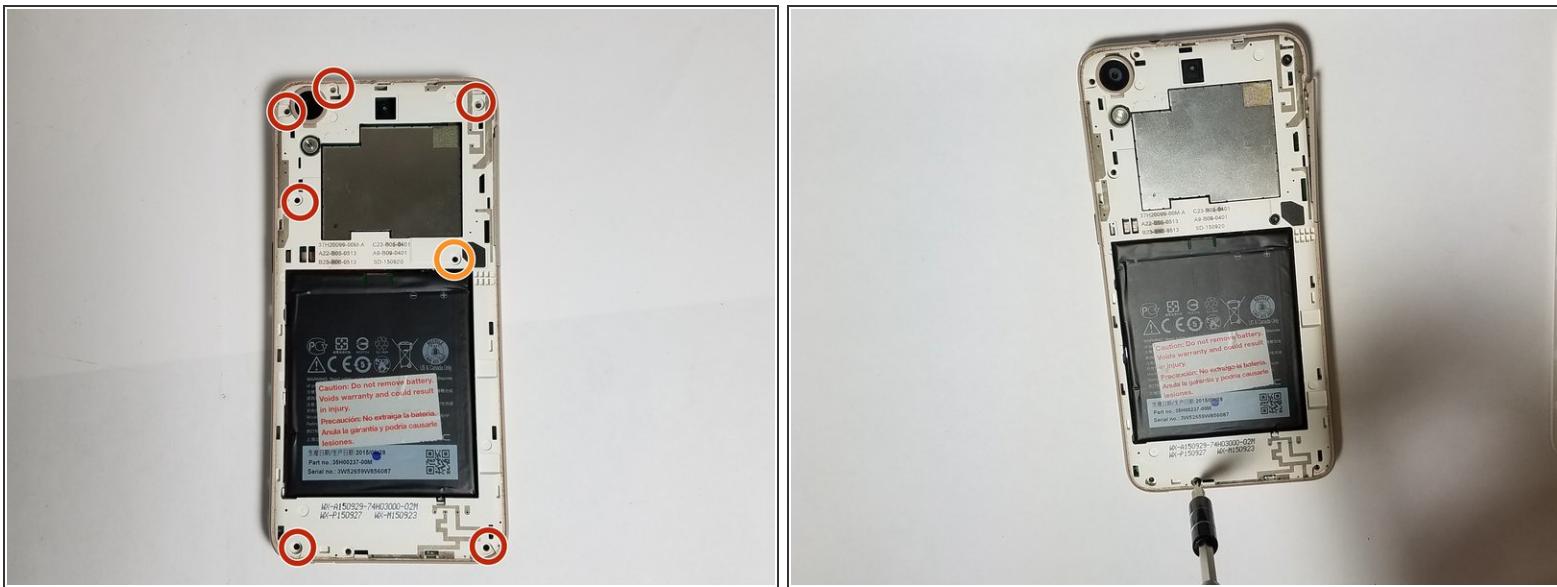

- There are 7 screws you need to remove before prying the secondary cover off. You will need to use the JIS #000 screwdriver and the T5 Torx screwdriver to remove these screws.
- There is a screw under the "void" sticker.

## Step 3

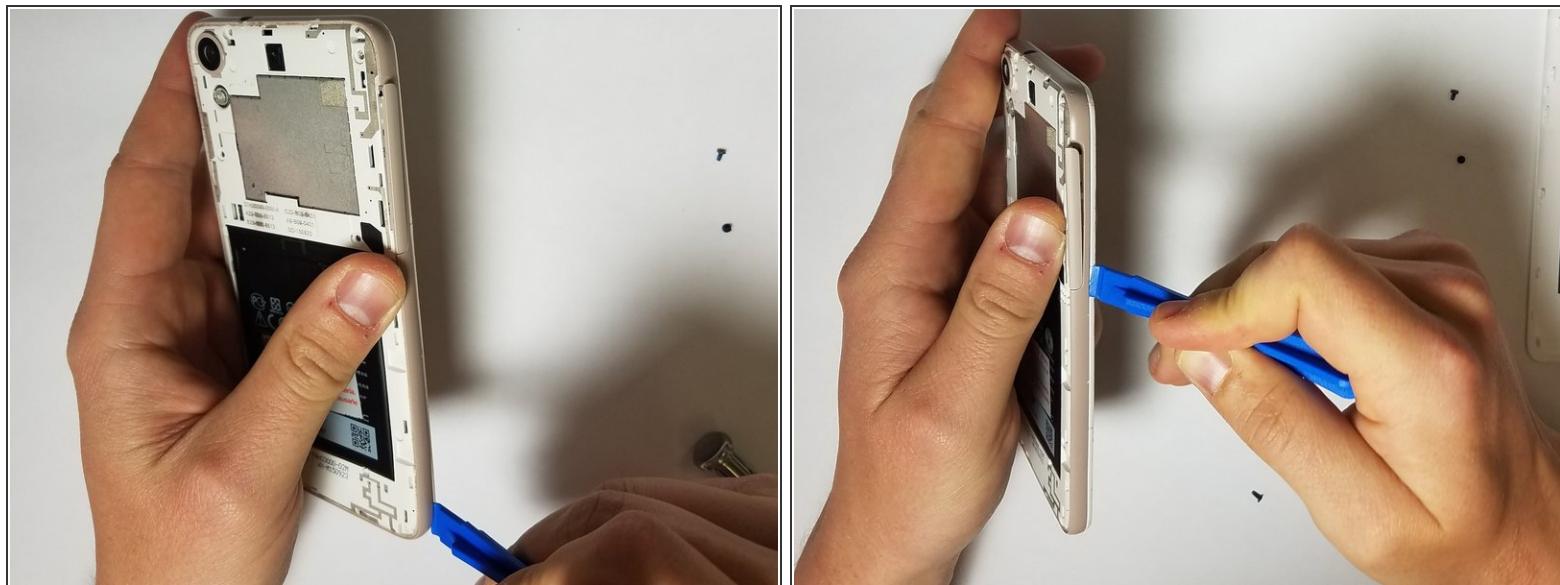

- Once the screws are removed, use the plastic opening tool to remove the remaining plastic cover.
- Start from the corners of the phone, and insert the plastic opening tool between the outer colored rim and the screen.
- This portion of the cover will be more difficult to remove than the initial back cover. Be patient and gentle around the button holes.

## Step 4 — Loud Speaker



- Use tweezers to lift the speaker straight up.
- *(i)* You can locate the loudspeaker at the base of the phone; it should have a white sticker on it.

## Step 5



- Wiggle the loudspeaker with the tweezers if it does not at first come out.
- Congratulations you have successfully removed the loudspeaker.

To reassemble your device, follow these instructions in reverse order.