



HTC Desire 826 Battery Replacement

How to replace the battery in your HTC Desire 826.

Written By: Jordan Warnix



INTRODUCTION

If you need to install a new battery in your HTC Desire 826, access it with this guide.

TOOLS:

- [T5 Torx Screwdriver](#) (1)
- [Tweezers](#) (1)
- [Magnetic Project Mat](#) (1)
- [Spudger](#) (1)


Step 1 — Battery



- Find a seam in the back of the device
- Insert the plastic spudger into the seam and pry off the back panel


(i) There will be glue, so keep prying until it comes off or you may need to heat up the edges of the device to loosen the adhesive with the [iOpener](#).

Step 2

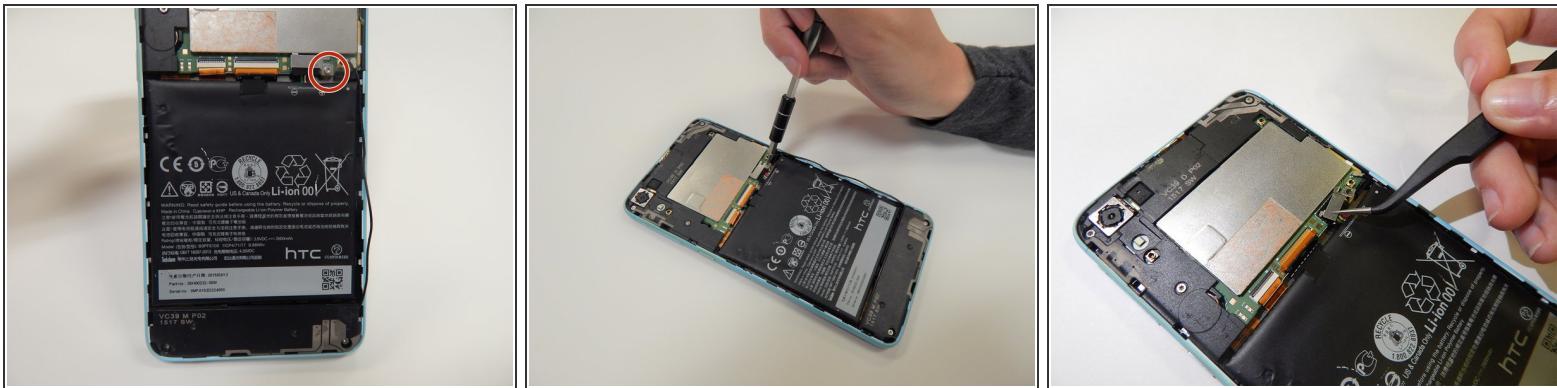


- Remove the 4.0 mm screw above the battery with the T5 screwdriver.
- Remove the metal covering with the tweezers

Step 3

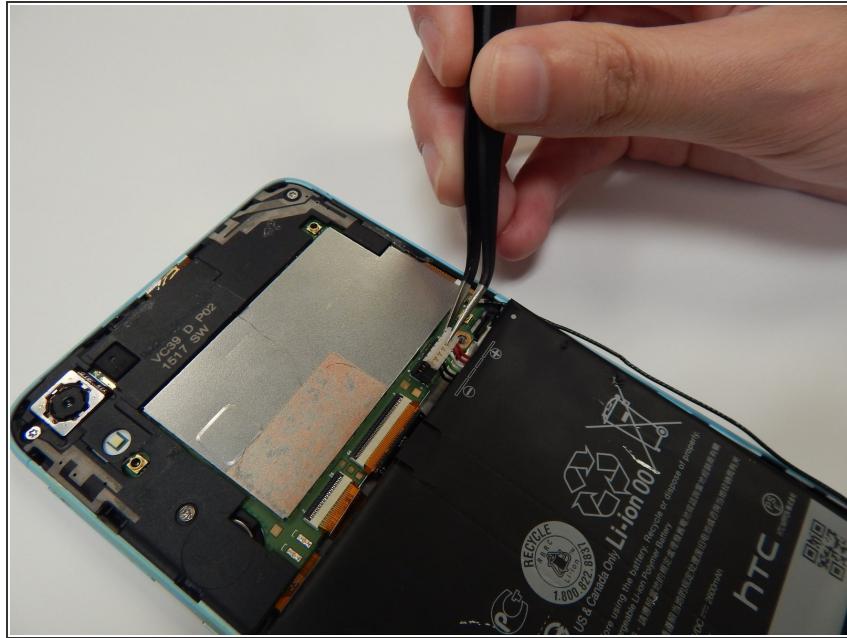

- Disconnect battery cable attached to the motherboard with the tweezers.

Step 4

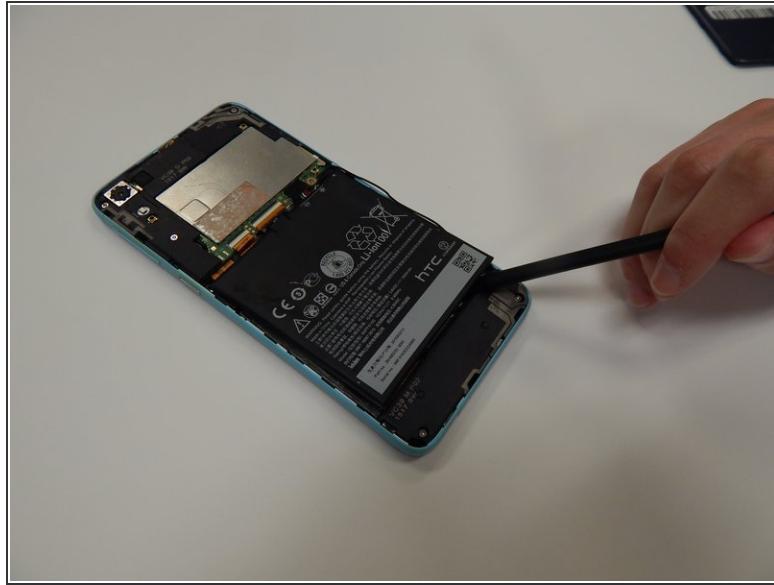

- Lift battery with plastic spudger and remove

To reassemble your device, follow these instructions in reverse order.