



HTC Desire V Button Assembly Replacement

This guide will show you how to replace the Navigation Board of the HTC Desire V smartphone.

Written By: William McCusker



INTRODUCTION

This guide will show you how to replace the Navigation Board of the HTC Desire V smartphone.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)
- [T5 Torx Screwdriver](#) (1)
- [Tweezers](#) (1)

Step 1 — Battery




- Gently pry back cover away from phone.
- ⓘ If you are having difficulty you may need to use a Spudger or plastic opener.

Step 2



- Lever the battery out from the bottom end first.
- ⚠ Do not bend or puncture the battery.

Step 3 — Midframe

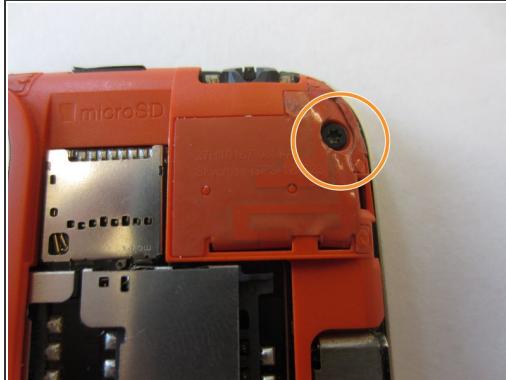

- Use a Torx T5 screwdriver to unscrew and remove five 3.0 mm screws from the rear frame.

Step 4




- Use an opening tool or a spudger to gently remove the rear frame.

Step 5 — Button Assembly




- Remove the connector on left side of the Navigation board by unplugging/ptying the orange ribbon.

Step 6

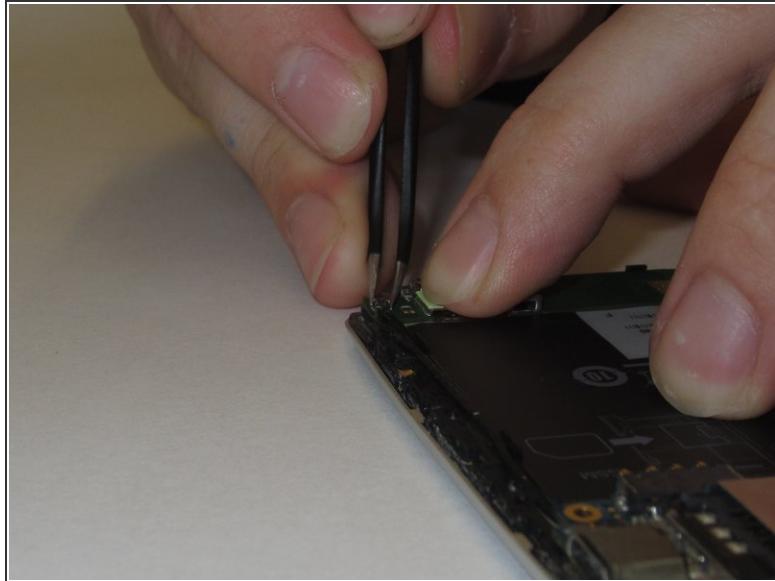

- Gently unplug and remove aerial cable (black antenna) from bottom plug.

Step 7

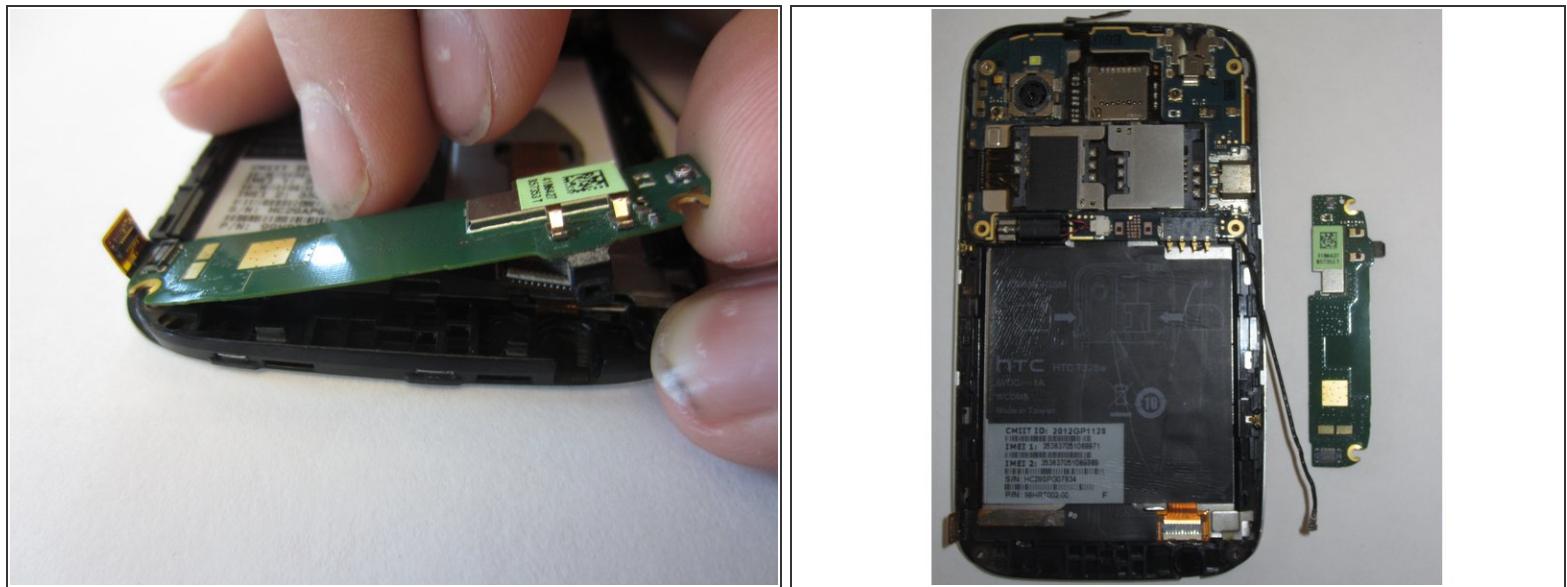

- Nav Board will be stuck down by glue.
- Pull gently from the right end of the board, being careful of its flexibility.

To reassemble your device, follow these instructions in reverse order.