



# HTC Evo 4G MicroSD card Replacement

MicroSD card replacement.

Written By: Walter Galan



## INTRODUCTION

Use this guide to remove or replace your current MicroSD card.

### TOOLS:

- [Spudger \(1\)](#)
- [Tweezers \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

## Step 1 — Rear Panel



- Gently insert an iPod opening tool between the rear panel and the inner rear frame near the headphone jack.
- Use your iPod opening tool to pry up the rear case around the perimeter of the Evo.

## Step 2



- Lift the rear panel off of the inner rear frame.

## Step 3 — Battery



- Using the tip of your finger, lift the battery from the end closest to the camera.
- Remove the battery from the rear inner frame.

## Step 4 — MicroSD card



- Use the flat end of a spudger to pry up the red MicroSD retainer attached to the inner frame.

**⚠** The retainer will move about 1 mm and stop. Do not attempt to completely remove the MicroSD card retainer.

## Step 5



- Use a pair of tweezers to carefully pull the MicroSD card out of its slot in the inner rear frame.

To reassemble your device, follow these instructions in reverse order.