




# HTC Flyer Camera Replacement

Having a faulty or broken camera? Follow this guide to replace your camera.

Written By: Joshua Mahon

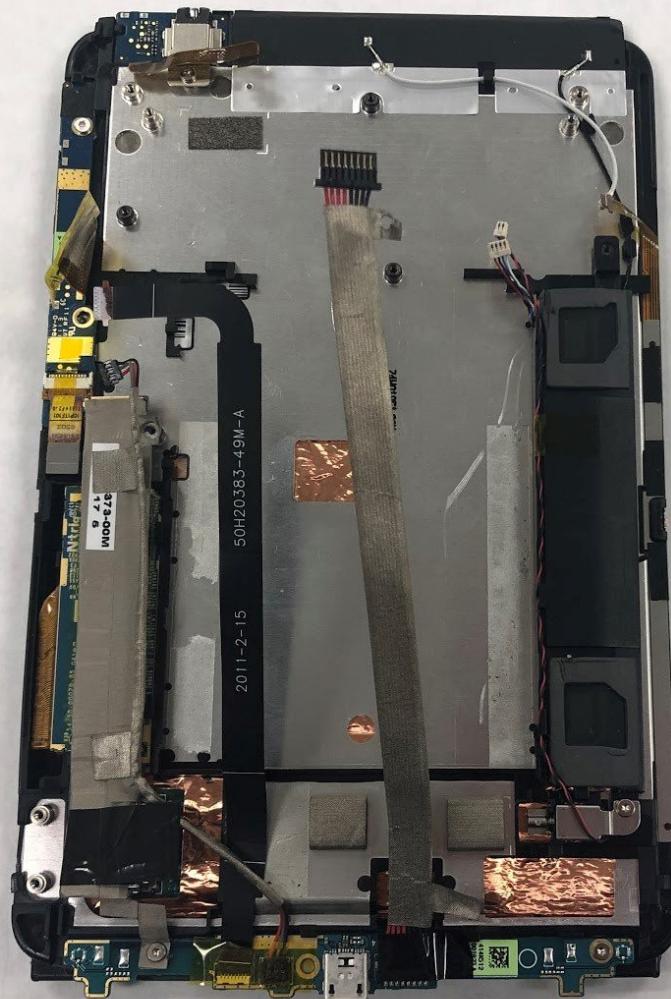

## INTRODUCTION

This repair is needed when your camera is faulty or not working properly. Be cautious of sharp metal parts in a device as they can cause bodily injury.

### **TOOLS:**

- [iFixit Opening Tools](#) (1)
- [T5 Torx Screwdriver](#) (1)

## Step 1 — Back Cover



- Apply pressure along the bottom of the white panel containing the camera and push upwards.
- *i* It may take some effort, but it will smoothly slide off.

## Step 2



- Unscrew the four of 3.5mm Torx T5 screws that run along the sides of the exposed innards.
- *i* All screws in the device will use the Torx T5 screwdriver, so keep it handy.

## Step 3





- Remove the black protective piece of plastic by sliding it upwards.
- Remove the two 3.5mm Torx #5 screws holding the protective plastic down on along the sides.

**⚠** A center 3.5mm Torx screw will be covered by "VOID" sticker.



- Either remove the sticker or jam the screwdriver into the screw, and remove the screw.
- Remove the protective panel by sliding it upwards.

## Step 4

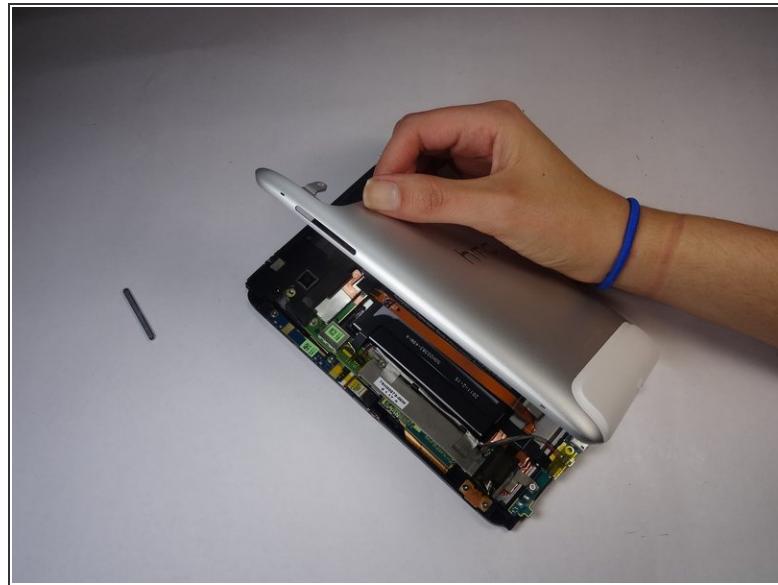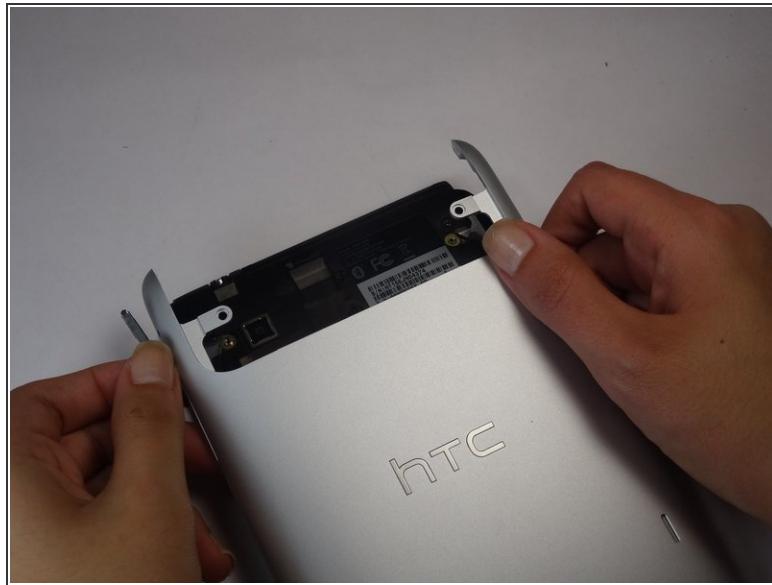




- Before removing the back cover, apply some scotch tape to the volume buttons to prevent them from falling out of the back panel.
- Use a plastic opening tool to lever up the top half of the cover.
- Lift the back panel up and remove it from the device.

## Step 5 — Battery

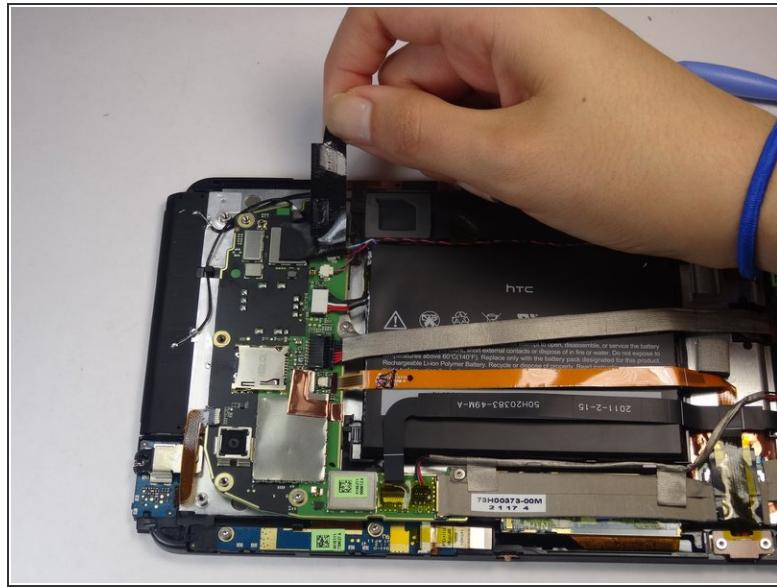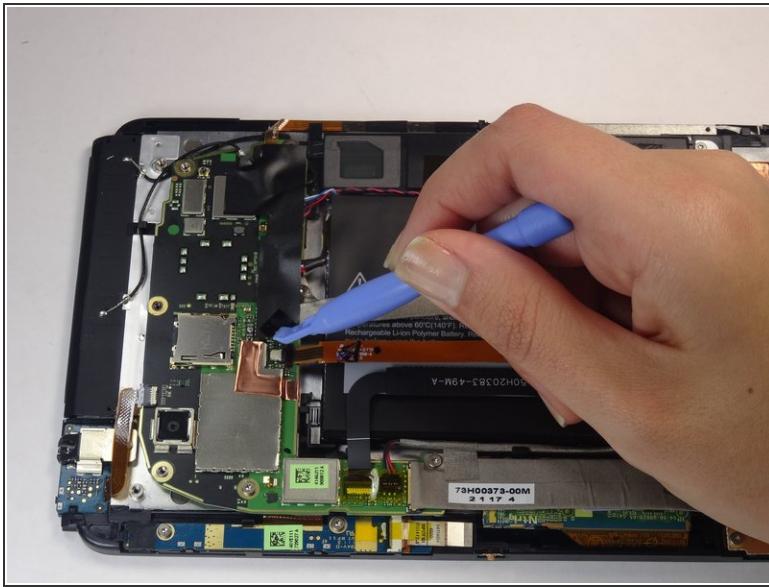

- Gently unfold the black tape along the top that covers the cable attachment points.
- *(i)* Leave the tape partially attached so that it can be easily re-attached.

## Step 6

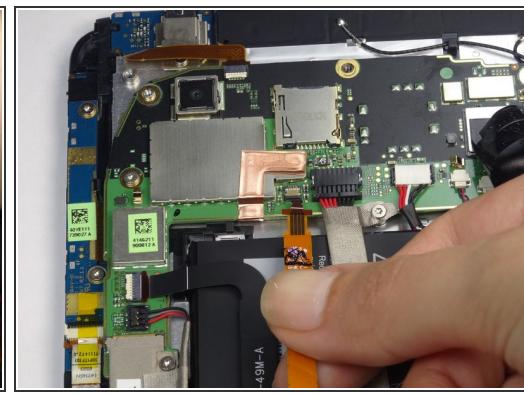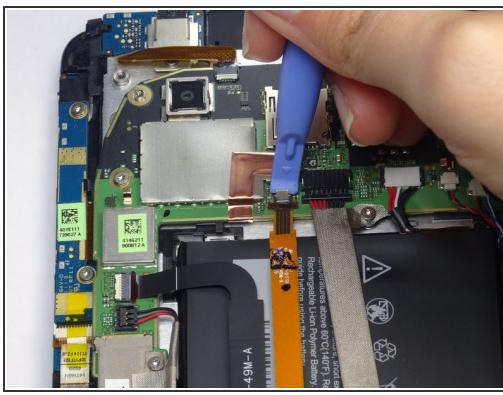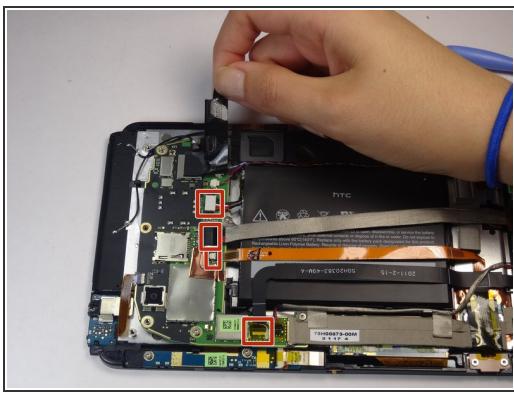


- Use the tip of a spudger as a lever to disconnect the four cable connectors.
- Gently pull out these cables after releasing the back piece.

## Step 7



- Remove the single 2.5mm Torx T5 screw holding the battery down along the top side.



## Step 8

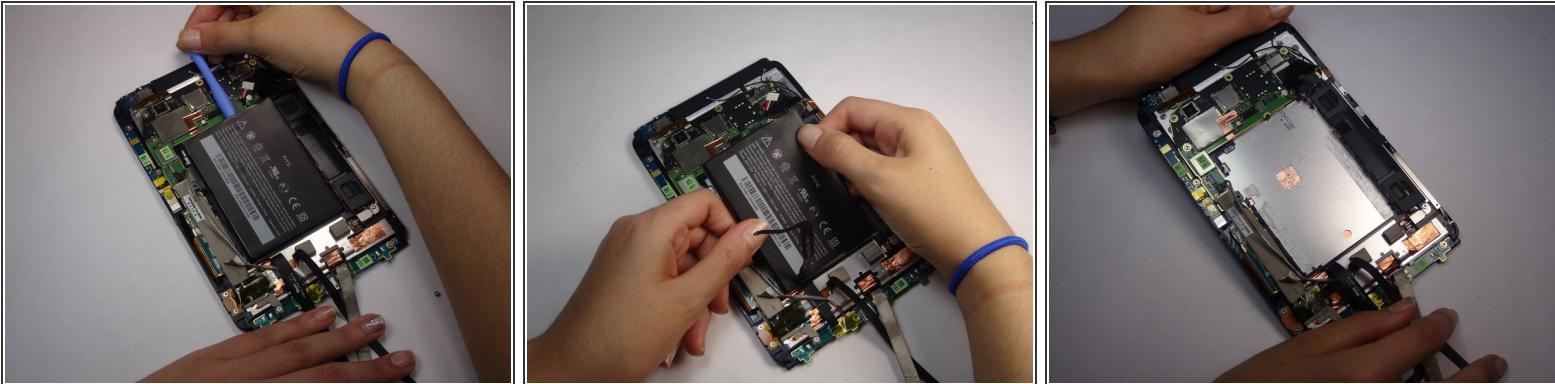

- Wedge the flat end of a spudger inbetween the battery and the front panel assembly.
- Run the flat end of a spudger along the top edge of the battery to separate it from the adhesive securing it to the front panel assembly.


**i** If you encounter any resistance from the remaining adhesive, simply use the flat end of a spudger to remove the excess adhesive.

## Step 9 — Motherboard

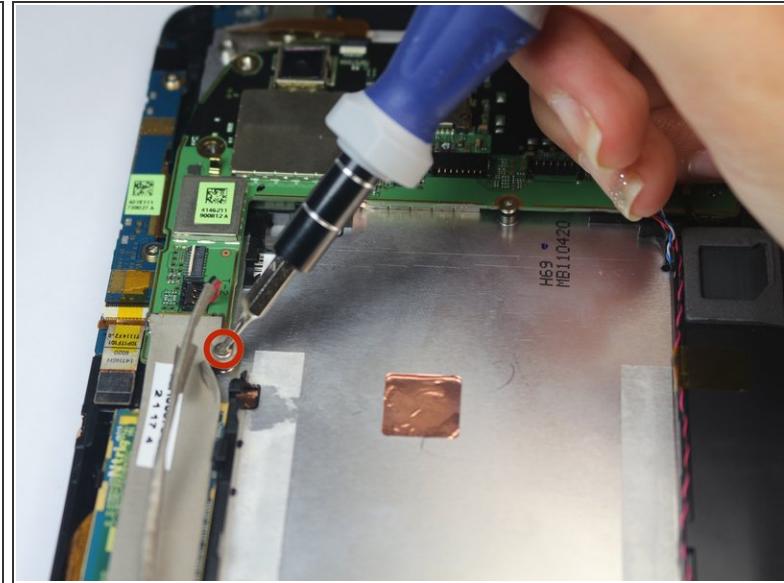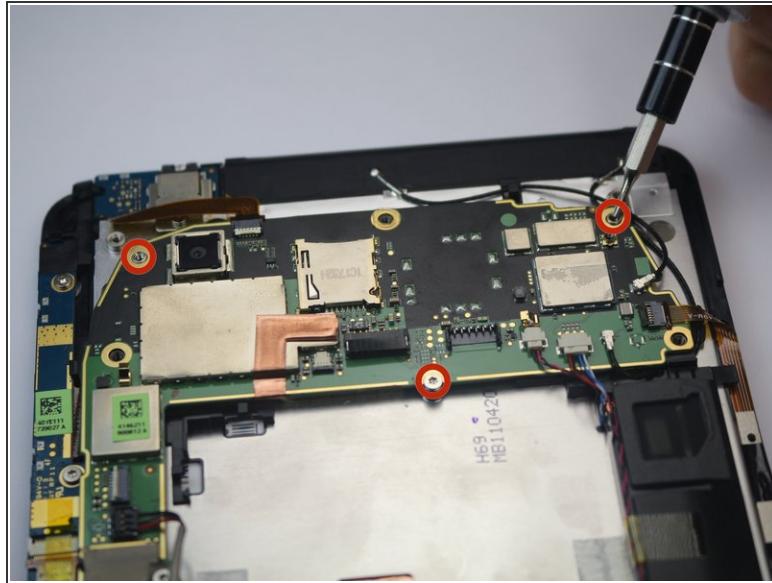


- Remove the four 2.5mm Torx #5 screws that run along the motherboard's rim.

## Step 10

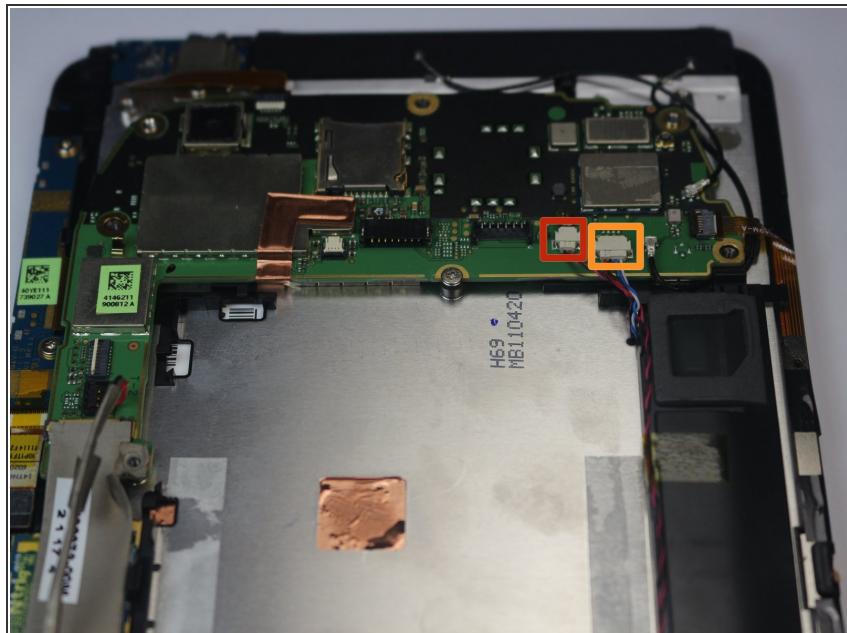


- Use a spudger to remove the two black ground wires from the right side of the motherboard.
- Remove the two multicolored speaker cables on the right side by lifting up the "lever" on the opposite side of the cable socket and then pulling out the cables.

## Step 11

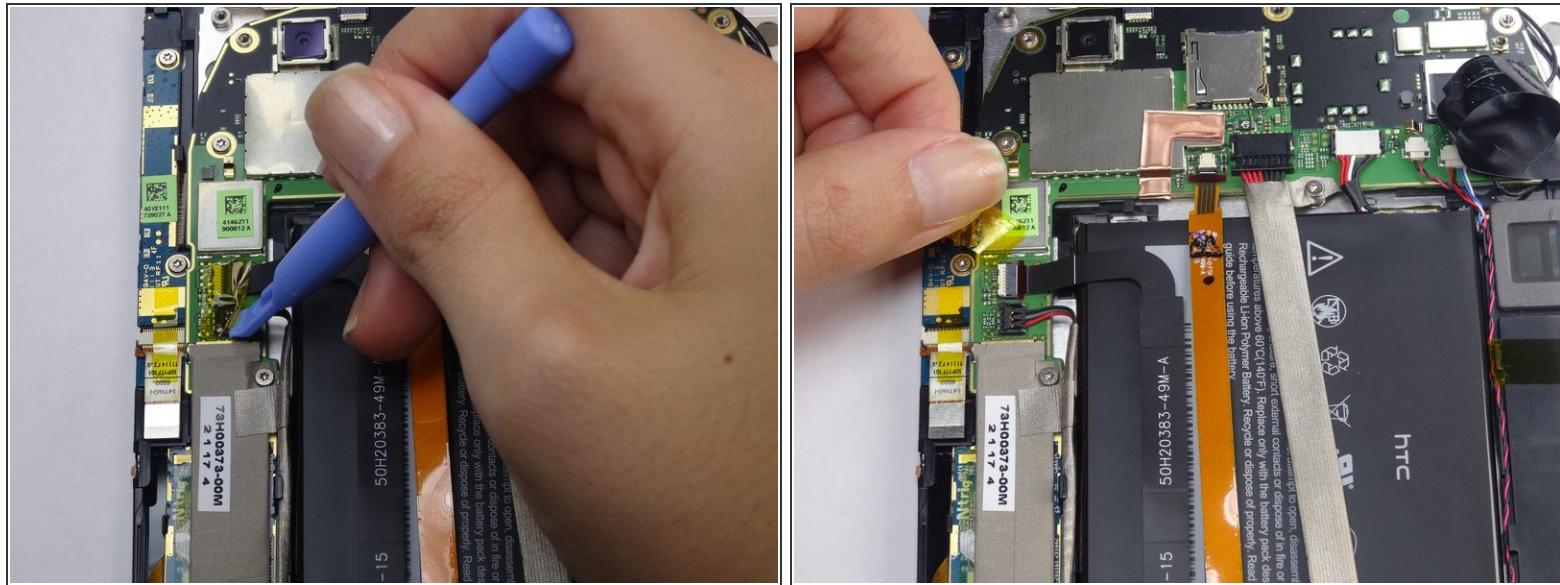


- Lift up the translucent yellow tape to expose the cable sockets.
- Use the spudger to lift up the cable's "lever".
- Pull out the cables.

## Step 12

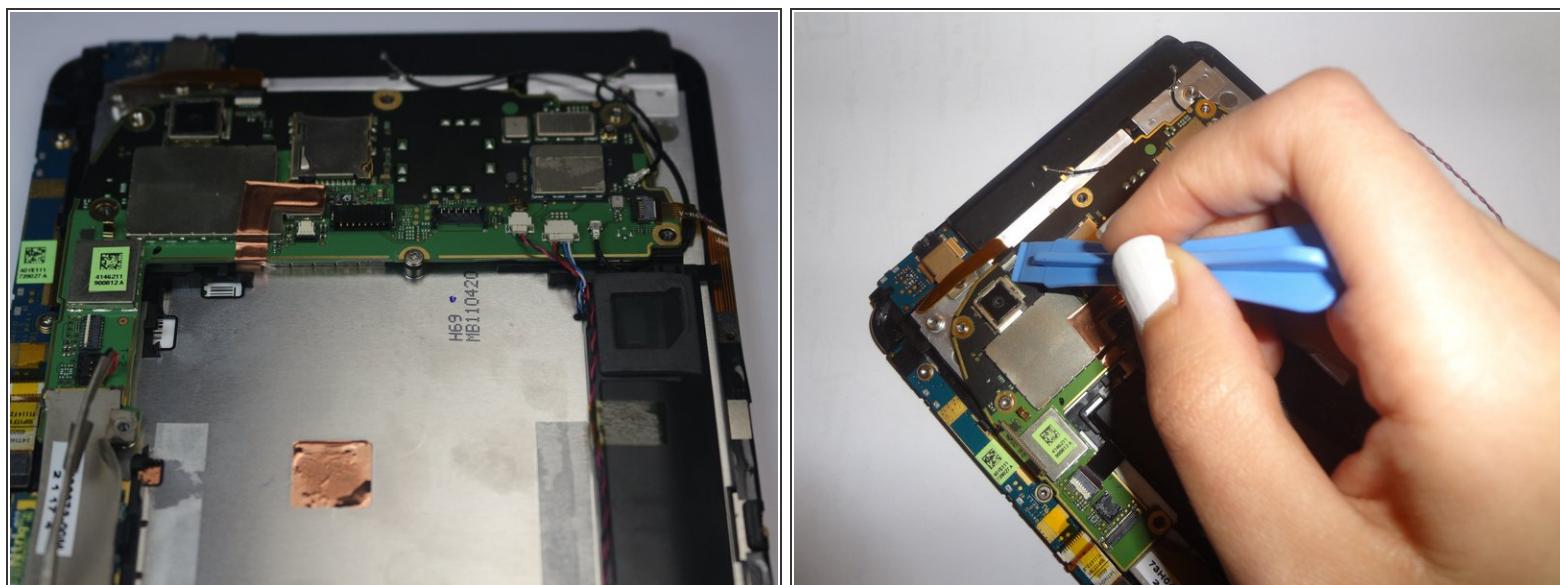



- Remove the cable along the headphone in the same way the lower cables were removed.

## Step 13

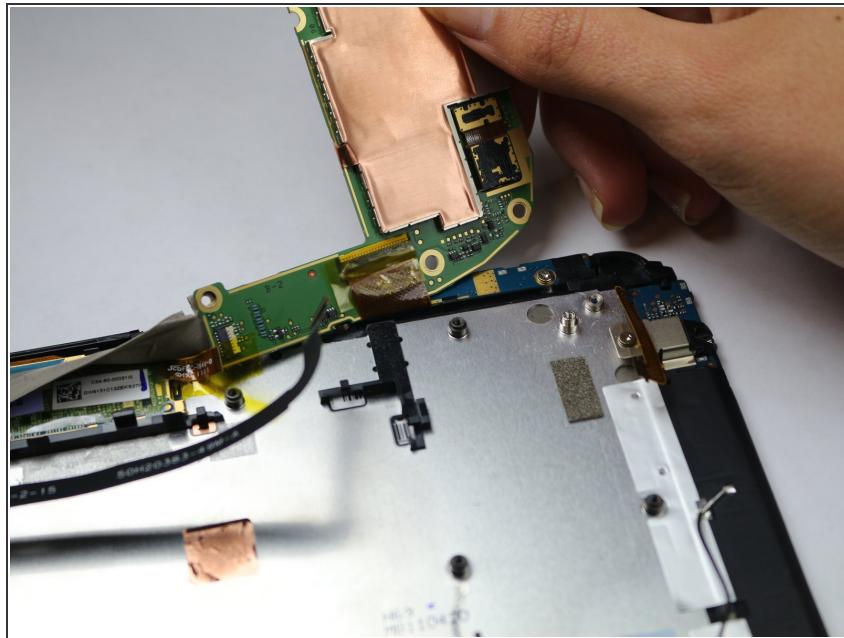


- Grip the motherboard by its edges and pull it out.

## Step 14 — Headphone Jack

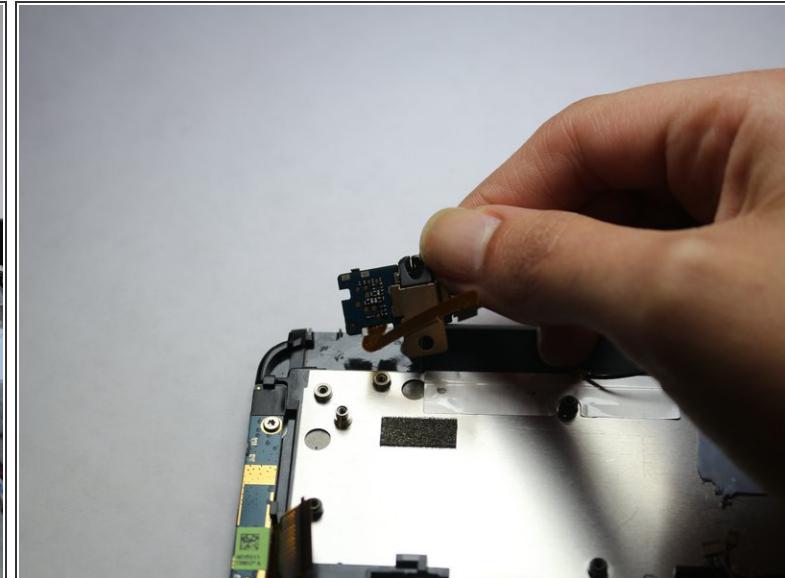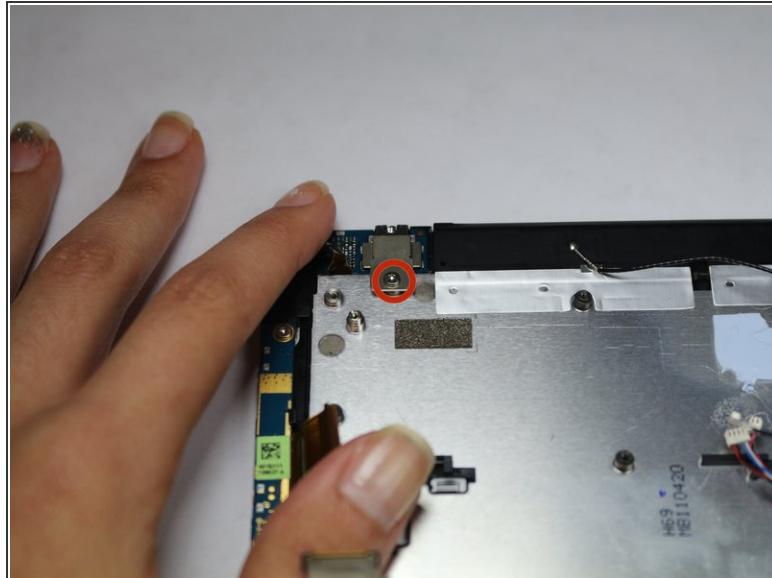

- Remove the single 2.5mm Torx T5 screw.

## Step 15 — Camera

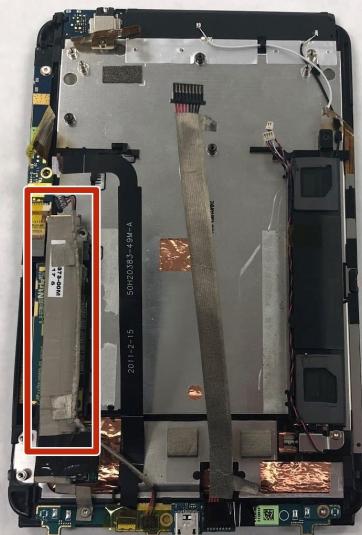

- Remove the camera flex cable.

To reassemble your device, follow these instructions in reverse order.