



HTC Fortress SIM Card Replacement

Install a new HTC Fortress SIM card.

Written By: Lucas David



INTRODUCTION

The SIM card in your HTC Fortress stores important information including your contacts and personal settings. It is designed to be removed relatively easily.

In this guide, you will learn how to replace the SIM Card in the HTC Fortress. No tools are required for this guide.

Step 1 — Battery



- Remove the back cover of the device by sliding it upward.

(i) You may need to remove the phone stylus first.

Step 2



- Remove the battery by pulling it away from the back of the phone.

Step 3 — SIM Card



- Insert the stylus into the small slot.
- Use the stylus as a lever to push the sim card out of its fitting.
- Use your finger to slide the card out the rest of the way.

To reassemble your device, follow these instructions in reverse order.