



# HTC Hero LCD Screen Replacement

Written By: Rosalind Villalvazo





## TOOLS:

- [iFixit Opening Tools](#) (1)
- [Flathead 3/32" or 2.5 mm Screwdriver](#) (1)
- [T6 Torx Screwdriver](#) (1)

## Step 1 — Back Case




- Remove the back of the phone by pushing firmly with your thumbs up towards the camera.
- Remove both the battery and the SD card (Press SD card in to release)
- Locate and remove the four Torx screws highlighted in the photo, with the phone laying face down on your work space.

## Step 2



- **Carefully** pry the inside back cover from the device using an appropriate size plastic opening tool or small flathead screwdriver.
- Insert the flat end between the back and front enclosure, working your way around the rim.

### Step 3

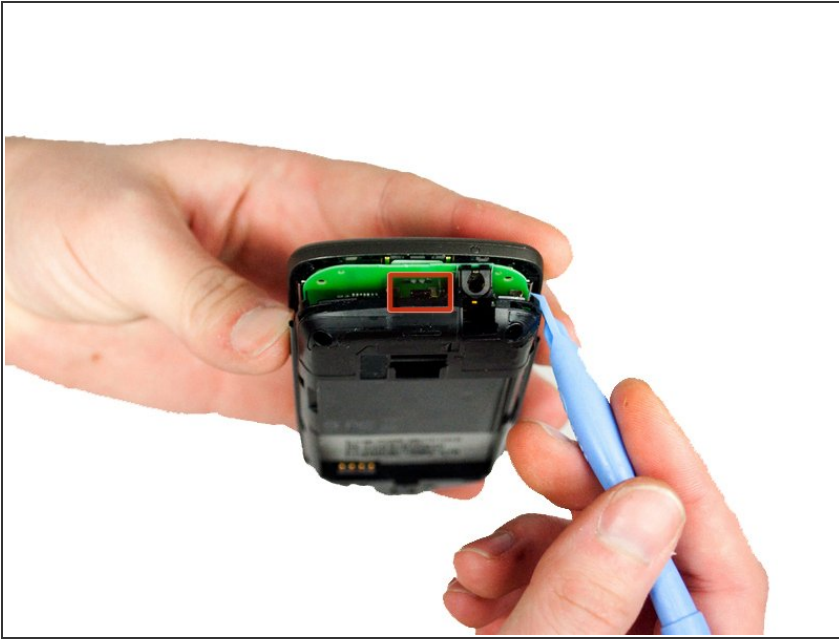

- **Gently** depress and release the small plastic tabs around the rim in the front enclosure, highlighted here.
- ⓘ It is best to start with the tab found on the top center of the phone, as it is easiest to locate.

### Step 4





- **Carefully** separate the front and back enclosures once all of the clips have been disengaged.

⚠ Be sure to not separate too quickly or you risk breaking an attached tab.



## Step 5 — Motherboard

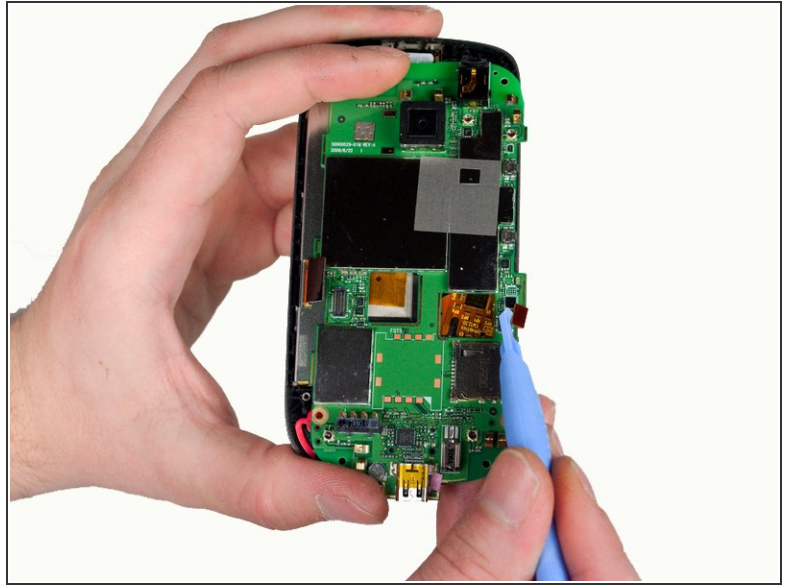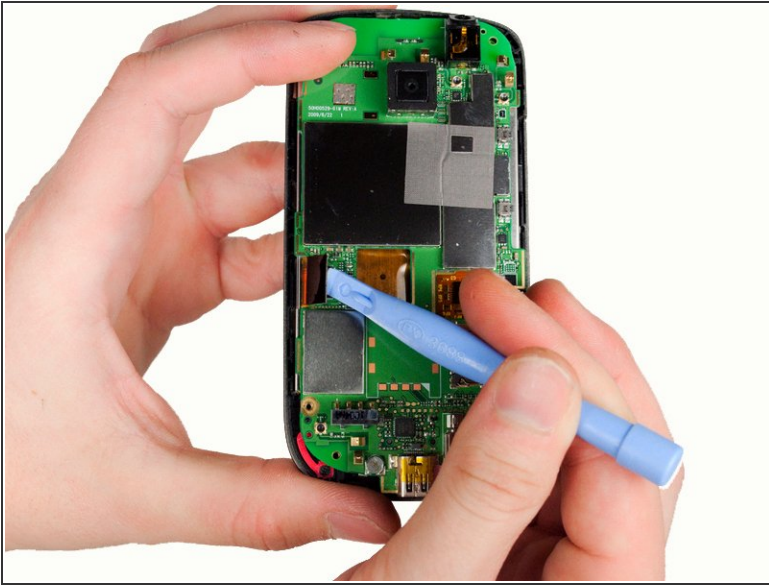


- Release the two ribbon cables using a plastic opening tool.
- **Gently pry up** the pop connectors used to attach the ribbon cables to the motherboard.

## Step 6




- Remove the two screws located at the bottom left and right of the motherboard using a small Phillips screwdriver.

## Step 7

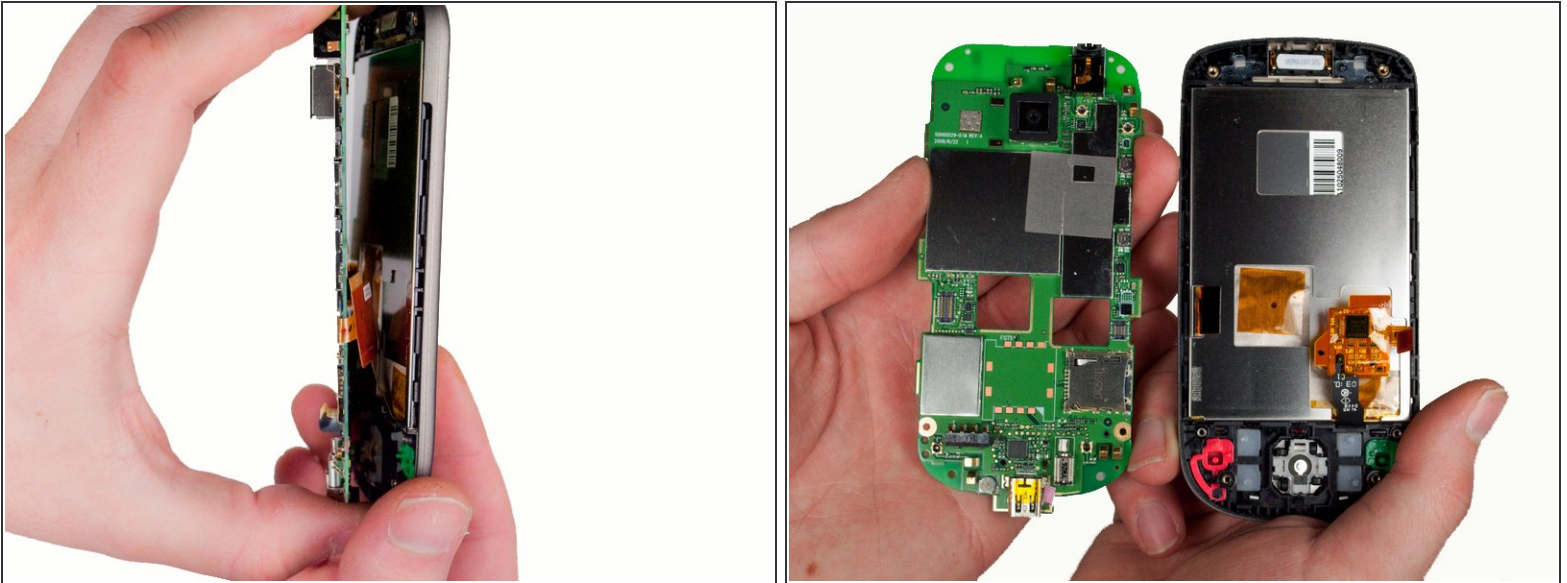

- **Gently lift** the motherboard out of the front enclosure once the screws are removed.


## Step 8 — LCD Screen

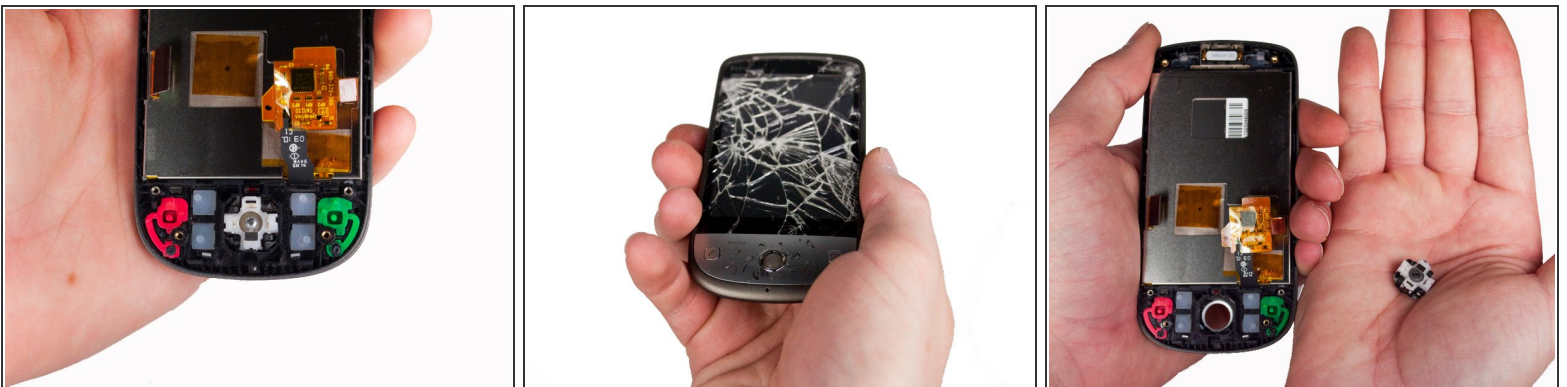

- At this point it is a good idea to remove the track ball and enclosure to prevent accidental loss.
- To remove the trackball, turn the phone over into your cupped hand and the trackball will fall out.



## Step 9

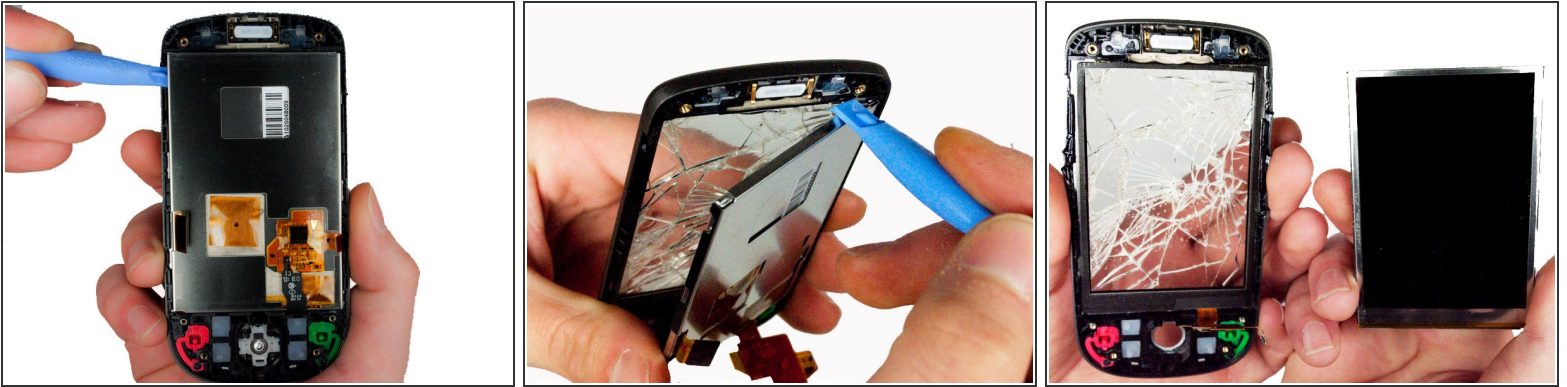

- Using an plastic opening tool, **gently pry out** the LCD screen from the left side of the enclosure as illustrated.
- ⓘ You may need to **gently wiggle** the screen out or continue using the plastic opening tool until released.

To reassemble your device, follow these instructions in reverse order.