


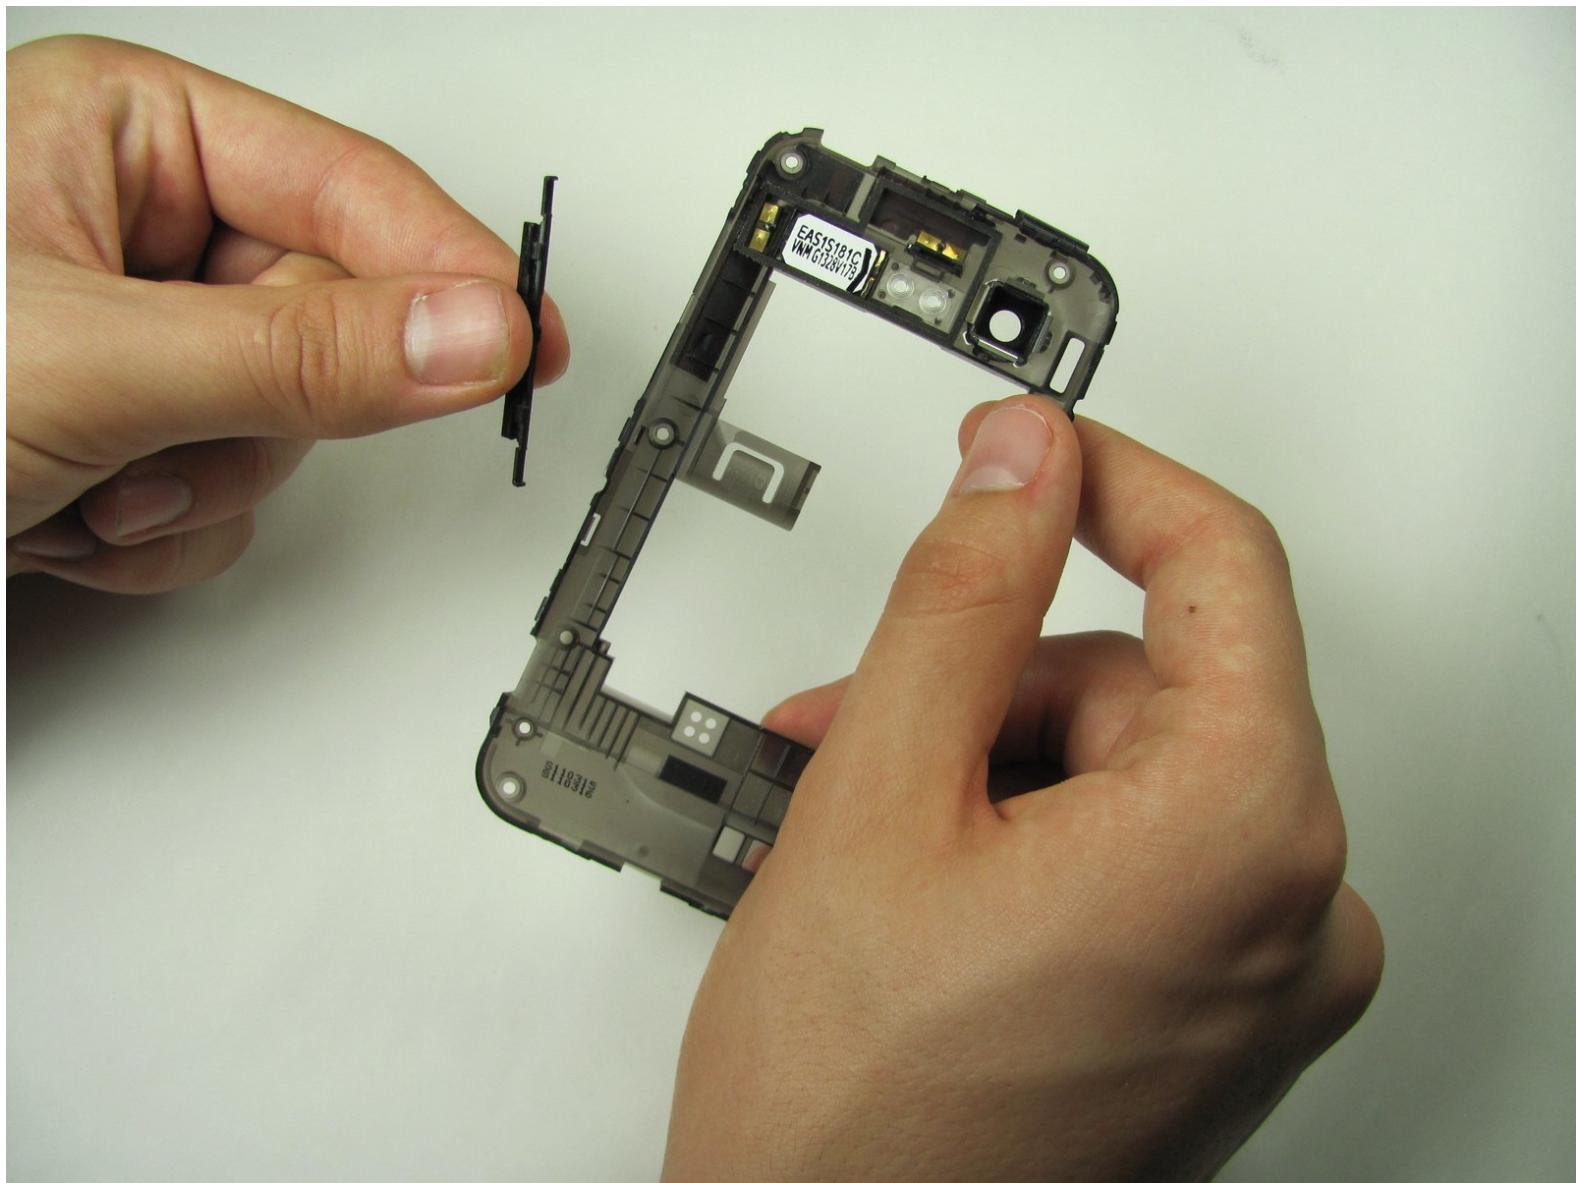

# HTC Incredible 2 Volume Button Replacement

Replacing the volume controls for the HTC Incredible 2.

Written By: Robert Trujillo



## INTRODUCTION

Having trouble adjusting the phone's volume? This guide will walk you through the steps of how to access and replace the audio controls.

### TOOLS:

- [T5 Torx Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

## Step 1 — Disassembling HTC Incredible 2 Back Panel



- Press your thumbnail into the slot between the rear panel and the front casing located on the bottom of the phone. Use a penny or dime if you have trouble using your thumbnail.
- With a moderate amount of force, pry the rear panel up and away from the phone. You may need to slide your thumbnail up the crack to separate the rear panel from the front casing.

*(i)* This can take a little bit of effort. Don't be discouraged if you can't get it right away.

## Step 2



- Remove the rear panel from the phone.


## Step 3 — Battery



- Press your fingernail into the slot between the battery and the rear inner frame, located between the battery and LED lights.

**i** Use a penny or dime if you can't use your fingernail.

## Step 4

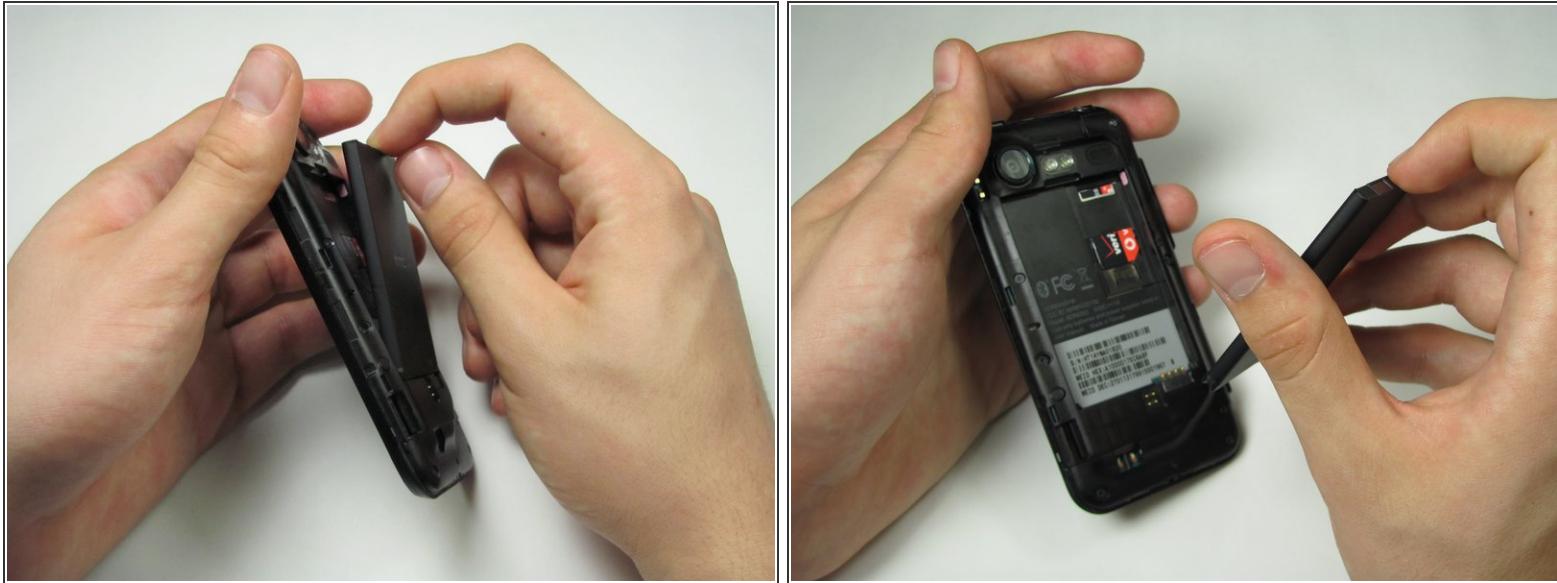


- Gently lever the battery up and away from the lights.
- Lift the top of the battery up and remove the battery from the rear inner frame.

## Step 5 — Mid Panel



- Remove the seven 1.42 mm Torx T5 screws

## Step 6

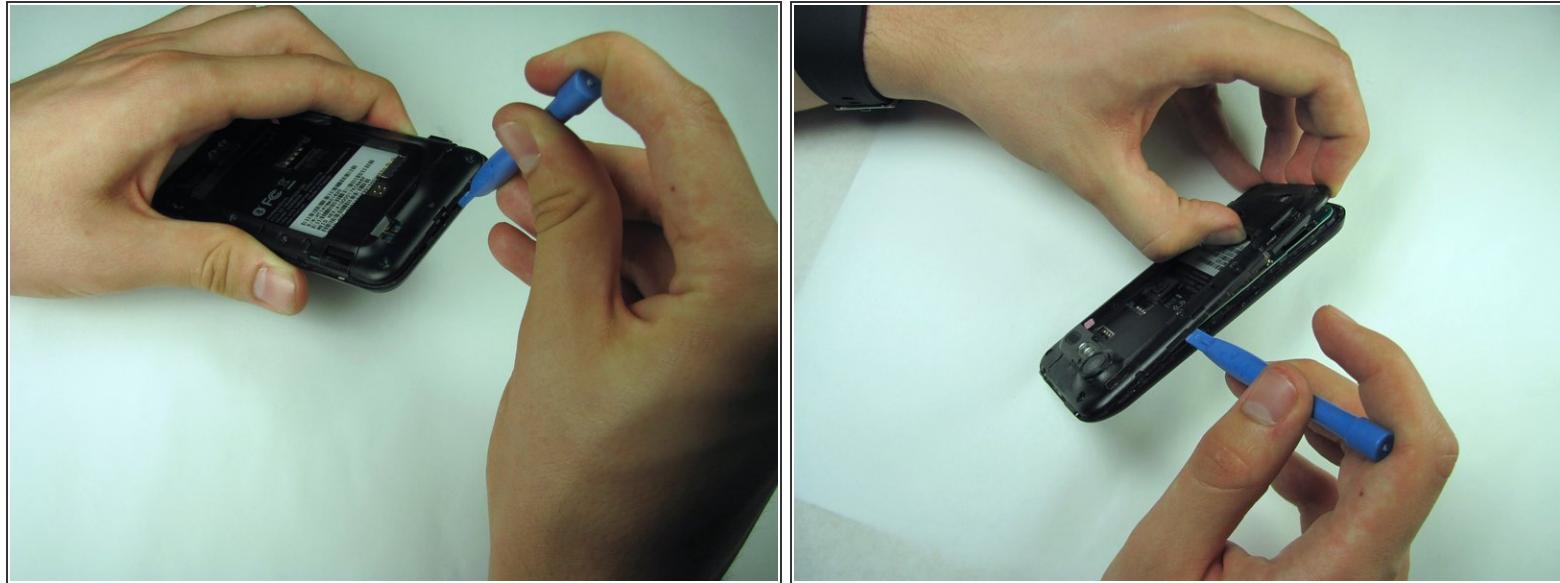

- Use a plastic opening tool to run along the phone's side and lever mid panel upward.


⚠ Apply minimal pressure as the mid panel is very delicate.

## Step 7



- Gently grasp and carefully lift mid panel up and away from the device with your fingers.

## Step 8 — Volume Button

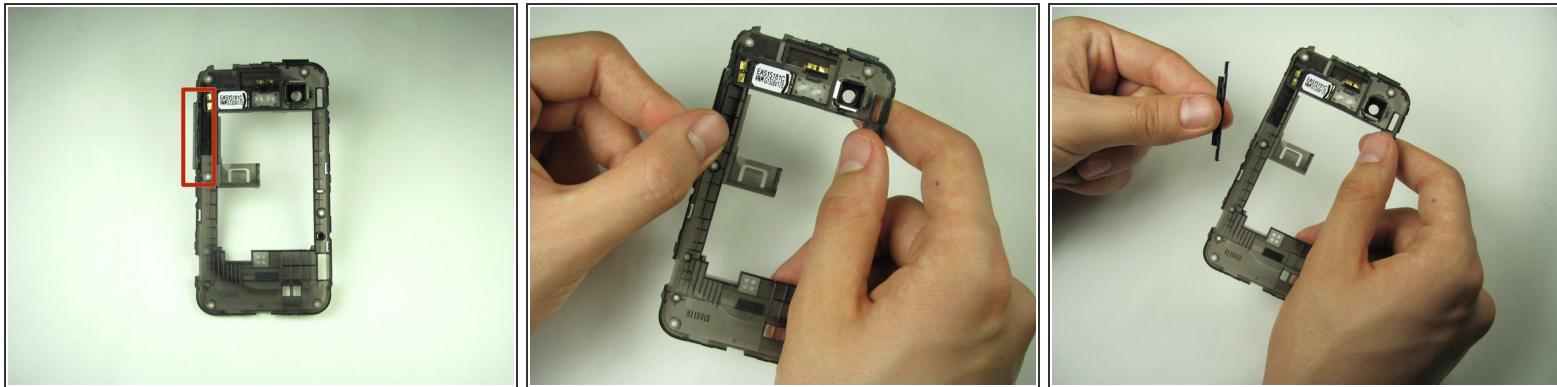

- Firmly grasp the volume button from the mid panel on the clip side
- Gently lift the button upwards and remove it

To reassemble your device, follow these instructions in reverse order.