



HTC Inspire 4G Speaker Replacement

This page shows that how to replace the speaker.

Written By: MOHANAD



 **TOOLS:**


- [Spudger \(1\)](#)
- [Metal Spudger \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Tweezers \(1\)](#)

Step 1 — Speaker



- Use a plastic opening tool to take off the rear panel.

Step 2

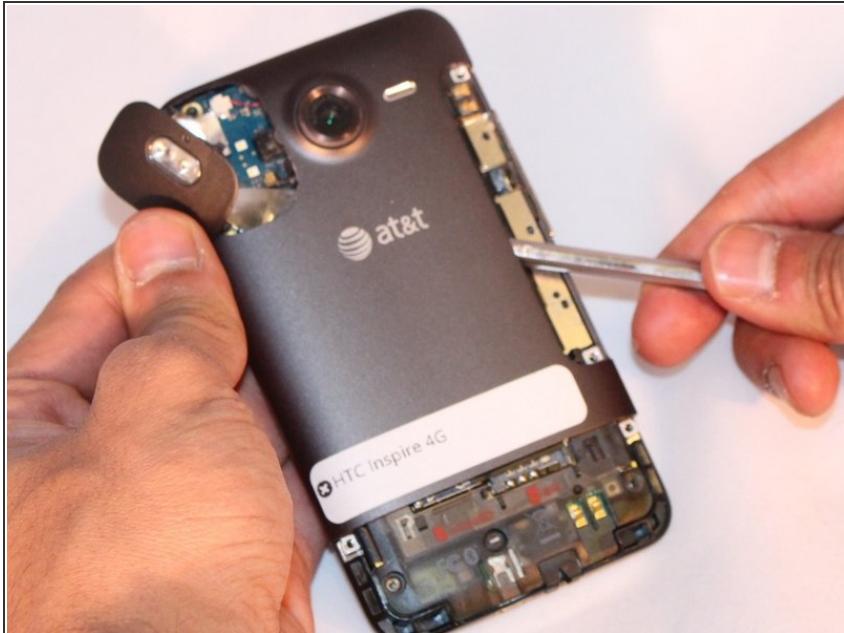

- Use a curved metal spudger to remove the rear panel.

i Always try using a nylon spudger or plastic opening tool first; metal spudgers are not ESD-safe and can potentially damage your device.

Step 3

- Push up to remove the back cover.



Step 4



- Remove the earpiece speaker connector using the tweezers.
- Pry out the speaker using a nylon spudger.

To reassemble your device, follow these instructions in reverse order.