



HTC Maple 100 Battery Replacement

Remove HTC Maple 100 battery

Written By: Andrew Van Meter



INTRODUCTION

This will demonstrate how to remove the battery in your HTC Maple 100 phone.

Step 1 — Battery



- First remove the back cover of your phone to expose the battery.

Step 2



- Turn the phone over.
- Push forward on the battery with your thumb.

Step 3



- Take the battery out by lifting it upwards.
- ☒ When reassembling, make sure that the battery contacts match up.

To reassemble your device, follow these instructions in reverse order.