



# HTC One Mini 2 Back Plate Replacement

Use this guide to replace the back aluminum housing, commonly referred to as the back plate.

Written By: Caleb Kelsay




## INTRODUCTION

Use this guide to help open up the HTC One Mini 2 and replace the back plate. It is helpful if you want to replace the back plate for cosmetic reasons.

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [iOpener](#) (1)
- [Paper Clip](#) (1)
- [Magnetic Project Mat](#) (1)
- [Metal Spudger](#) (1)
- [64 Bit Driver Kit](#) (1)

## Step 1 — Sim and MicroSD Card

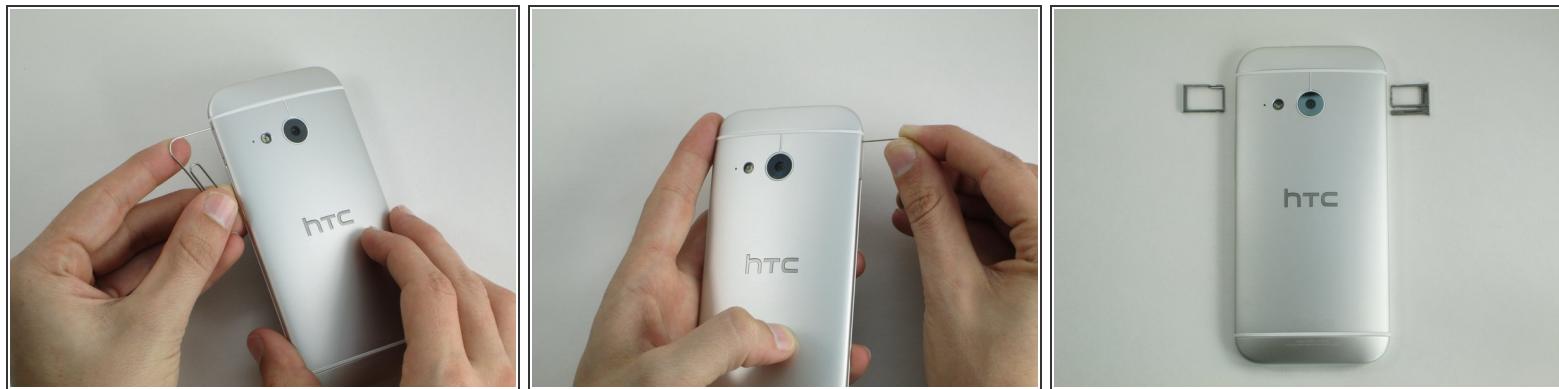

- Insert the end of a paper clip into the holes on each side of the phone to eject the SIM card and Micro SD card.
- Set the cardholders aside.

## Step 2



- Heat up the top grey speaker plate with the iFixit iOpener for two minutes.

## Step 3 — Front Plate



- Use a metal spudger to pry up the left edge of the upper grey front plate.
- Place the spudger between the inside white plastic edge and the grey plate. Do not pry between the two white plastic frames.
-  Don't pry against the glass. Pry against only the left side as there is a delicate antenna under the plate.
- Use the narrow plastic pry tool to carefully separate the black ribbon antenna from the grey plate.

## Step 4



- Remove the 2mm screw with a T5 torx screwdriver head from the iFixit tool kit.

## Step 5



- Use the plastic pry tool to pry around the edge of the phone.
- ⚠️ Pry carefully around the card slots.
- Slowly pull up from the right side of the screen like opening a book.
- ⚠️ The plastic piece for the power button may fall out. Set it aside for reassembly.
- Use the plastic spudger to peel the foam adhesive around the camera away from the back plate.

To reassemble your device, follow these instructions in reverse order.