




# HTC One X Plus Top Speaker Replacement

This guide will show you how to replace the top speaker on your HTC one X plus.

Written By: Jason Melo

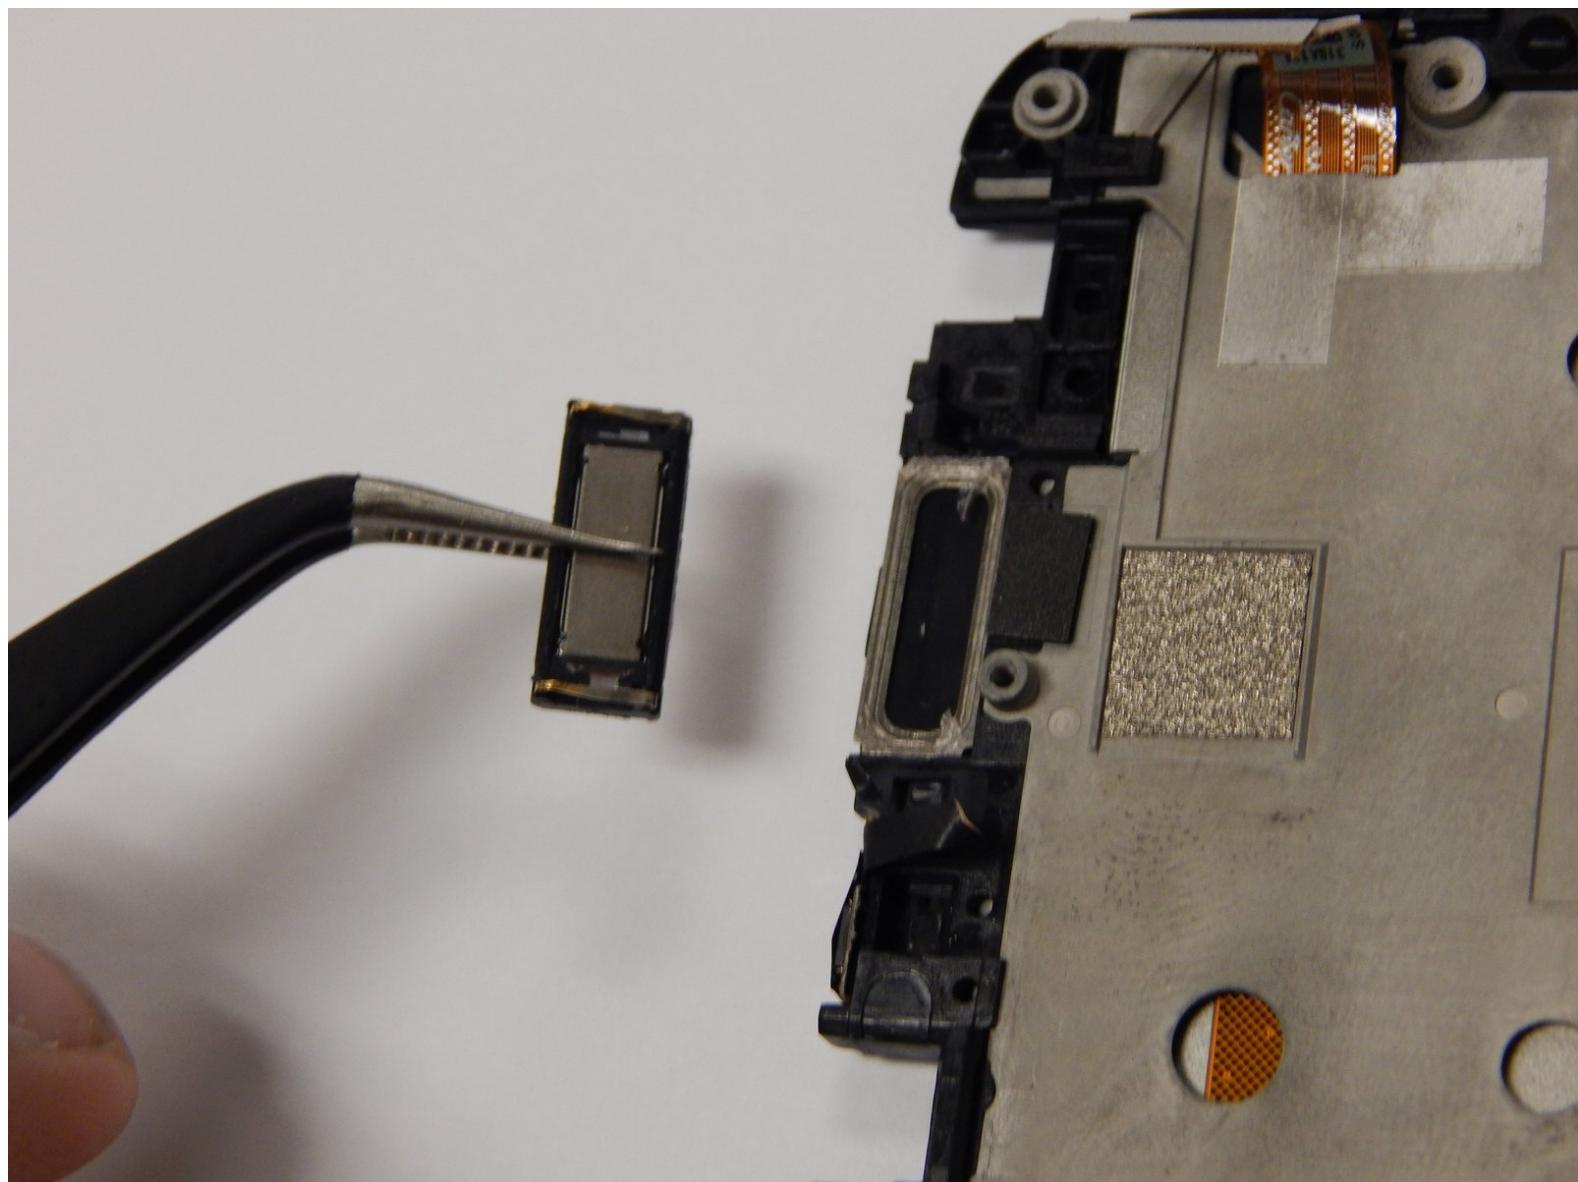

## INTRODUCTION

If your top speaker doesn't work then replacement may be the best option.

### TOOLS:

- [Tweezers \(1\)](#)
- [Suction Handle \(1\)](#)
- [Phillips #000 Screwdriver \(1\)](#)
- [Spudger \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

## Step 1 — Top Speaker



- Power off your device.
- Insert a pin, paper clip, or very small piece of metal into the hole next to the micro sim card holder to remove it.


*(i)* The Sim Card Slot is located on the top edge of the device.

## Step 2



- Using plastic opening tools, pry open the bottom of the device first.
- You will hear clicking sounds as the sides of the device detach from the screen.
- Once both sides are detached use the suction cup tool to remove the screen completely from the black encasing.


## Step 3

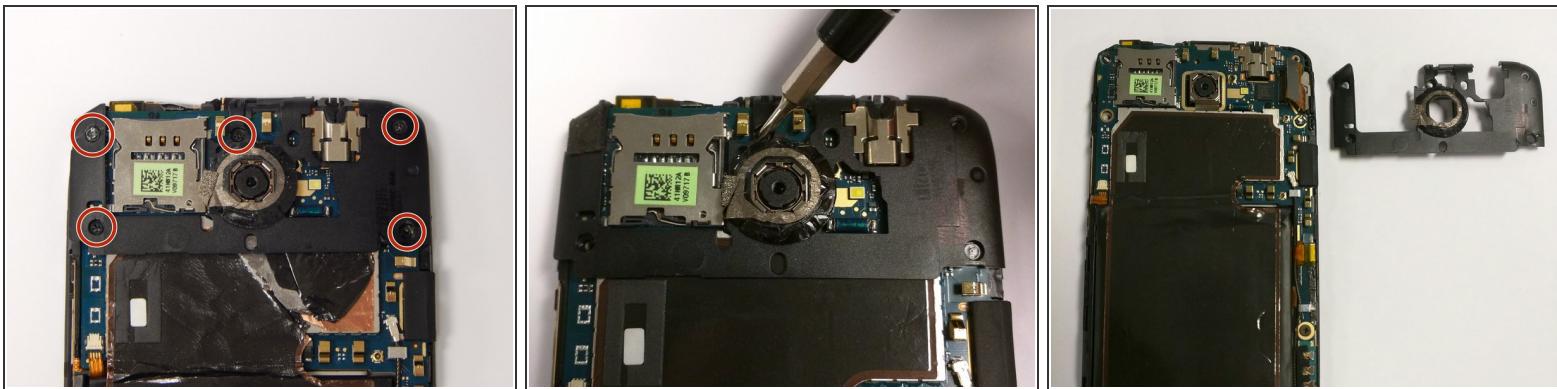

- Remove the five 2.4mm screws using a Philips head screw driver and then remove the plastic cover.


 Once you have disassembled your device the warranty will no longer be valid.

## Step 4

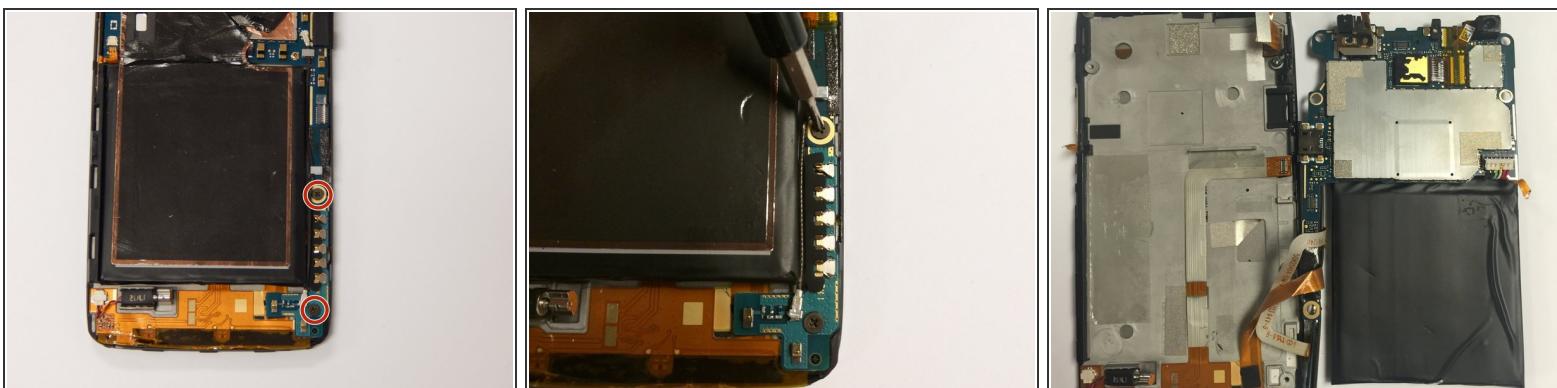


- Use the J000 Philips screw driver head to remove the screws.
  - Two 3.4mm Philips head screws
- Remove the PCB board and antenna.

## Step 5

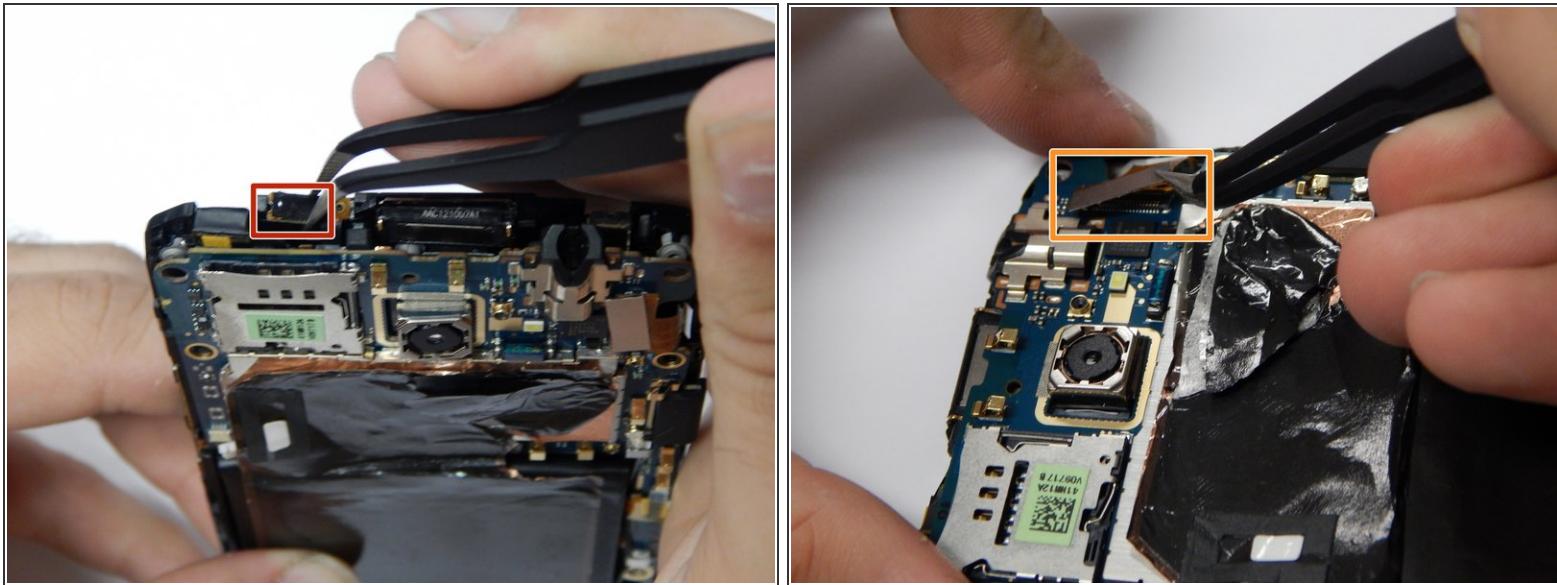


- Use tweezers to disconnect the power button flex cable.
- Disconnect the touch screen flex cable.

## Step 6

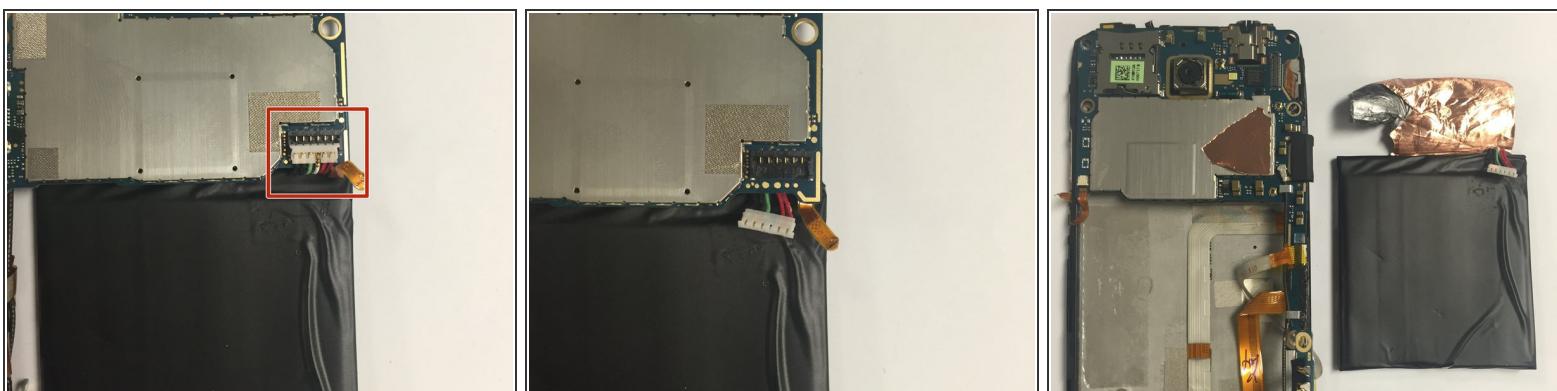

- Disconnect the battery from the logic board.
  - Six pin connector
- Remove the battery by pulling upwards.

## Step 7

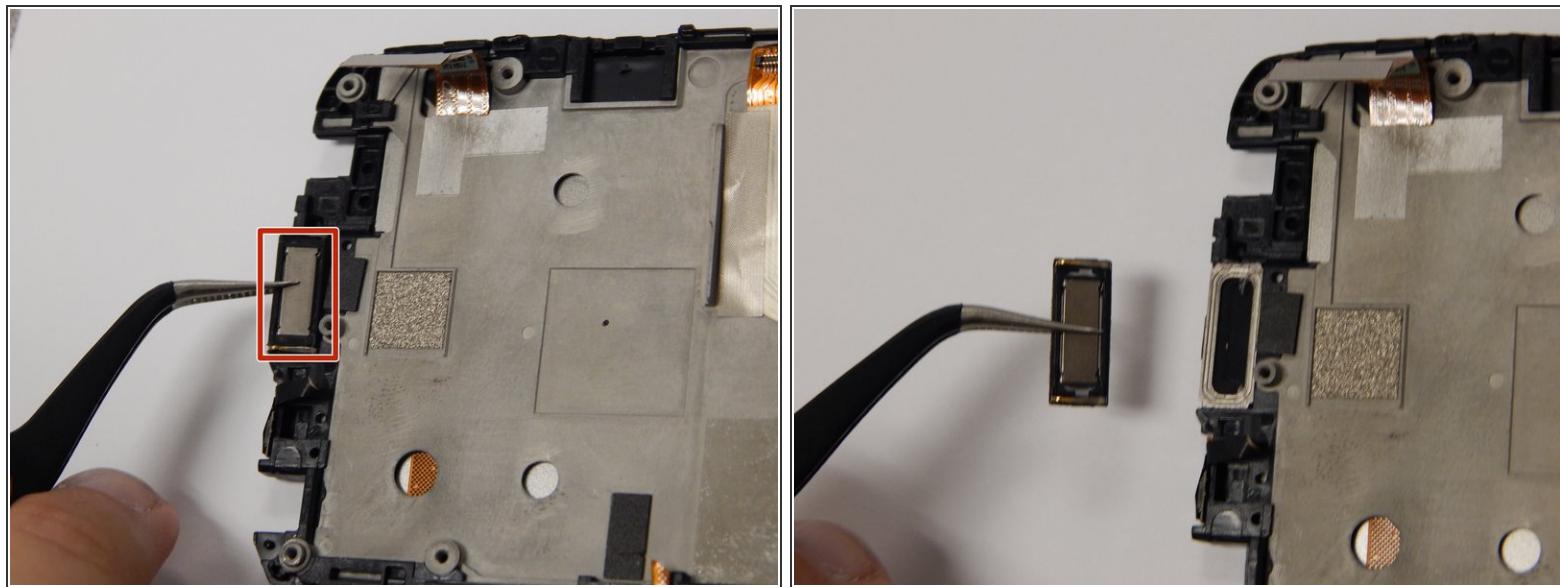

- Carefully remove the top speaker from your phone.

To reassemble your device, follow these instructions in reverse order.