



HTC Rezound SD Card Replacement

This guide will explain step by step how to remove and replace the devices SD card.

Written By: Bridgette Mellon



 **TOOLS:**

- [iFixit Opening Tools \(1\)](#)

 **PARTS:**


- [HTC Rezound SD Card \(1\)](#)

Step 1 — Battery



- Use a plastic opening tool or your fingers to get into the groove between the cover and case. Remove the back covering so that the red battery is visible.

Step 2

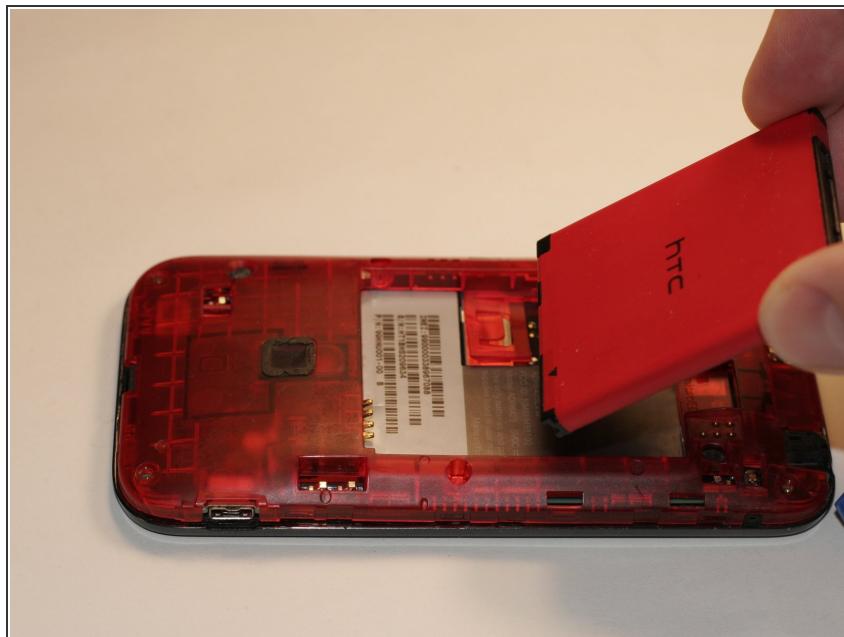

- Remove the red battery to replace.

Step 3 — SD Card



- Take out SD card from slot above battery alcove.
- Place new SD card in same slot.

To reassemble your device, follow these instructions in reverse order.