



# HTC Rhyme Speaker Replacement

This guide breaks down the phone in order to remove and replace the speaker.

Written By: Kelsey Harris



 **TOOLS:**

- [Spudger \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Phillips #0 Screwdriver \(1\)](#)

## Step 1 — Speaker




- Slide the bottom back casing off, pulling down.

## Step 2




- Using the plastic tool, pry underneath the top plastic cover.

## Step 3

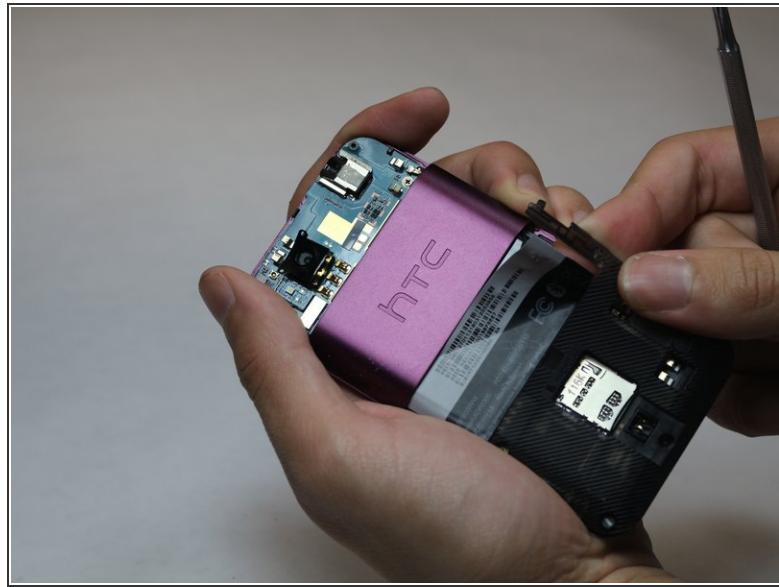


- Using a metal spudger, pry up the plastic piece covering the motherboard, and remove the sticker.

## Step 4 — Removing the Back Plastic Motherboard Cover

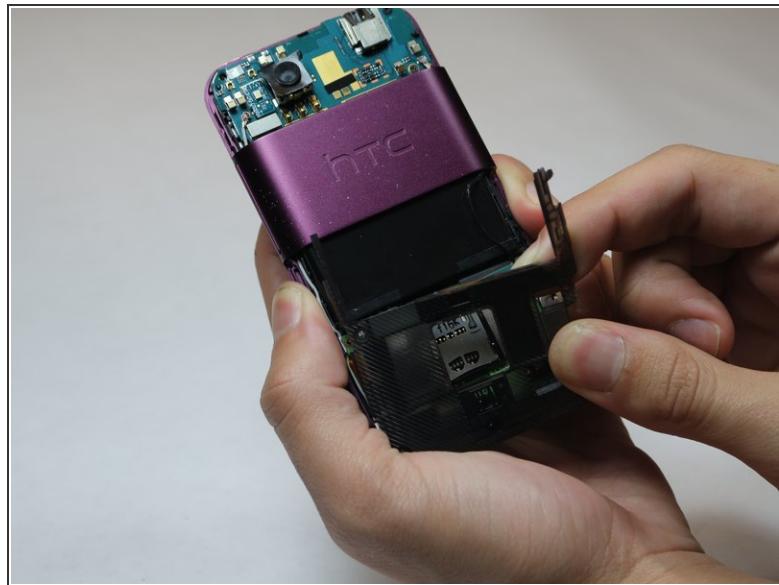

- Use a Philip #0 screwdriver to remove the four screws of the plastic covering the motherboard.

## Step 5

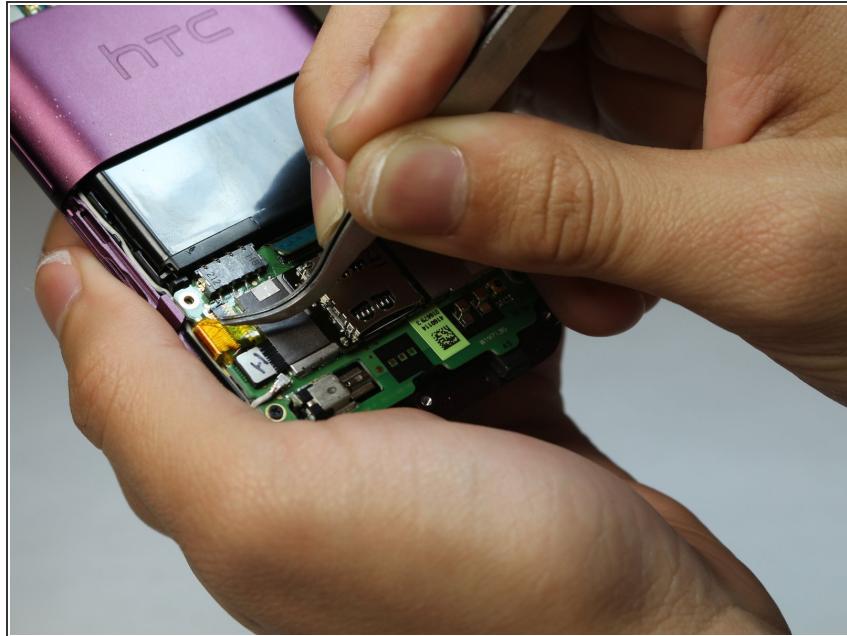



- Using tweezers, remove the yellow ribbon by gently pulling on it.

## Step 6




- Using the plastic tweezers, gently lift the blue flaps up.

## Step 7

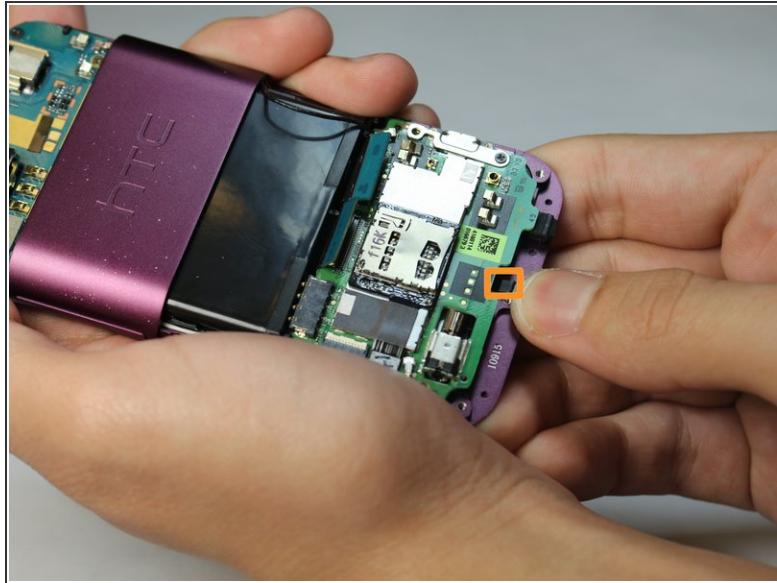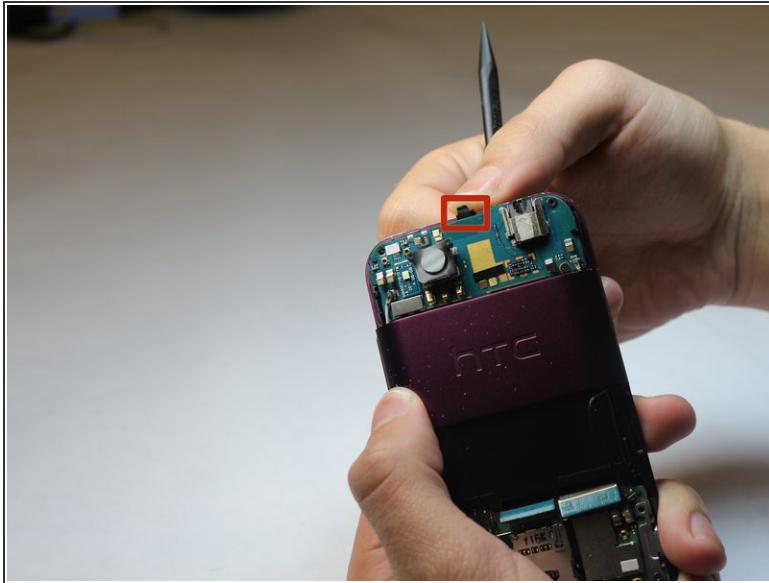


- Using your thumb, push the flap up on the top.
- Using your thumb, push the flap up on the bottom of the motherboard.

## Step 8 — Unscrewing the Motherboard

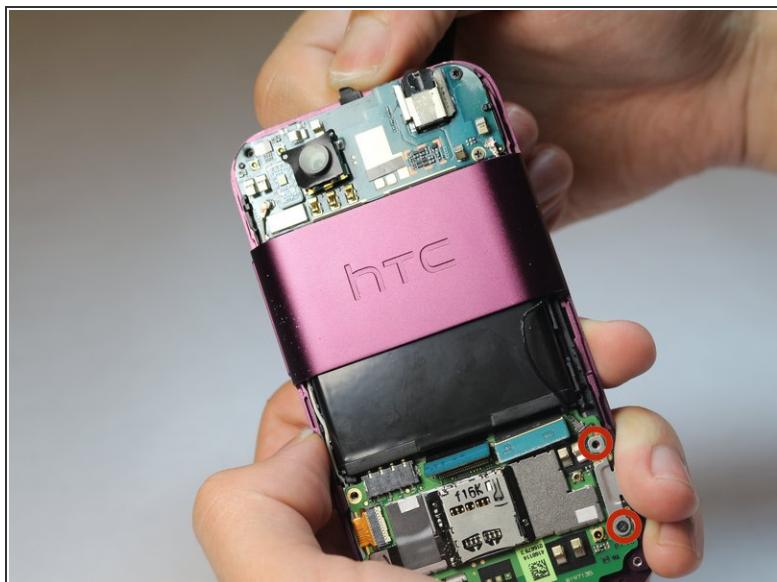

- Using a Phillips #00 screwdriver, unscrew the four screws in each corner of the motherboard.

## Step 9 — Removing the Motherboard

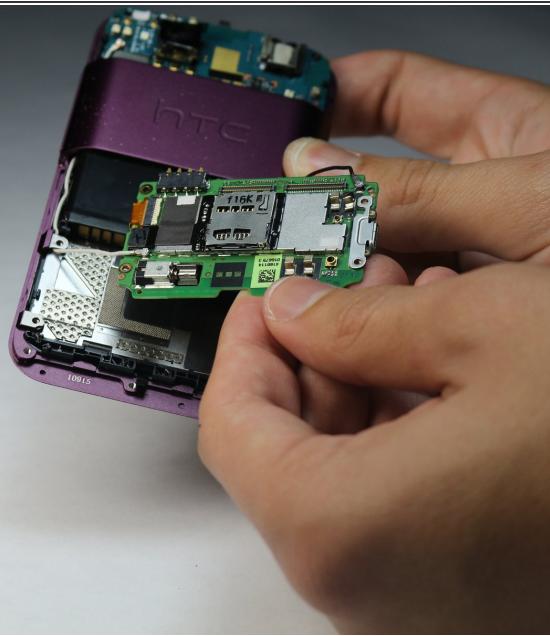



**⚠** Carefully remove the motherboard from the base of the phone.

## Step 10




- Gently push the base of the phone from the frame.

## Step 11 — Battery Removal

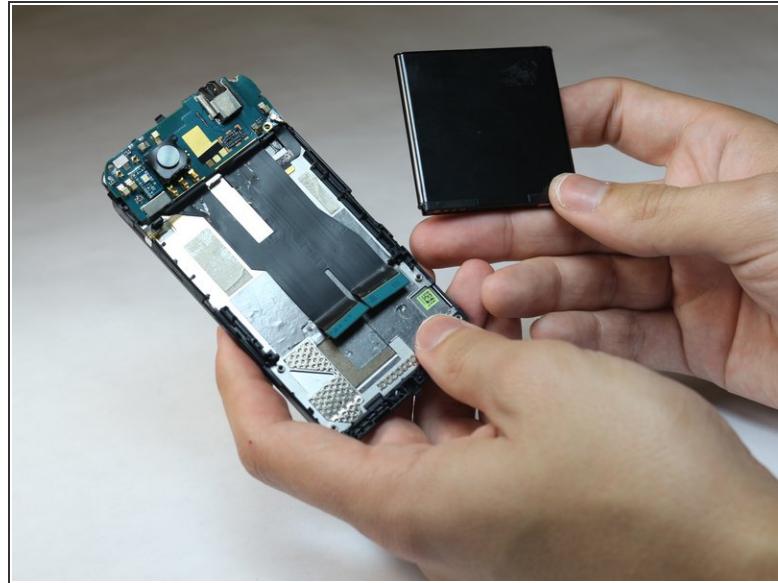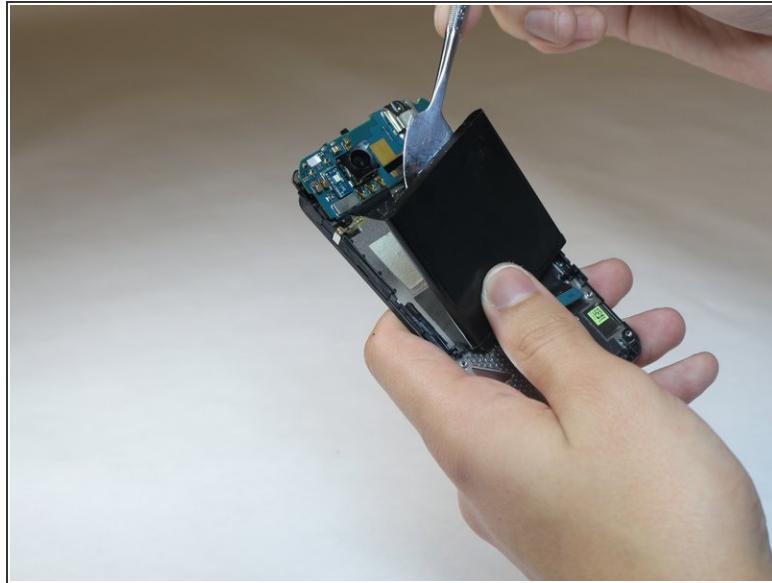

- Using the metal spudger, remove the battery from the base.

## Step 12 — Locating and Replacing the Speaker

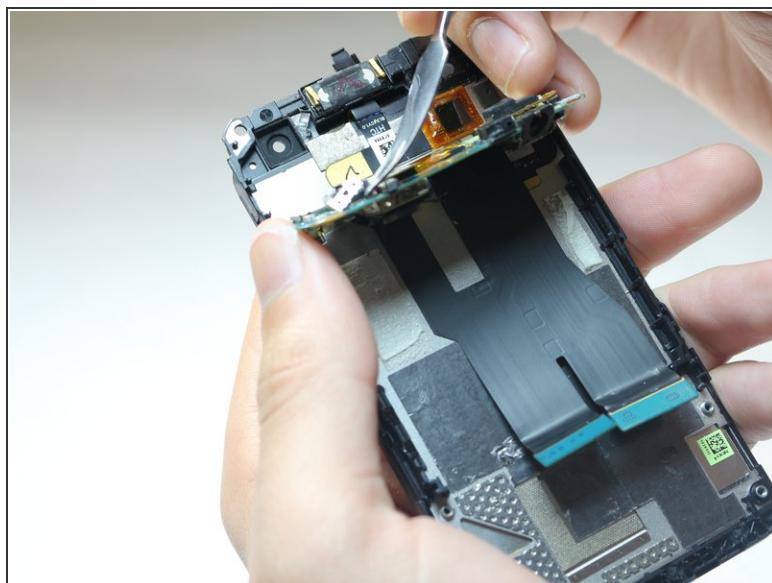

- Using tweezers, lift the secondary motherboard from the base of the phone.
- The speaker is located on the back of the board.

To reassemble your device, follow these instructions in reverse order.