




# HTC Surround SD Card Replacement

This guide will be created to help a user of the HTC 7 Surround remove and replace the SD card

Written By: Michael Ronning

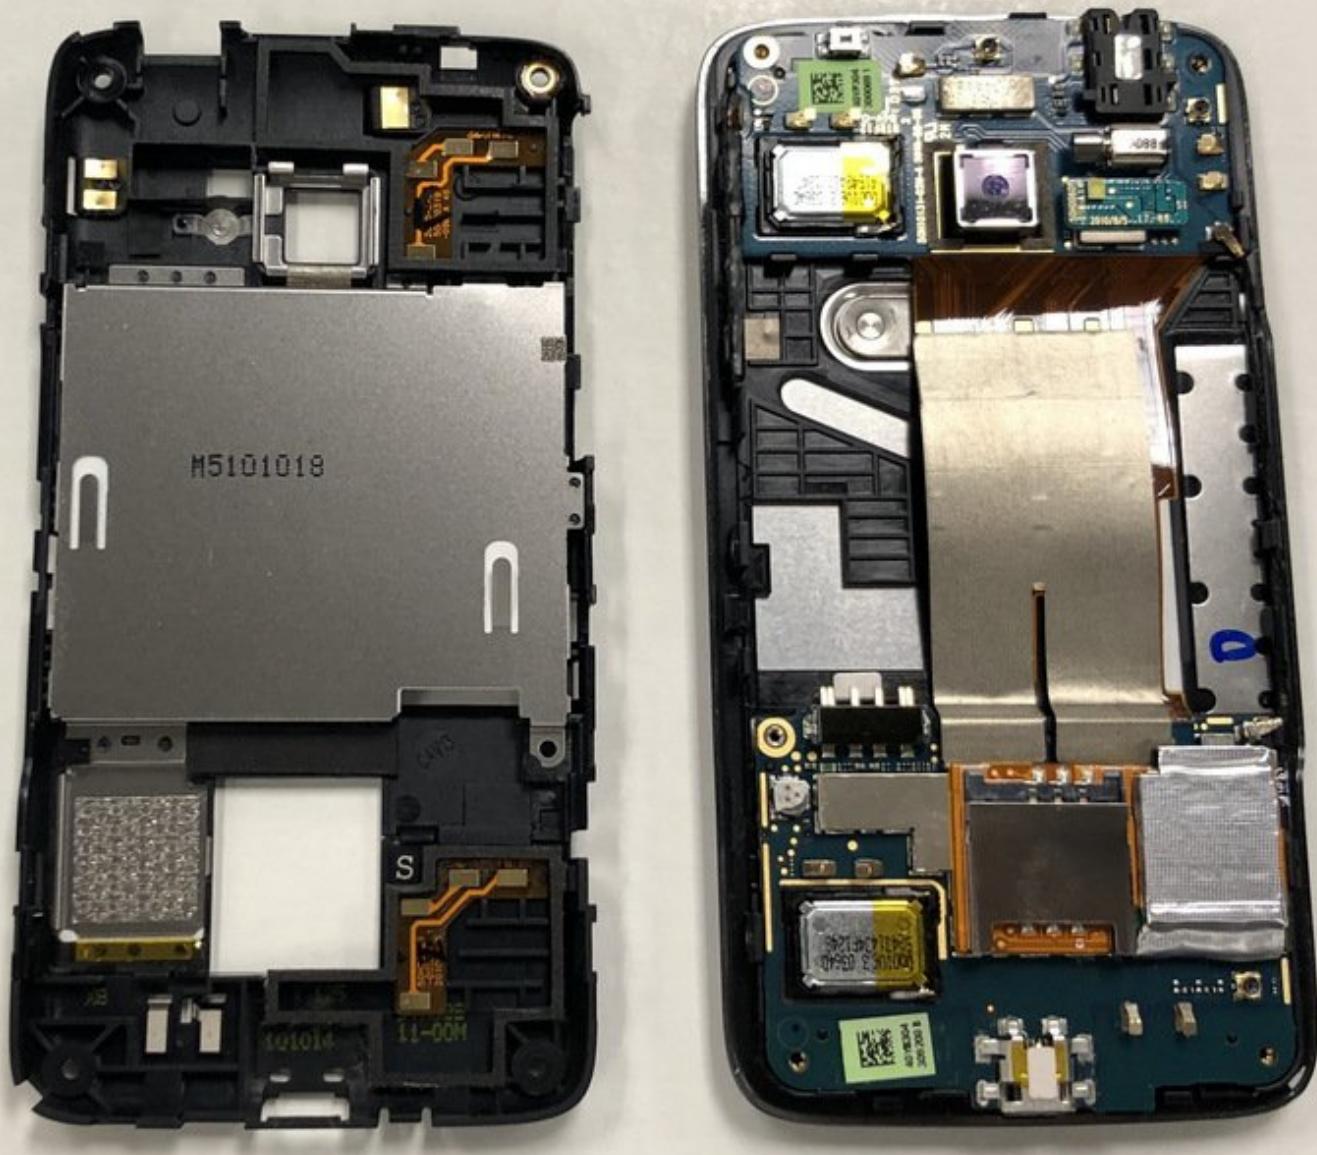

 **TOOLS:**


- [iFixit Opening Tools \(1\)](#)
- [Phillips #00 Screwdriver \(1\)](#)

## Step 1 — Back Case



- Remove the back cover of the device to access the internal components of the HTC 7 Surround.
- To remove the back cover, use the circular hole to lift up the cover while holding the front of the device down.

## Step 2

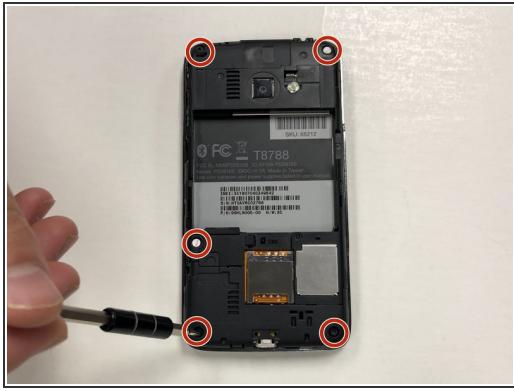


- Using a Phillips #00 screwdriver, remove the screws as directed.

## Step 3




- Separate the screen and back cover with the opening tool.

## Step 4 — SD Card

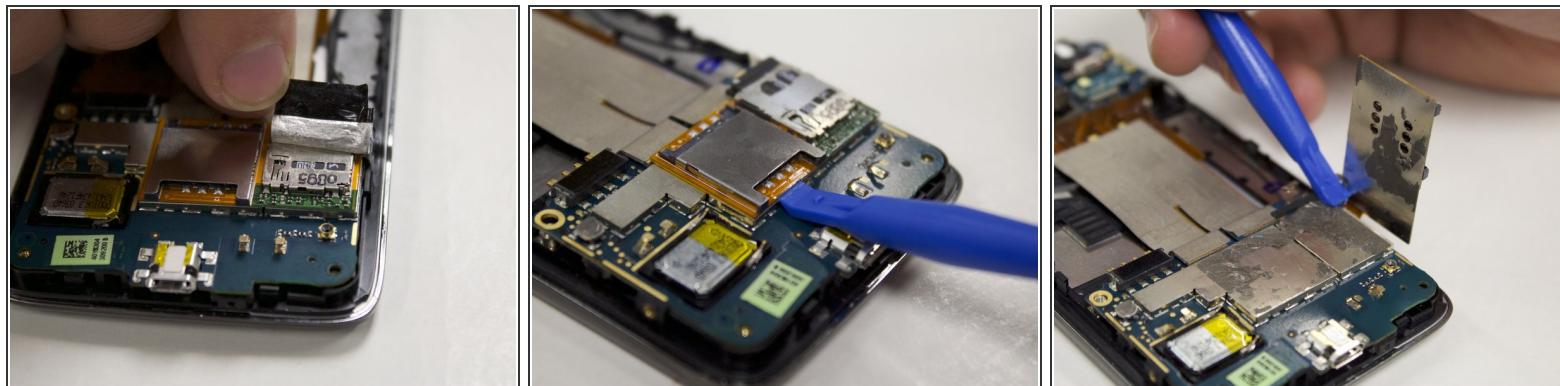

- Look at the bottom right hand corner of the device and remove the silver tape covering the SD card slot with your fingers.
- Insert the plastic opening tool directly underneath the orange surface below the SIM card until its removed from the surface of the device.

## Step 5

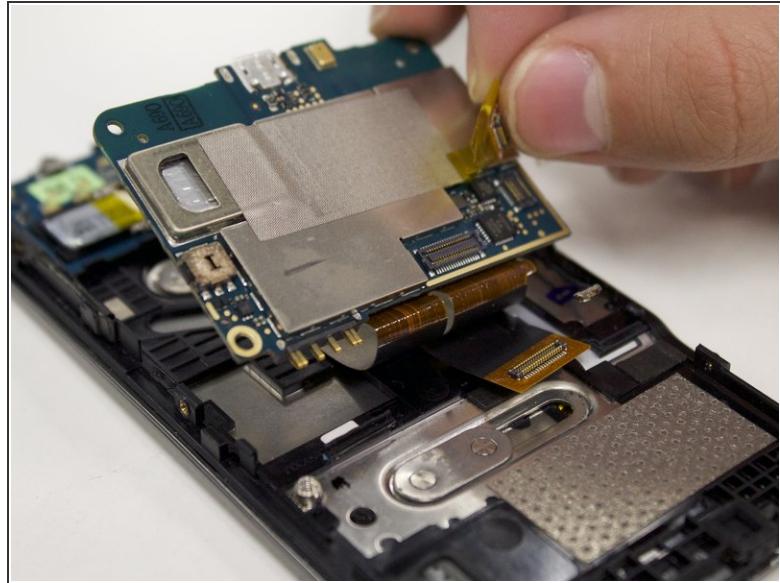

- To get to the attachment that the SD/SIM card is attached to; insert the plastic opening tool underneath the lower motherboard until it is removed from the bottom half of the device.
- You will notice the SD/SIM card is attached to the lower motherboard by a yellow piece of tape. Remove the tape from the back of motherboard with your fingers.

To reassemble your device, follow these instructions in reverse order.