



HTC Wizard 100 Speakers Replacement

This guide will allow you to disassemble your phone and remove/replace the speaker.

Written By: Taylor Stone



INTRODUCTION

Make sure you complete previous guide.

TOOLS:

- [Heavy-Duty Spudger \(1\)](#)
- [T6 Torx Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Battery





- Power the phone off.
- Use your thumb to gently press downward and away from the camera to remove the battery cover.

Step 2



- Pull on the plastic tab to release the battery.

Step 3 — Back Case

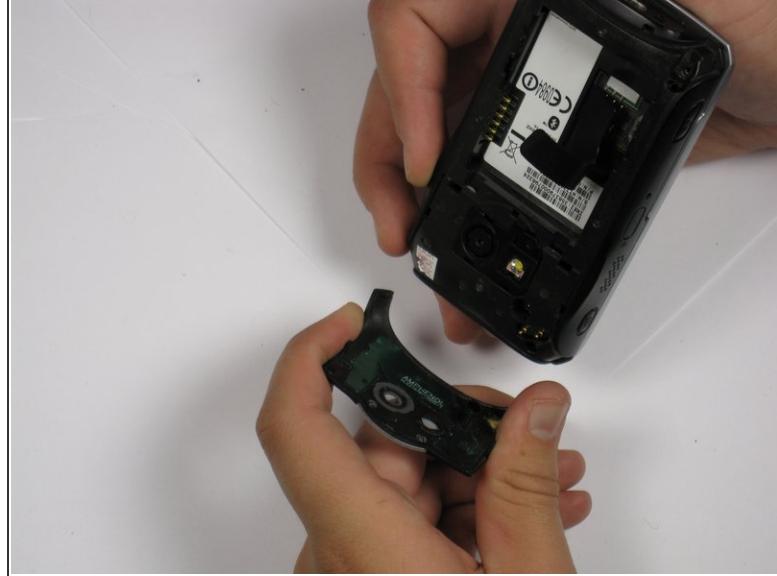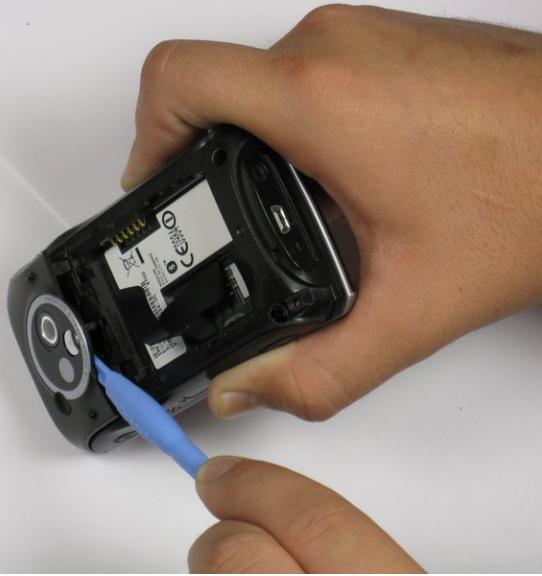

- Use a plastic opening tool to remove the camera cover.

⚠ Work around the corners to avoid breaking the plastic clips that hold the camera cover on.

- Lift the camera cover off of the phone.

Step 4



- Remove the stylus from the phone.

- Remove the four 5.5 mm screws with the T6 Torx Screwdriver.

⚠ One of the screws might be under a sticker, which will void your warranty.

Step 5



⚠ Be Careful! Do not insert the spudger in between the keyboard and screen. This could break the keyboard off the phone.

- ⓘ If your phone contains a memory card, you may want to remove it before proceeding with this step.
- Insert spudger in the bottom corner as seen in the picture. Carefully slide the spudger from the bottom towards the top as seen in the second picture.
- Lift the back case off completely.

ⓘ The speakers might be dangling and unsecured.

Step 6 — Speakers



- Grip the speaker connector with your thumb and finger and gently pull up.
- Repeat for 2nd speaker.

To reassemble your device, follow these instructions in reverse order.