



HUAWEI HONOR 5X Speaker Replacement

This guide will help users to replace a malfunctioning speaker in your HUAWEI HONOR 5X.

Written By: Eric Petrous



INTRODUCTION

If sound is not playing through your device, the speakers may be malfunctioning or broken and needs to be replaced. This guide will help users to replace a malfunctioning speaker in your HUAWEI HONOR 5X.

TOOLS:

- [T3 Torx Screwdriver](#) (1)
- [iOpener](#) (1)
- [iFixit Opening Tools](#) (1)
- [SIM Card Eject Tool](#) (1)
- [Phillips #000 Screwdriver](#) (1)
- [T2 Torx Screwdriver](#) (1)

Step 1 — HUAWEI HONOR 5X Disassembly



- Turn off your cell phone before disassembling.

Step 2



- Remove the two 1.17mm Torx T3 screws from the bottom of the phone.

Step 3



- Use the Sim card ejection tool to remove both the sim card trays.

Step 4



- To prepare the iOpener insert it in the microwave for 30 seconds and apply it on the side edges of the phone so that the glue underneath will soften.

Step 5



- Pry off the back with a plastic opening tool.

Step 6 — Speaker



- Remove the six Phillips #000 screws holding the speaker to the device.
- Remove the speaker

To reassemble your device, follow these instructions in reverse order.