


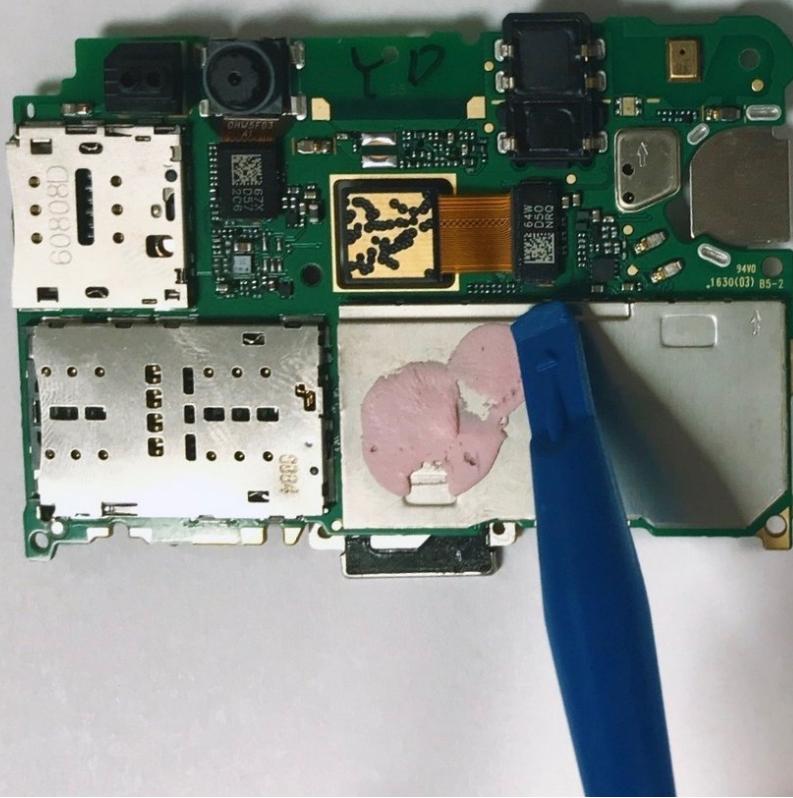

# HUAWEI HONOR 5X Front And Back Camera Replacement

This guide shows how to properly remove the front and back camera in the Huawei Honor 5X in order to replace them.

Written By: Klara Asllani



This document was generated on 2019-12-20 01:35:13 PM (MST).

## INTRODUCTION

If the camera has been cracked or shows blurry pictures, it may need to be replaced.

### TOOLS:

- [Phillips #000 Screwdriver](#) (1)
- [T3 Torx Screwdriver](#) (1)
- [iOpener](#) (1)
- [SIM Card Eject Tool](#) (1)
- [iFixit Opening Tools](#) (1)

## Step 1 — HUAWEI HONOR 5X Disassembly



- Turn off your cell phone before disassembling.

## Step 2



- Remove the two 1.17mm Torx T3 screws from the bottom of the phone.

### Step 3



- Use the Sim card ejection tool to remove both the sim card trays.

## Step 4





- To prepare the iOpener insert it in the microwave for 30 seconds and apply it on the side edges of the phone so that the glue underneath will soften.

## Step 5




- Pry off the back with a plastic opening tool.

## Step 6 — Motherboard

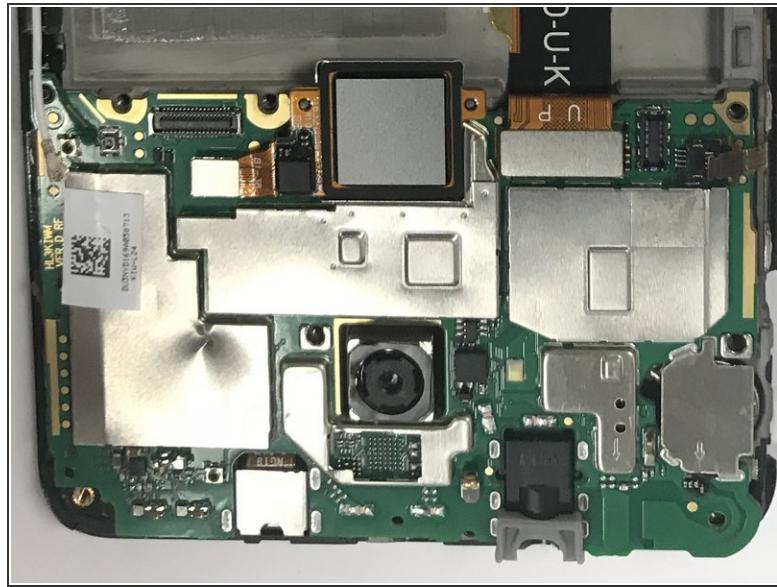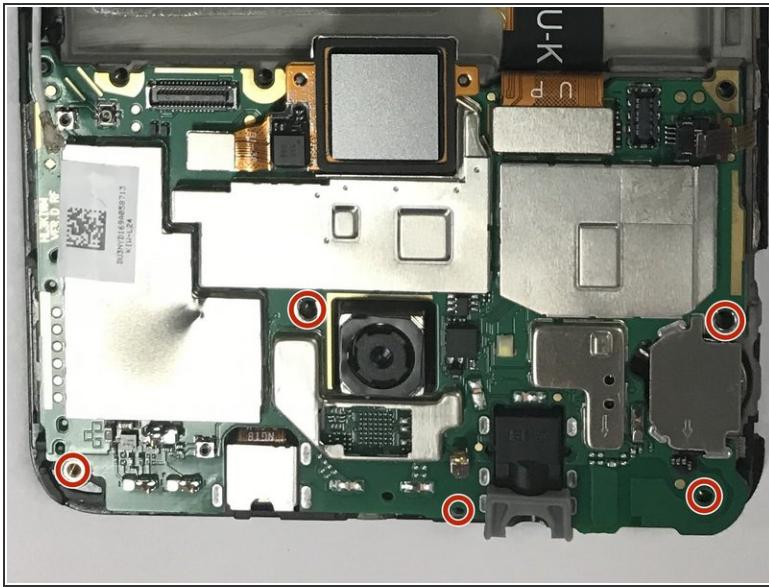

- Remove the five 1.5mm Phillips #000 screws from the motherboard.

## Step 7

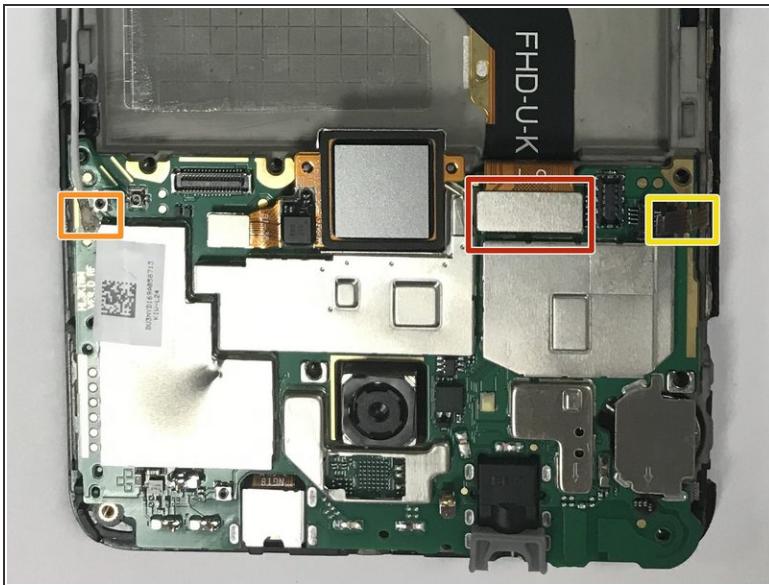


- Use a plastic opening tool to pry up and disconnect the display cable from the motherboard.
- Use tweezers to disconnect the white coax cable.
- Use tweezers to disconnect the power and volume cable.

## Step 8




- Remove the motherboard.

## Step 9 — Front And Back Camera

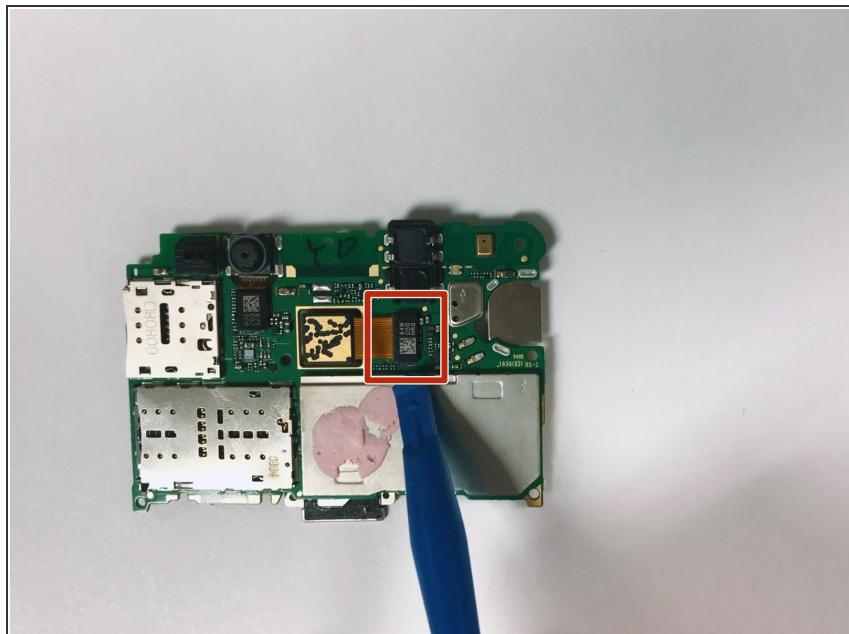

- Use a plastic opening tool to pry up and disconnect the camera from the motherboard.

## Step 10

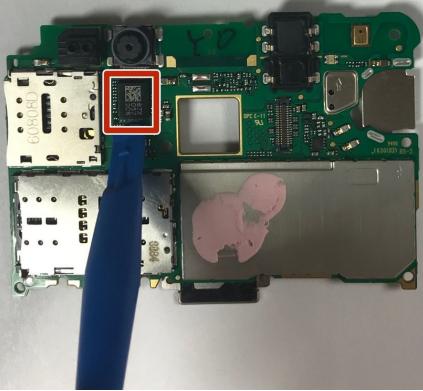

- Use a plastic opening tool to pry the front camera connector from its socket on the motherboard.

To reassemble your device, follow these instructions in reverse order.