



Hamilton Beach 25460Z Plug Wiring Replacement

This guide shows you how to remove the wiring in the base of the device connected to the power plug. From here, you can access the bottom heating element and associated wiring.

Written By: Maxwell Taylor



This document was generated on 2019-09-22 06:33:28 AM (MST).

INTRODUCTION

This is a straight-forward process that requires removal of a few screws and two wire caps.

TOOLS:

- [T10 Torx Screwdriver](#) (1)
- [Phillips #2 Screwdriver](#) (1)
- [Small Needle Nose Pliers](#) (1)

Step 1 — Plug Wiring



 Unplug your device before proceeding with disassembly.

- Remove the four 14mm screws from the bottom of the Panini Press using the T10 Screwdriver.

Step 2



- Lift up the plastic cover to expose the plug wiring.
- 📌 Mark the plug wire connected to the red wire with a piece of tape. This will be used as a reference for reassembly.

Step 3



- Use the pliers to pinch the widest point of the cap. This should be done opposite of the already existing crimps.
- Slide off the white cap.
- Repeat these steps for the second white cap.

Step 4



- Remove the two rubber screw covers from the bottom of the Panini Press.
- Remove the four uncovered 10mm screws with the PH2 Screwdriver.

Step 5



- Lift the plastic lower heating element up and place to the side for reassembly. You have now disconnected the plug wiring completely.

To reassemble your device, follow these instructions in reverse order. Make sure to correctly replace the wires using tape you placed earlier as a reference.