



Hamilton Beach 70730 Blade Replacement

This guide will help you replace the blade mechanism of your Hamilton Beach 70730 food processor.

Written By: Mack Bernard



INTRODUCTION


The blade is a necessary part of the food processor. It can damage the rest of the the bowl and machine if broken.

Step 1 — Blade



- Turn the lid counterclockwise.

Step 2

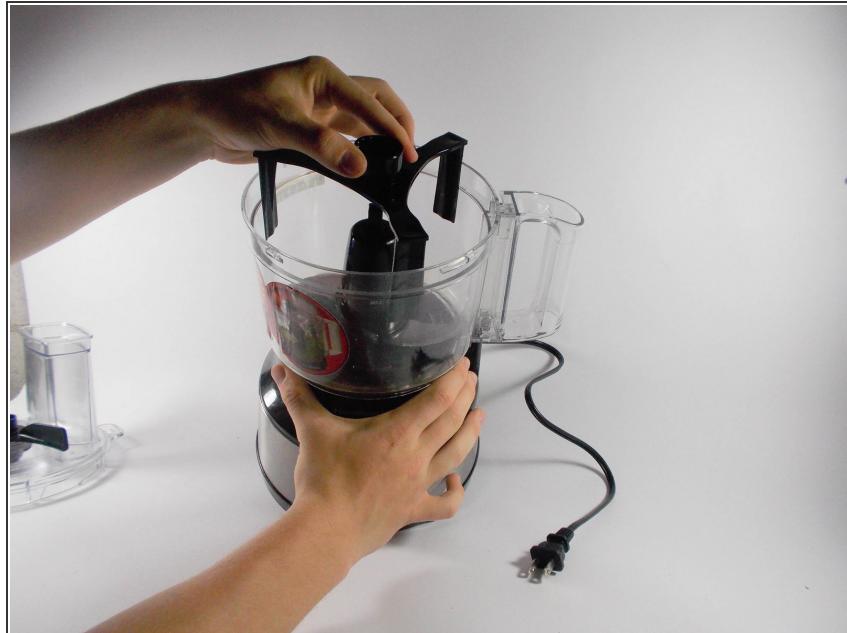

- Lift the bowl scraping mechanism up and out of the bowl.

Step 3



- Gently lift the blade mechanism from the top black piece.

Step 4



- Make sure there are no broken parts or pieces in the bowl. If there are, make sure the bowl and scraping mechanism are not damaged.

To reassemble your device, follow these instructions in reverse order.