



Hamilton Beach 70740 Mixing blade Replacement

Written By: David Gedeon



INTRODUCTION

If your blades are broken , or don't lock correctly to the bowl, use this guide to easily replace them.



PARTS:

- Chop/Mix Blade, Black - 70670 (Part # 990049101) (1)

Step 1 — Mixing blade



- Use your hands to remove the lid by lifting straight up.

Step 2



- Grasp the plastic part of the blade and lift straight up to remove.

To reassemble your device, follow these instructions in reverse order.