


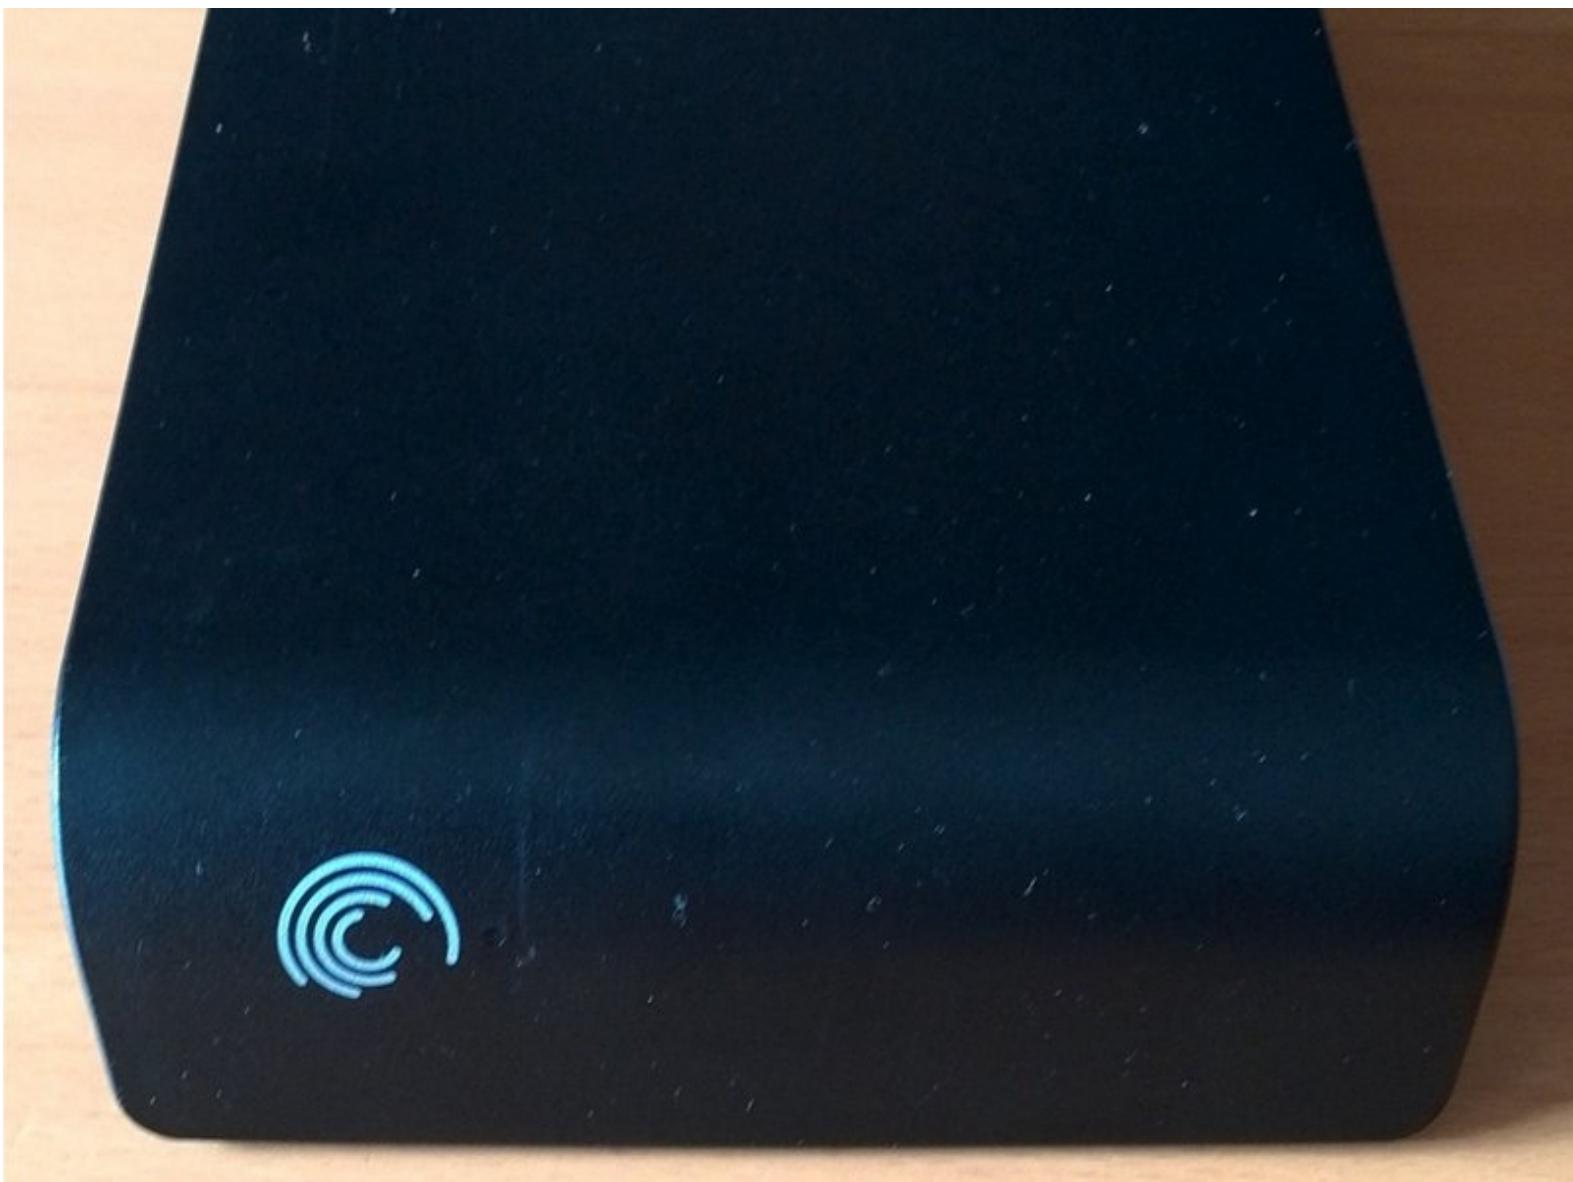

Hard Drive Seagate External HDD change

Instructions show how you can remove the hard drive from the case to replace it with another.

Written By: Nicola





 **TOOLS:**

- Schraubenzieher (1)

 **PARTS:**

- New Item (1)

Step 1 — Open housing

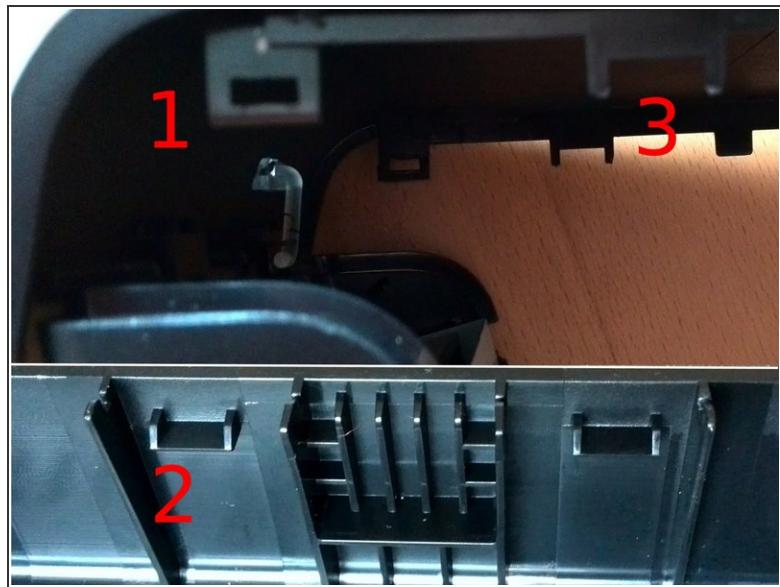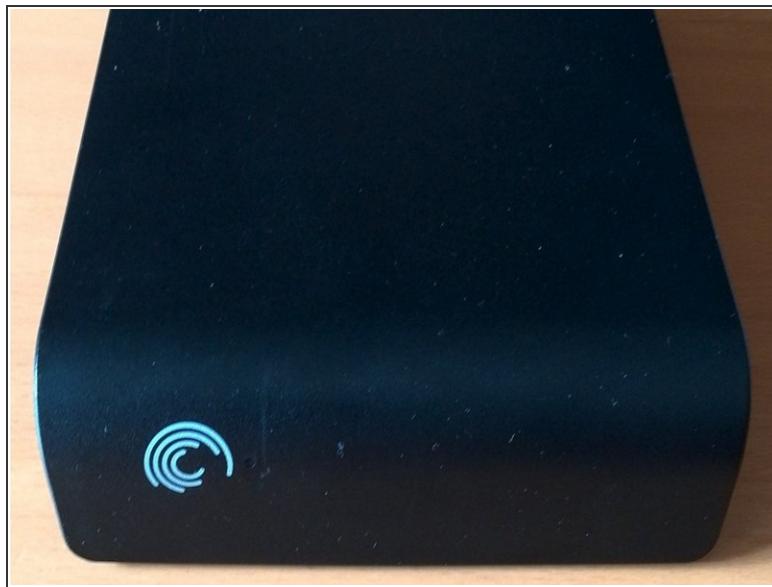

- It is best to open the case at the rear of the connectors.
- The lid has lugs (1) made of plastic which are hardened in the bottom pan (2). By pressing the bottom pan to the outside they can be solved. Best with a flat screwdriver or similar tool.
- The manufacturer does not seem to have intended the opening, so some shrinkage at the entanglement can not be excluded. (3)

Step 2 — Lift out hard disk carriage



- The Fetplatte can now be lifted out of the plastic housing. It is not attached any further.

Step 3 — Remove the hard disk from the hard disk carriages



- Unscrew the side screws.
- Remove permanently attached cables and stickers from the grease plate.
- Then pull the hard drive backwards with a little force.

Repeat the steps in order to reassemble your device.