



Hard drive replacement

In this guide, you will learn how to replace the hard drive on your Asus K52JC laptop.

Written By: Brendan



INTRODUCTION

Replacing the hard drive on this device is quite easy as all of the components are accessible by removing a single cover.

TOOLS:

- Tournevis Cruciforme PH1 (1)

PARTS:


- New Item (1)

Step 1 — Power off and return the device




- First, turn off your laptop, then disconnect the power supply. Unplug any peripheral devices connected to your laptop.
 - Next, remove the battery from the laptop.
- (i)* In the picture, the battery is not installed.

Step 2 — Remove the screws and open the cover

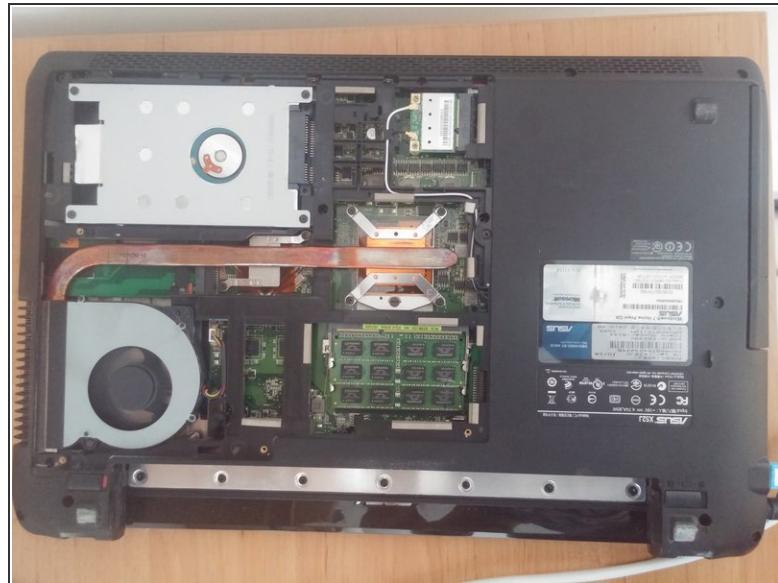

- Next, remove the 4 Phillips screws from the service door cover (circled in red).
- (i)* In this photo, the screws have already been removed.

Step 3 — Remove the hard drive from it's location

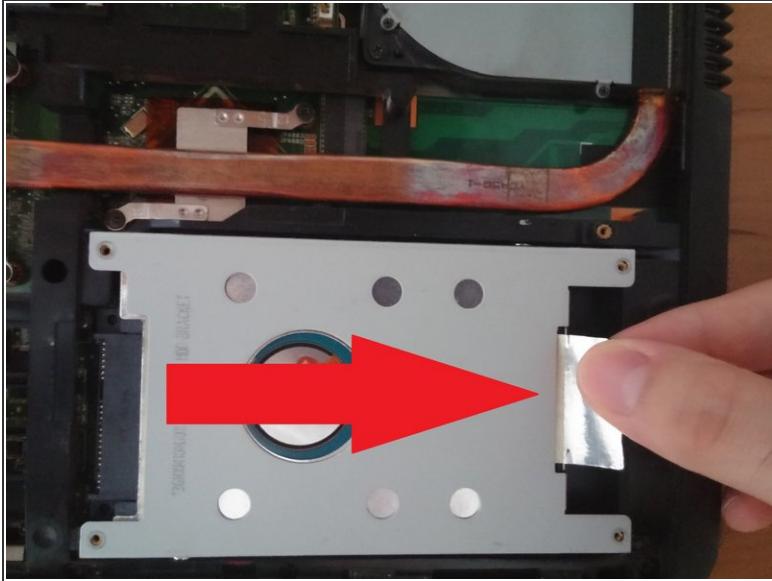

- Remove the 4 screws circled in red in the photo.
- Once the screws are removed, slide the hard drive to the right, with the help of the tab.

Step 4 — Remove the hard drive from its metal support bracket



- Remove the 4 screws located on the side of the support.
- Then, remove the hard drive form its metallic support.
- Finally, replace de hard drive with a new one or an SSD.

To reassemble your device, follow these steps in reverse order.

This document was generated on 2020-03-28 03:13:25 PM (MST).

