



# Harman Kardon Esquire Mini Speaker Replacement

In case the speakers are not working or there is a buzzing sound and you need to replace it, this guide will help you to replace it.

Written By: yousef aljeemaz



This document was generated on 2019-09-28 07:29:28 AM (MST).

## INTRODUCTION

This guide will help you replace the Harman Kardon Esquire Mini speakers. In case the speakers are not working or there is a buzzing sound and you need to replace it, this guide will help you to do so. A plastic opening tool and PH0 screwdriver will be needed to accomplish this guide.

### TOOLS:


- [Phillips #0 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

## Step 1 — Front Panel



- Using the plastic opening tool, to open the back panel of the device. Start on the longer sides to avoid bending the metal frame at the plug ports.
- Push down on the plastic opening tool, and push the back panel, repeat this for the 4 sides of the device.

## Step 2

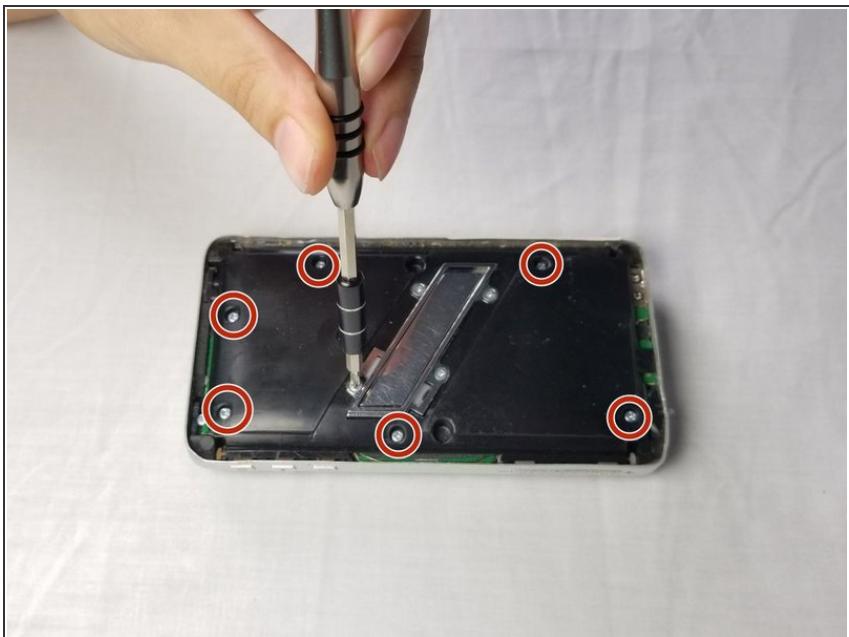

- Using the PH0 screw driver, remove the 7.5 mm screws by turning in a counter-clockwise direction. There are 6 screws on the front panel.
- Remove all of the 7.5 mm screws, by repeating the same step above. It is not necessary to remove the stand-leg.
- After unscrewing the 7.5 mm screws, just lift the plastic and you will see the motherboard.

## Step 3 — Speaker



- Pull out the motherboard by removing 4 screws around the perimeter of the motherboard. Keep in mind the wires still attached to the speakers, so pull gently.

## Step 4



- Using the PH0 screwdriver unscrew the screws, there is one 4 mm screw on each speaker.
- Re-do the same steps above for the other speaker to remove it.

## Step 5



- Remove the speaker by using the plastic opening tool. Apply a gentle upward force to remove it.

To reassemble your device, follow these instructions in reverse order.