



Harman Kardon Invoke Speaker Replacement

This guide was made to assist the owner of a Harman Kardon Invoke replace a broken or torn speaker on their device.

Written By: Angel A. Grageda



INTRODUCTION

Is the audio from your Invoke smart speaker distorted or scratchy? If so, one of the three speakers in your invoke might need to be replaced. All you need for this replacement is a Phillips #2 screw driver, a Torx #10 screw driver and a metal spudger tool.

TOOLS:


- [Phillips #2 Screwdriver \(1\)](#)
- [T10 Torx Screwdriver \(1\)](#)
- [Metal Spudger \(1\)](#)

Step 1 — Speakers



- Use metal spudger to remove top cover from smart speaker.
- Use the Phillips #2 screwdriver, remove the three 17mm screws.

Step 2

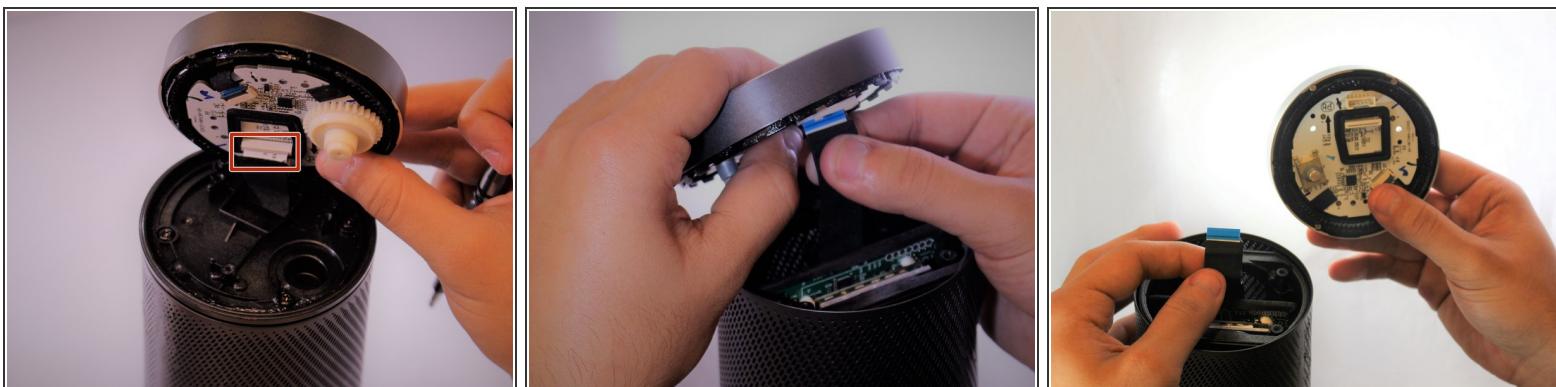

- Once the 17 mm screws are removed, lift the volume wheel.
- ⚠** Lift slowly as you do not want to damage the cable connected to the LED board.
- Pull lightly on the cable in order to remove both the volume wheel and LED board.

Step 3



- Use the Torx #10 screwdriver, remove the four 14 mm screws around the lid.
- Remove lid.

Step 4



- Once lid is removed, housing can now slide upwards.
- Use the Torx #10 screwdriver, remove both 10 mm screws for each speaker that must be replaced.

Step 5



- Pull on the speaker cables lightly in order to detach the speakers.

To reassemble your device, follow these instructions in reverse order.