



# Harman Kardon Onyx Studio 2 Battery Replacement

This guide will explain how to replace a dead or dying battery in a Harman Kardon Onyx Studio 2.

Written By: Alexandra Achtenberg



## INTRODUCTION

After completing the prerequisite guide for taking apart the front panel of the speaker, you can then access the battery and replace it when it is dying or not working.

### TOOLS:

- [iFixit Opening Tools \(1\)](#)
- [T10 Torx Screwdriver \(1\)](#)

### PARTS:

- [Harman Kardon Onyx Studio 2 Replacement Battery \(1\)](#)

## Step 1 — Front Panel



- Using a plastic opening tool, pry off the front grill by wedging it in the notch on the front of the device.

## Step 2




- Remove the five 14.4 mm T10 Torx screws.

## Step 3



- Gently pull the front apart from the back.

## Step 4

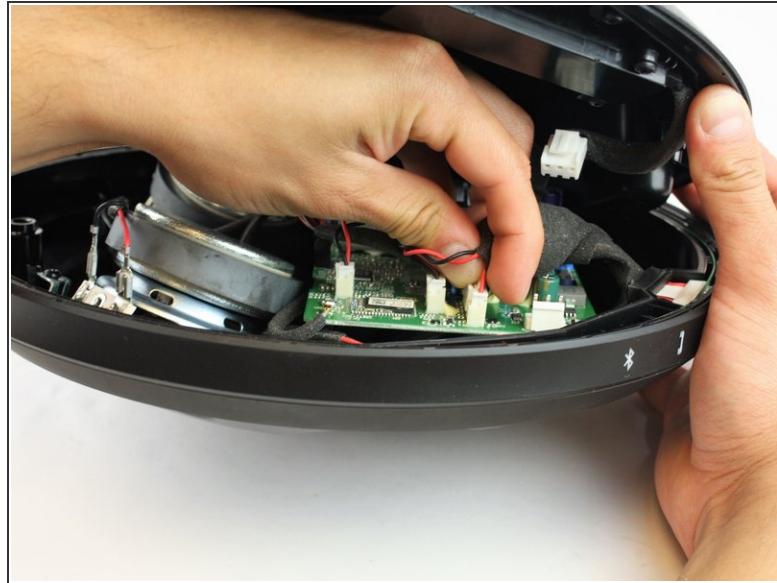

- Remove the four wires connecting the front and back panels.
- Pinch the connector tab and pull gently upwards.
- Repeat for the other three connectors.

## Step 5 — Battery



- Begin by removing the three 10.4 mm T10 Torx screws from the battery cover.
- Remove battery cover.
- Pull battery out to replace.

To reassemble your device, follow these instructions in reverse order.