



Hasee Z7M-i78172D1 Screen Replacement

This guide will show you how to remove and replace the screen on the Hasee Z7M-i78172D1.

Written By: Desiree Mora



 **TOOLS:**

- [iFixit Opening Tools \(1\)](#)
- [Phillips #000 Screwdriver \(1\)](#)
- [Metal Spudger \(1\)](#)

 **PARTS:**

- [Screen \(1\)](#)

Step 1 — Screen





- Remove the stickers covering the screws. These are located on both corners of the screen. (Two in total)
- Remove the two 7mm screws.

Step 2



- Use a plastic opening tool to pull the plastic screen bezel forward.
- Remove the 4 7mm screws in the corners holding the screen up.
- Use a plastic opening tool to pry the screen forward. Lay it on the keyboard.

Step 3

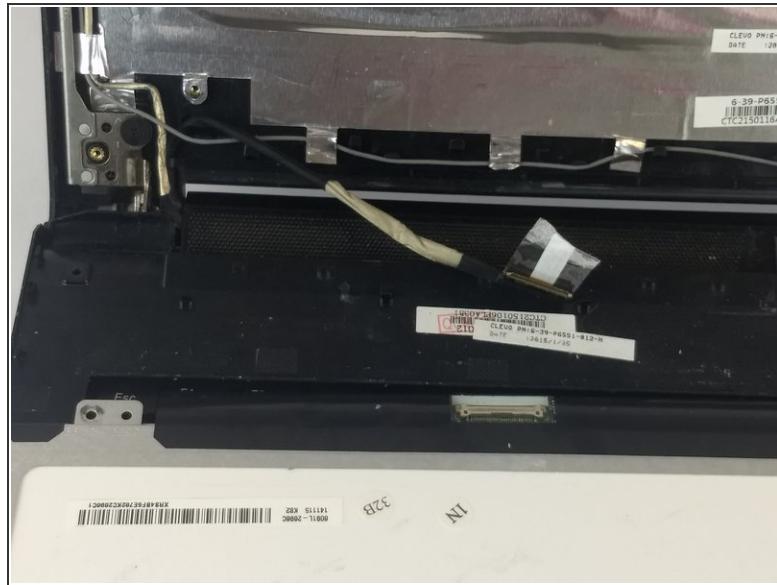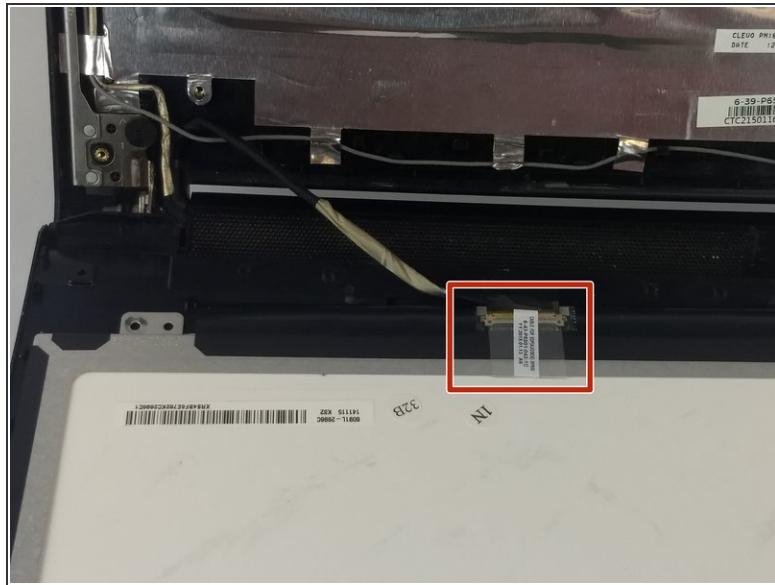

- Peel off the tape that connects the chord to the screen.
- Carefully unplug chord.

To reassemble your device, follow these instructions in reverse order.