


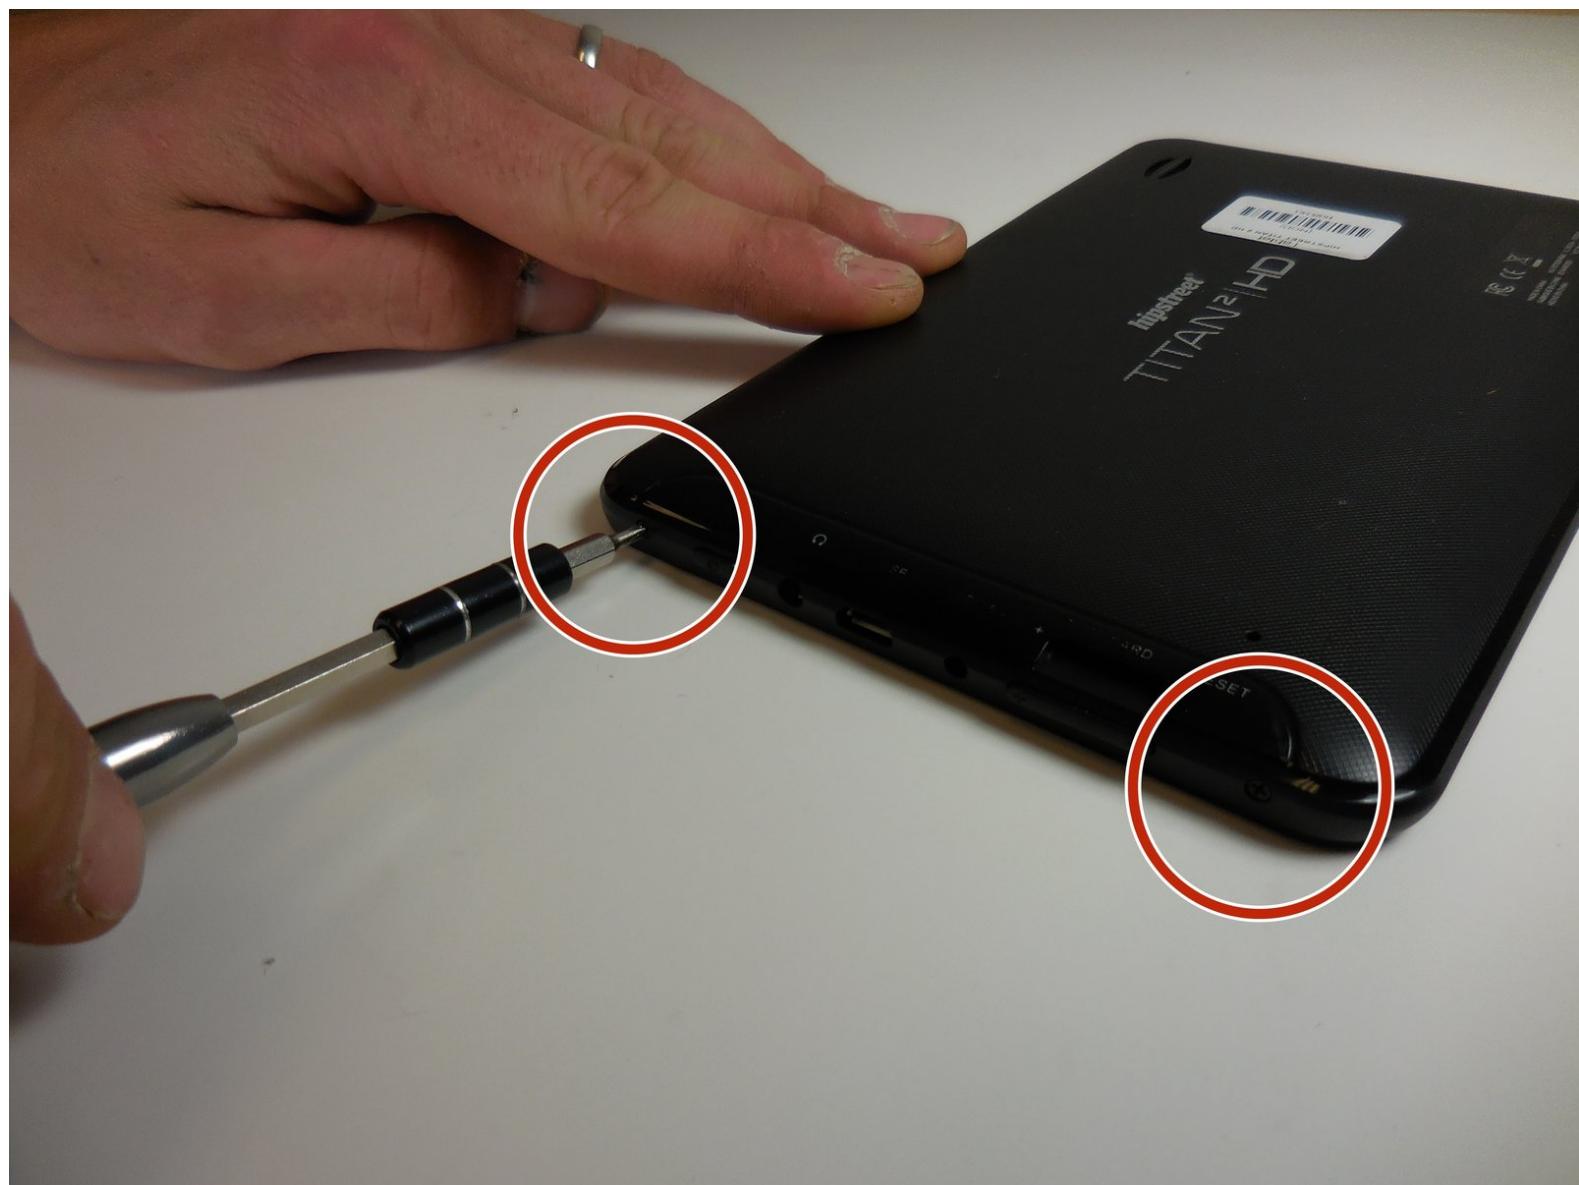

# Hipstreet Titan 2 HD Rear Case Replacement

This guide will give step-by-step instructions on how to open and disassemble the Hipstreet Titan 2 HD device cover.

Written By: Jeffrey




## INTRODUCTION

Disassembling the Hipstreet Titan 2 HD cover is a simple 5-10 minute process that is essential to fixing any component in the device.

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [Suction Handle](#) (1)
- [Phillips #000 Screwdriver](#) (1)

## Step 1 — Rear Case

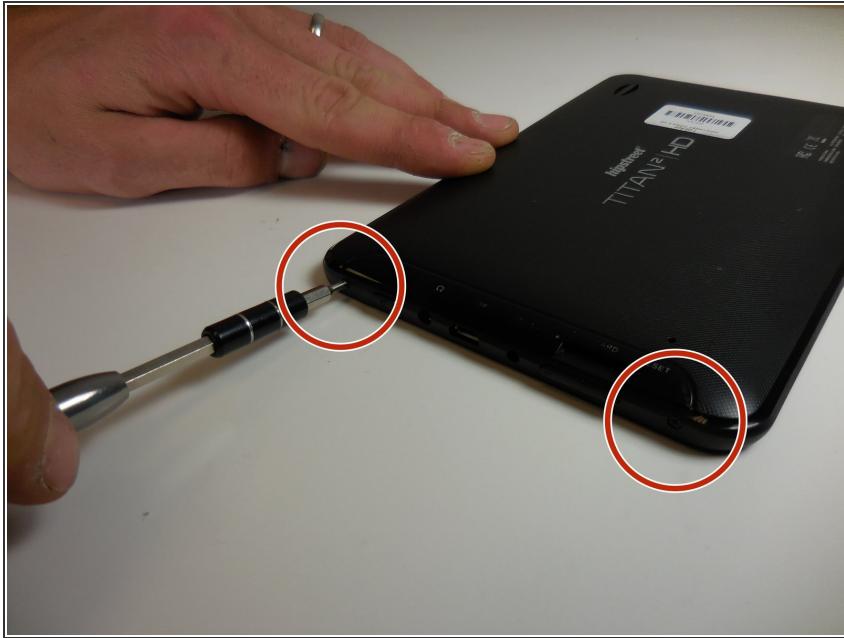

- Using the PH#00 screwdriver, remove the two 0.145 inch Phillips head screws.

*i* The screws are located on the bottom face of the device, near the power and volume controls.

## Step 2




- Place the small suction cup on your screen.

*i* Moisturize the bottom of the suction cup to ensure a proper seal.


**!** If the screen is cracked, the suction cup may not seal correctly; too much pressure may crack or damage the screen.

## Step 3

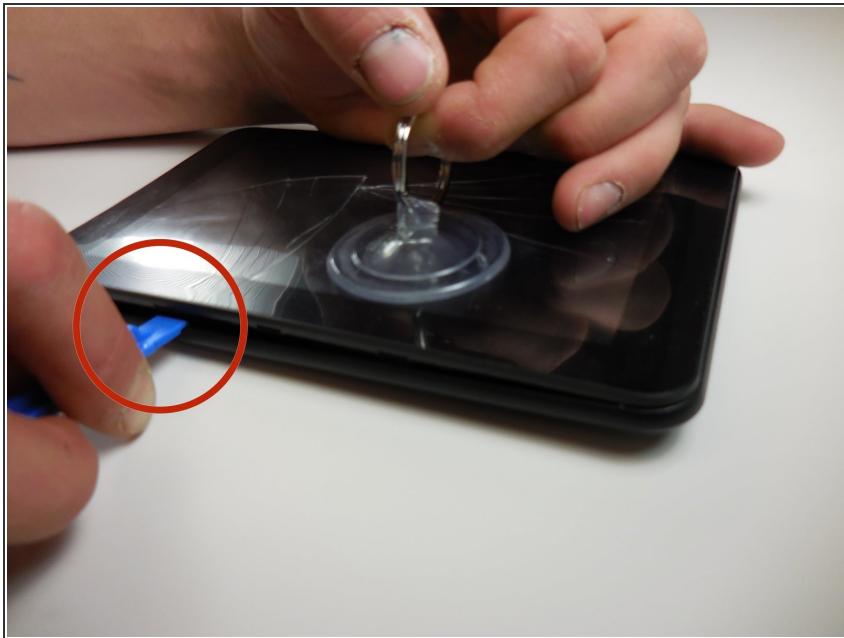

- Insert the plastic opening tool between the screen cover and rear cover of the tablet.
- Grasp the small suction cup.



## Step 4

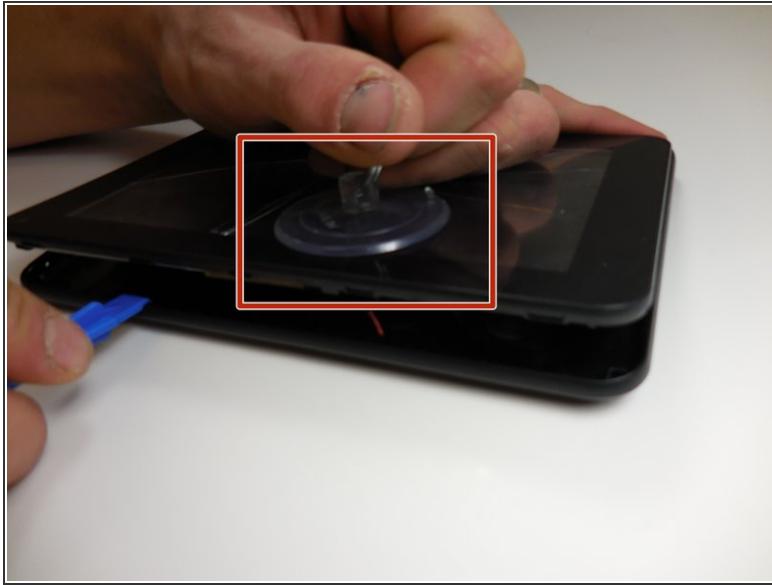

- Slide the plastic opening tool along device edge to separate the screen cover from the rear cover.
- Pull upward on the small suction cup handle while sliding the opening tool.

**⚠** When sliding the plastic opening tool, avoid sliding the tool too far into the cover. This could damage the speaker connector on the back cover.

## Step 5

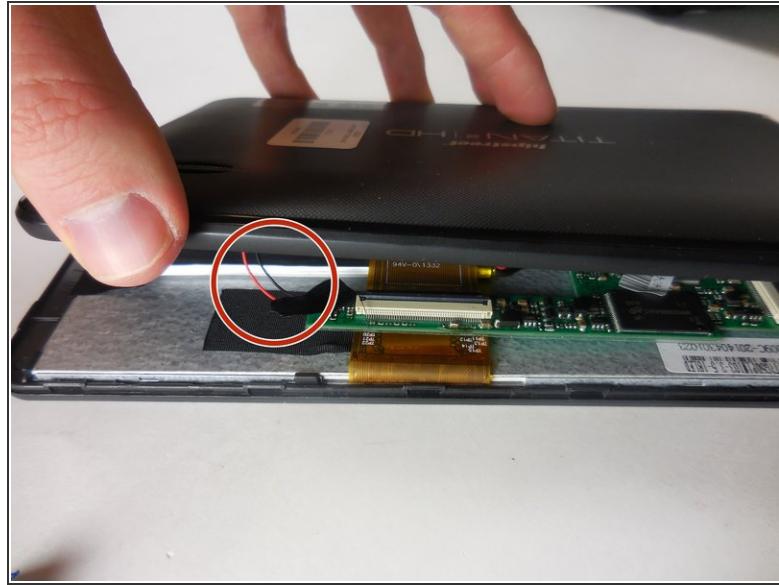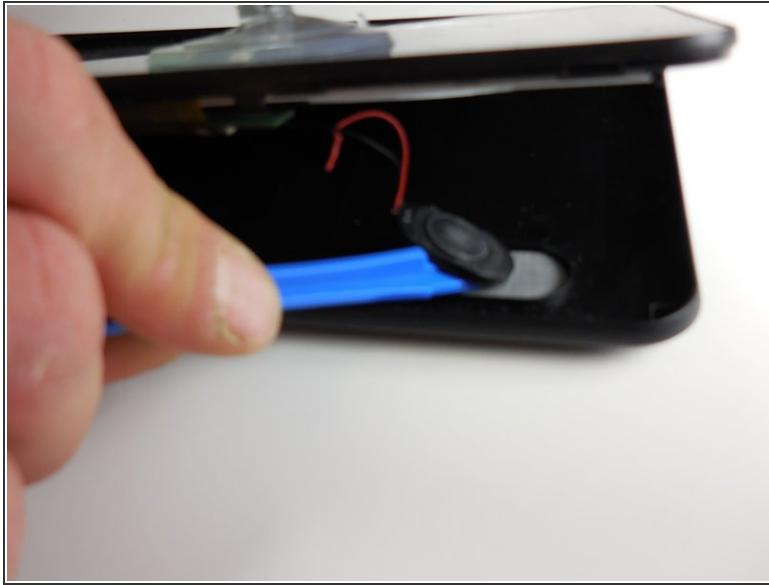

- Use the plastic opening tool to remove the speaker from the rear cover.

*(i)* The speaker is held in place with adhesive and is easily removed.

**⚠** Do not pull on the speaker wires. This could damage the soldering connections.

## Step 6



- Once the speaker is disconnected, the cover removal is complete.

Congratulations your tear down is complete. To reassemble your device, follow these instructions in reverse order.