



Hipstreet Titan 2 HD Screen Replacement

This guide will assist users in replacing the screen on a Hipstreet Titan 2 HD.

Written By: Jeffrey




INTRODUCTION

This guide will allow users to replace the screen components on the tablet. This is a moderately simple process. Users will need a replacement screen to complete the process.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)


Step 1 — Rear Case

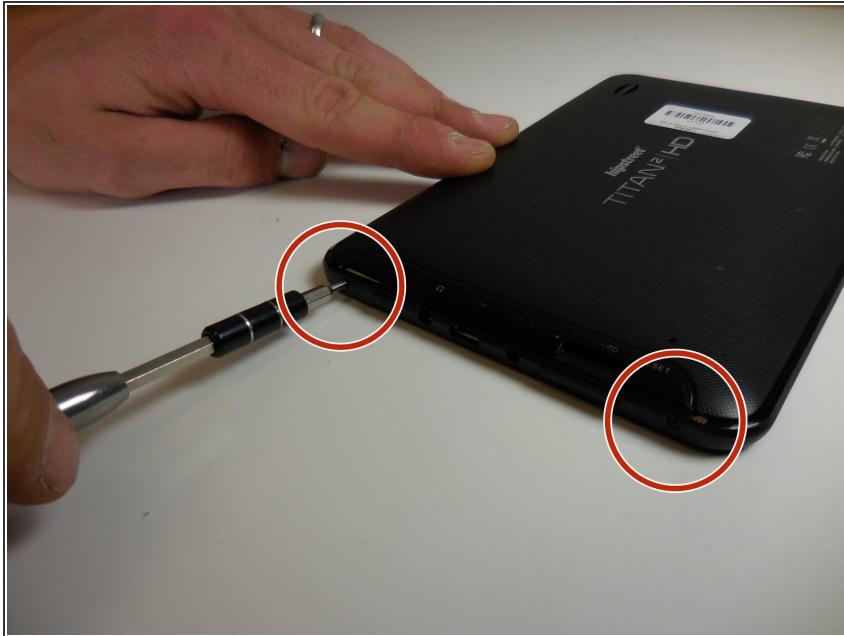

- Using the PH#00 screwdriver, remove the two 0.145 inch Phillips head screws.

- i* The screws are located on the bottom face of the device, near the power and volume controls.

Step 2

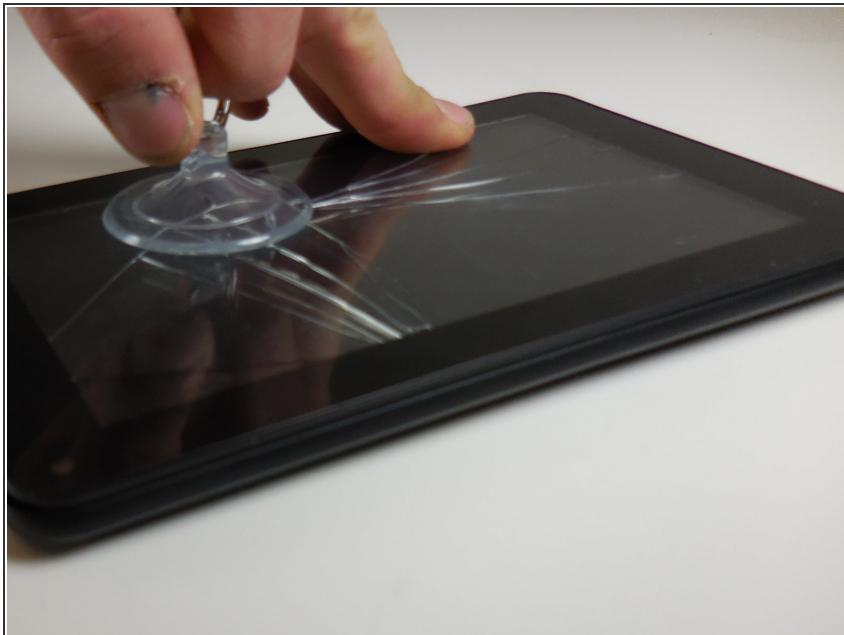


- Place the small suction cup on your screen.

- i* Moisturize the bottom of the suction cup to ensure a proper seal.


- !** If the screen is cracked, the suction cup may not seal correctly; too much pressure may crack or damage the screen.

Step 3

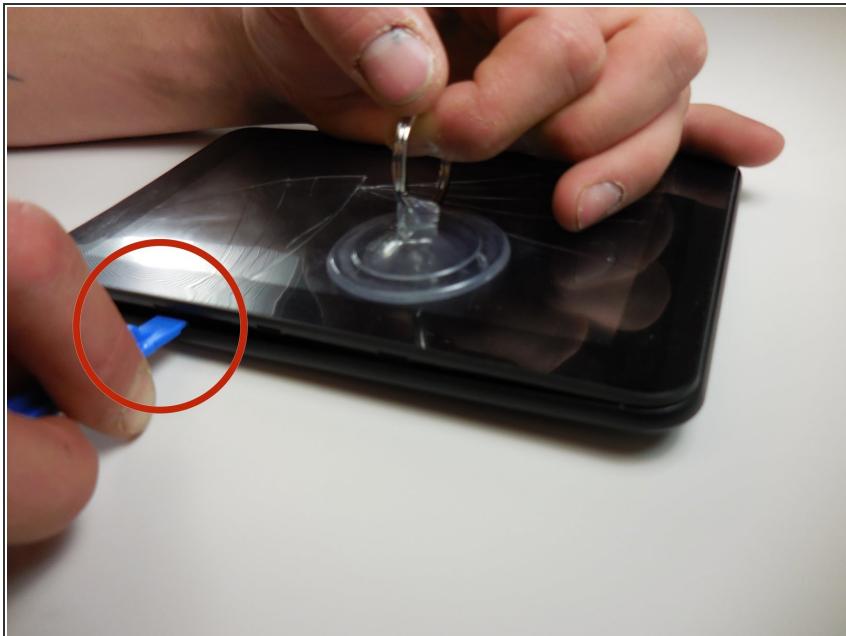

- Insert the plastic opening tool between the screen cover and rear cover of the tablet.
- Grasp the small suction cup.



Step 4

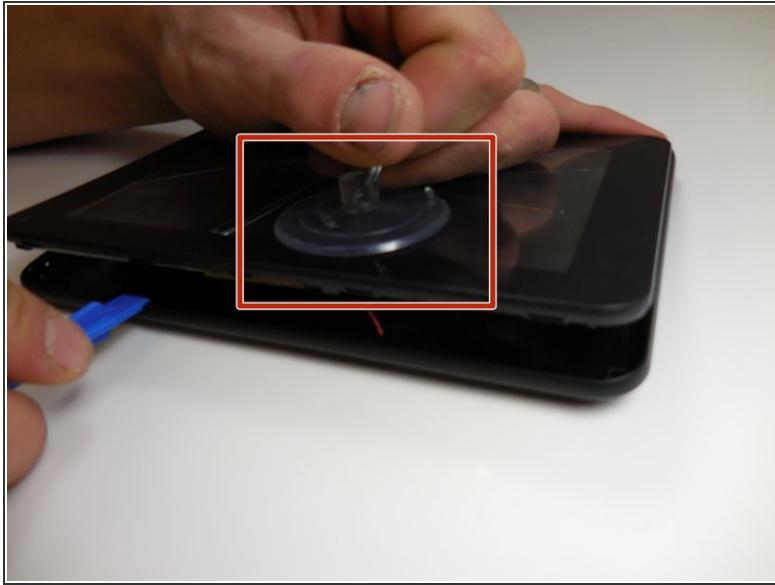

- Slide the plastic opening tool along device edge to separate the screen cover from the rear cover.
- Pull upward on the small suction cup handle while sliding the opening tool.

⚠ When sliding the plastic opening tool, avoid sliding the tool too far into the cover. This could damage the speaker connector on the back cover.

Step 5

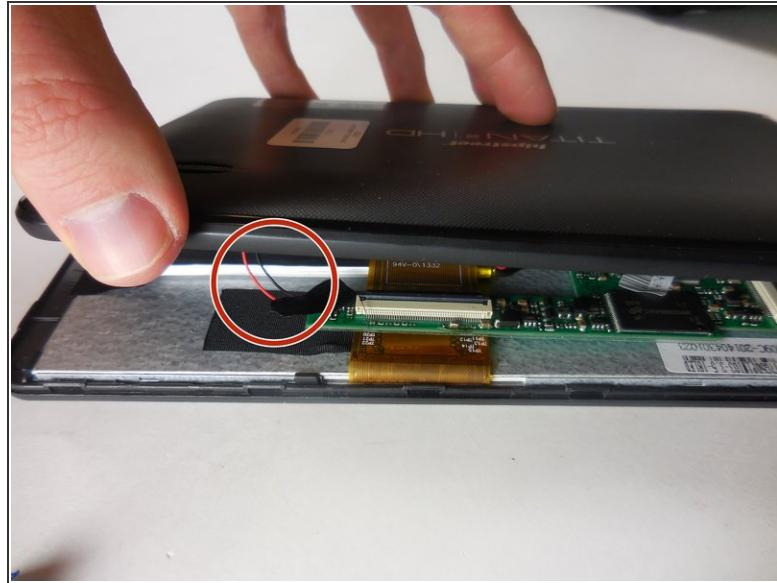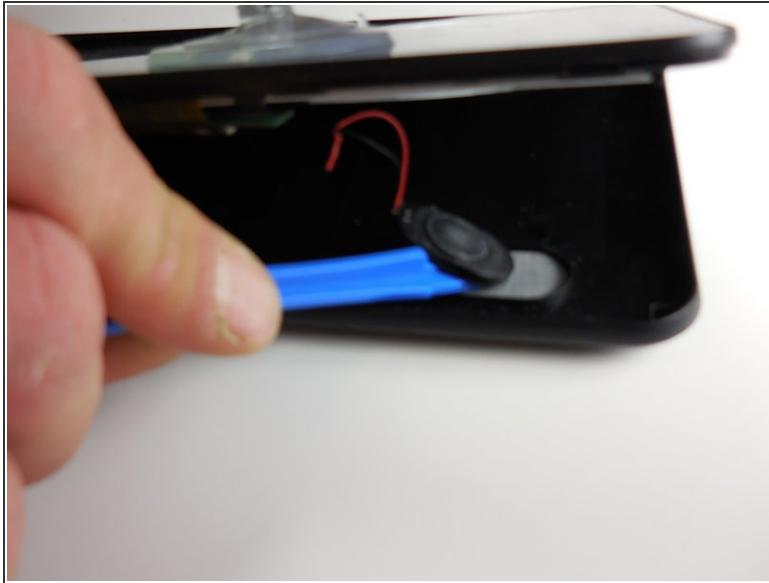

- Use the plastic opening tool to remove the speaker from the rear cover.

(i) The speaker is held in place with adhesive and is easily removed.


⚠ Do not pull on the speaker wires. This could damage the soldering connections.

Step 6



- Once the speaker is disconnected, the cover removal is complete.

Step 7 — Screen

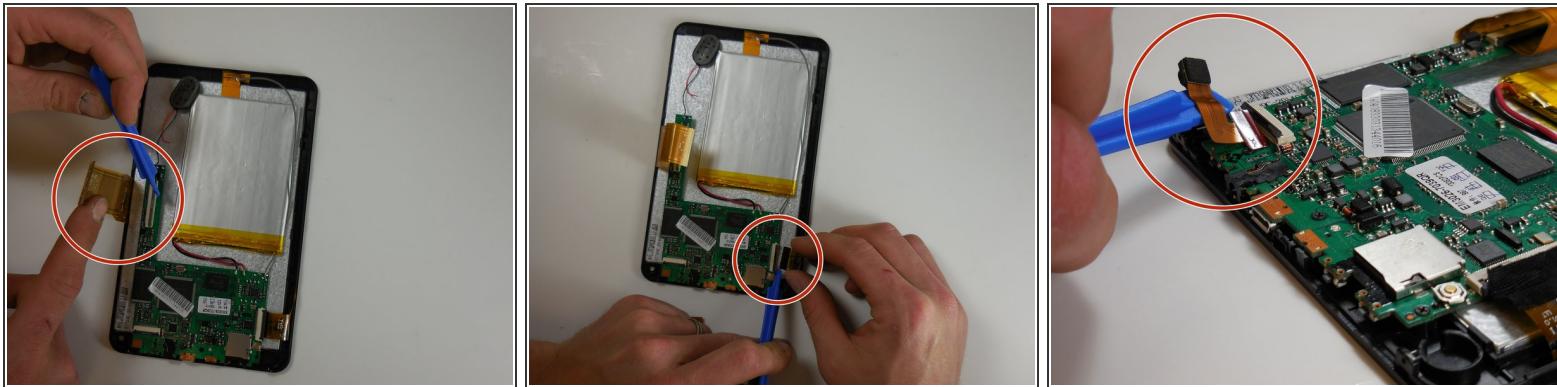

- Lift the hinges on the three ribbon connector clips and disconnect the ribbon connector.

Step 8



- Using the PH#00 screwdriver, remove the three 0.145 inch circuit board screws.


Step 9



- Remove battery, speaker and circuit board from screen.

⚠ Gently move circuit board assembly with speaker and battery away from device to ensure you do not damage the solder connections.

Step 10

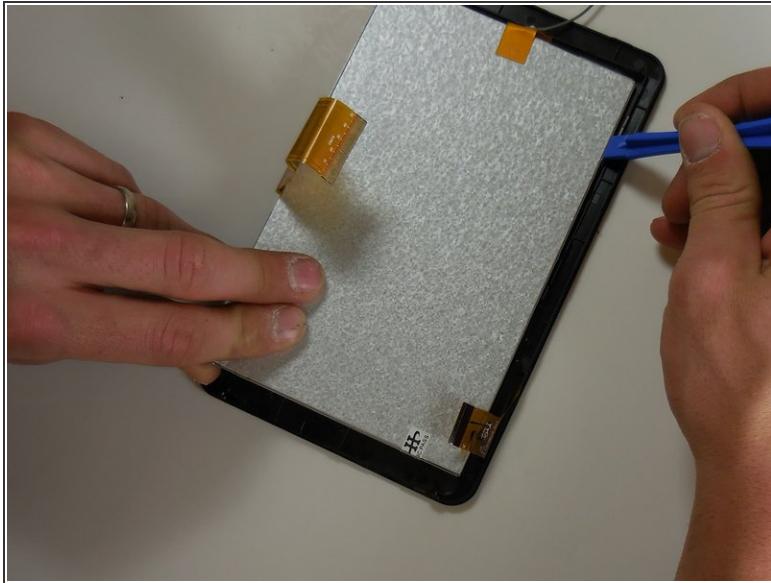


- Use plastic opening tools to remove screen from front cover.

i The screen is held in with plastic tabs.

! Use of too much force on the screen may result in unwanted damage to screen.

! To avoid damage to screen, ensure the metal screen cover does not catch on the plastic tabs.

Step 11

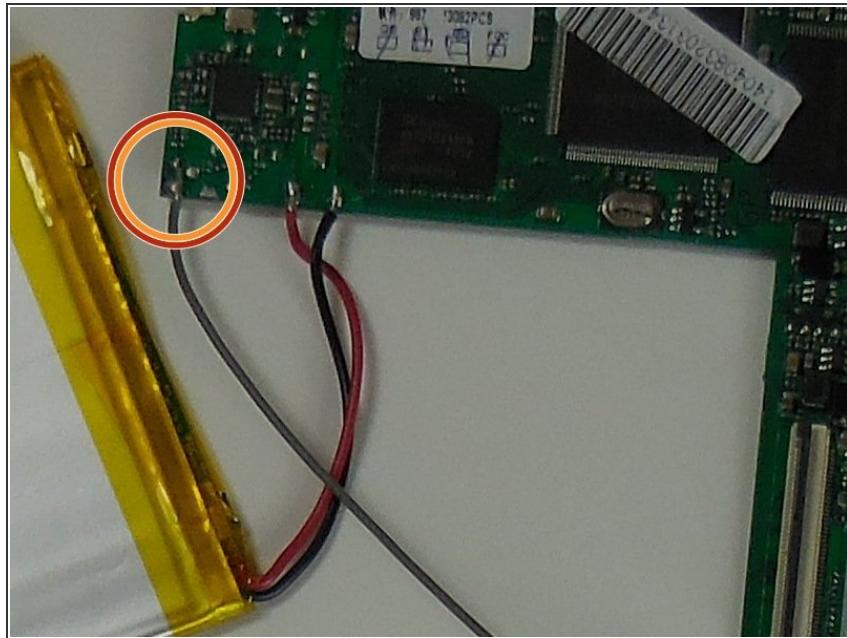

- Remove screen solder connector with solder removal tool.
- Solder new screen wire to circuit board with soldering tool.

To reassemble your device, follow these instructions in reverse order.