



Hisense Chromebook C11 Back Panel Replacement

How to replace a Hisense Chromebook C11 back panel.

Written By: Alexander Burrell




INTRODUCTION

This guide demonstrates how to properly remove and replace the back panel on a Hisense Chromebook C11.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Back Panel

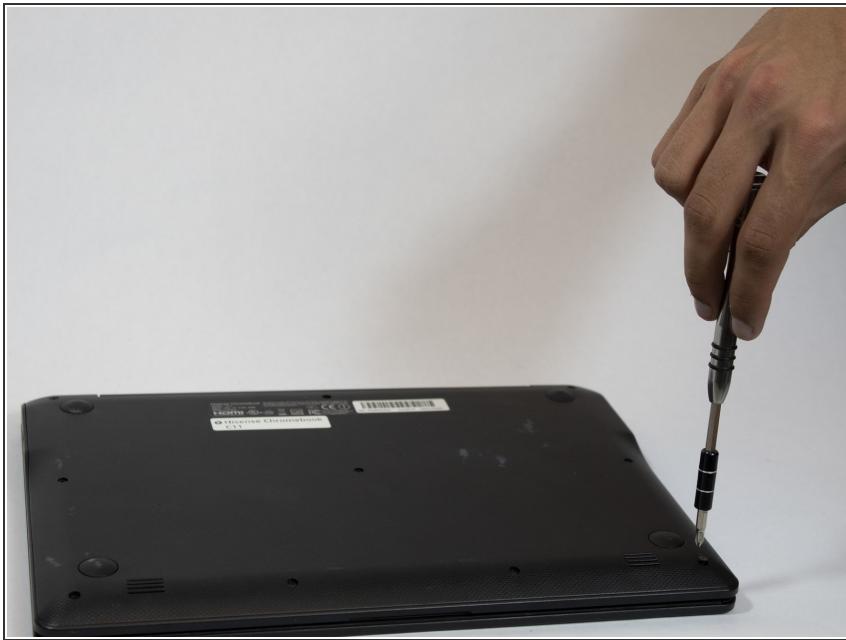

 Make sure that the laptop is turned off and disconnected from any power sources.

- Flip over the Chromebook.
- Unscrew the screws with Phillips #00 screwdriver.

Step 2




- Remove the front two hub caps.

Step 3



- Unscrew the screws with Phillips #00 screwdriver.

Step 4

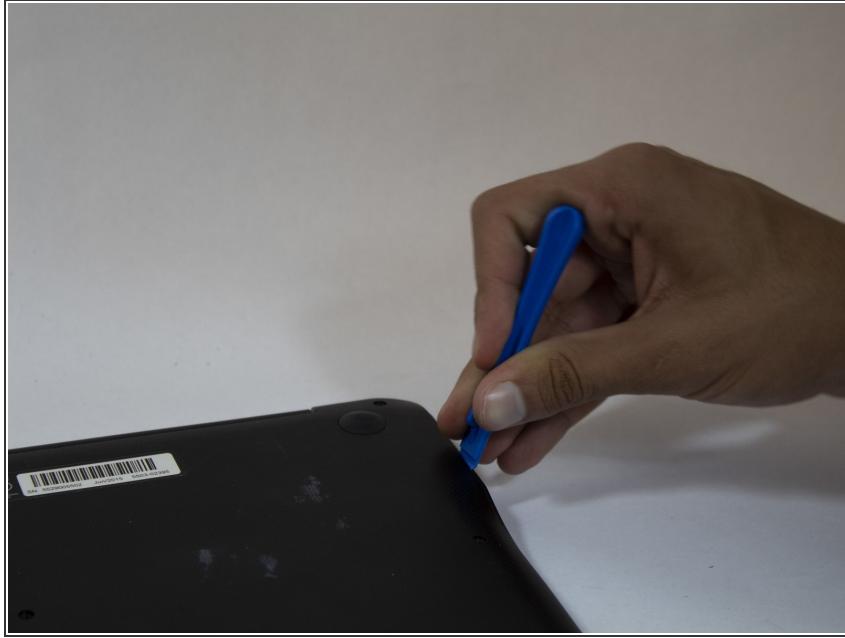

- Pry the perimeter of the case with a plastic opening tool.
- Remove the back panel.

To reassemble your device, follow these instructions in reverse order.