



# Hisense Chromebook C11 Battery Replacement

How to replace a Hisense Chromebook C11 battery.


Written By: Alexander Burrell



 **TOOLS:**

- [iFixit Opening Tools \(1\)](#)
- [Phillips #00 Screwdriver \(1\)](#)
- [Phillips #000 Screwdriver \(1\)](#)
- [Tweezers \(1\)](#)

## Step 1 — Back Panel

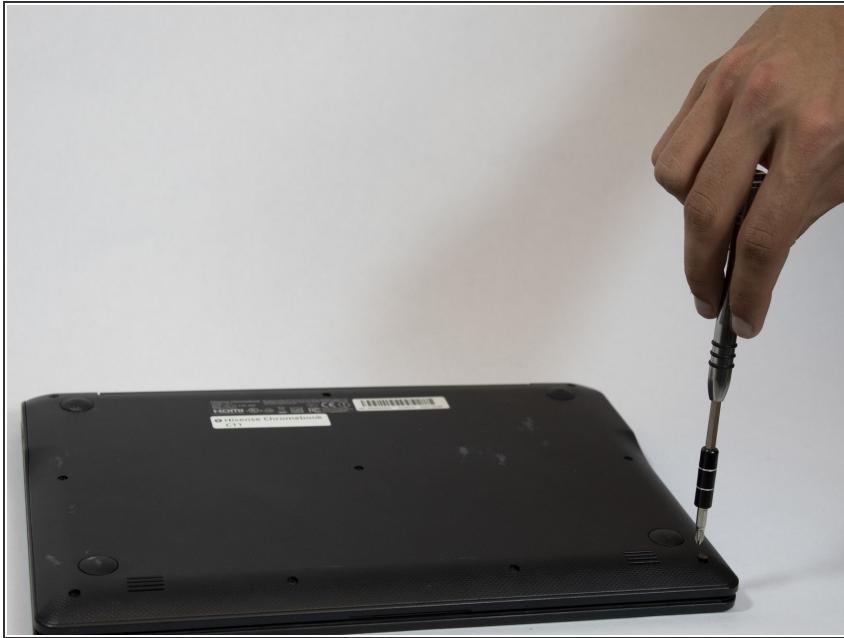

⚠ Make sure that the laptop is turned off and disconnected from any power sources.

- Flip over the Chromebook.
- Unscrew the screws with Phillips #00 screwdriver.

## Step 2



- Remove the front two hub caps.

## Step 3



- Unscrew the screws with Phillips #00 screwdriver.

## Step 4



- Pry the perimeter of the case with a plastic opening tool.
- Remove the back panel.


## Step 5 — Battery



! Be careful not to puncture the battery with the screwdriver or any sharp instrument.

- Unscrew the screws with a PH000 screwdriver.

## Step 6

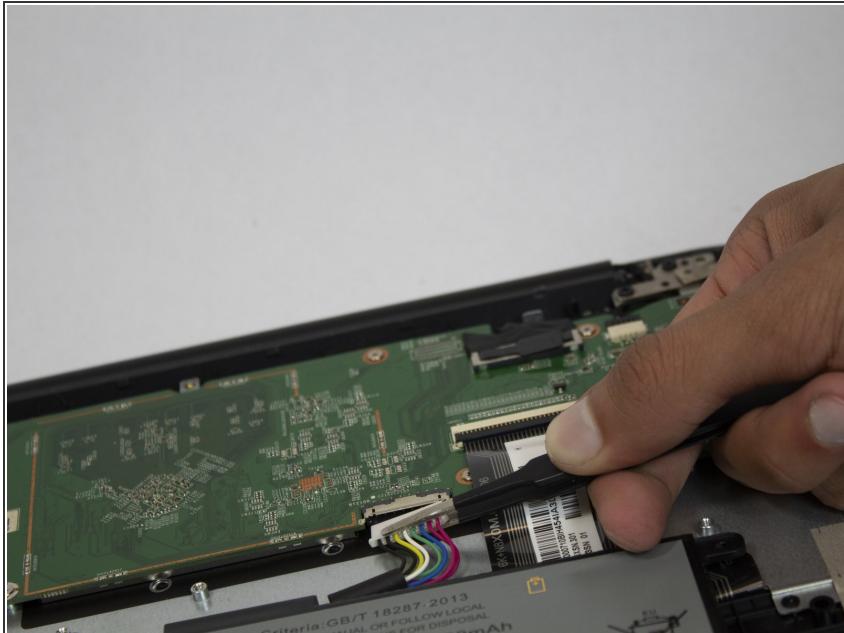

- Use tweezers to unplug the battery.

## Step 7



- Remove the battery.

To reassemble your device, follow these instructions in reverse order.