




Hisense Chromebook C11 Trackpad Replacement

How to replace a Hisense Chromebook C11 trackpad.


Written By: Cole Welham

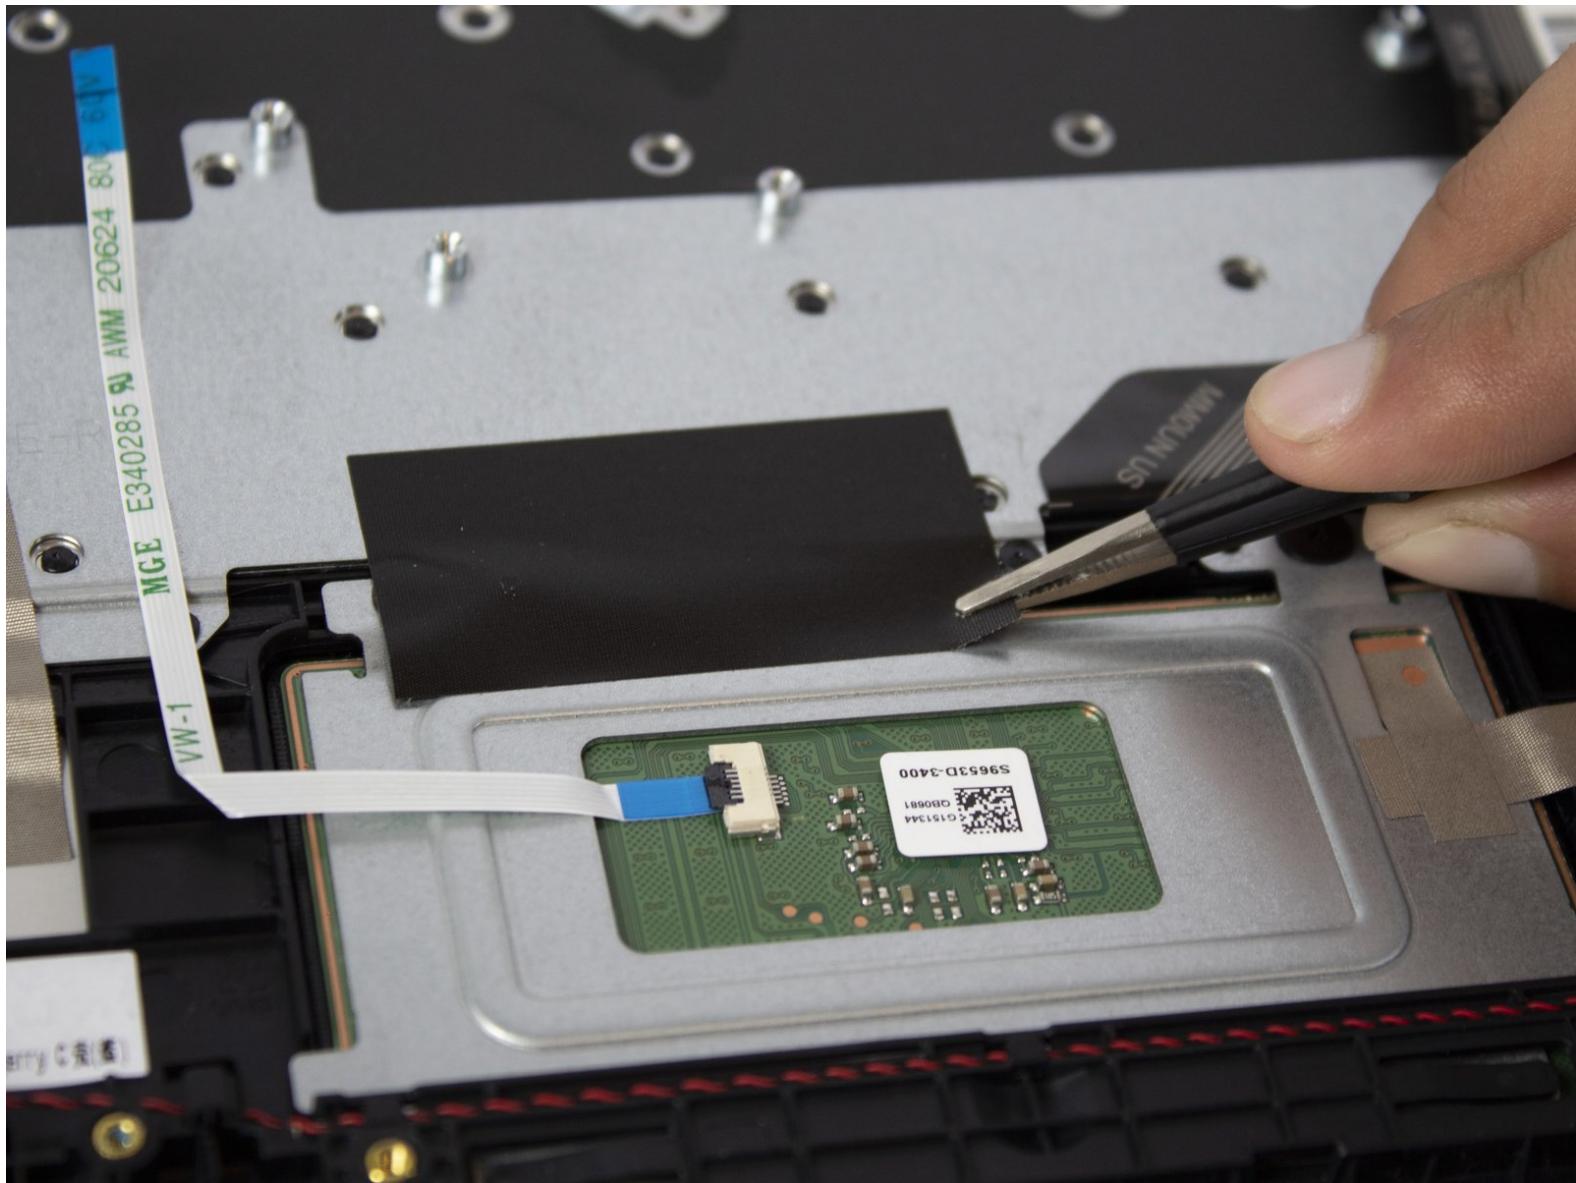

 **TOOLS:**

- [iFixit Opening Tools \(1\)](#)
- [Phillips #00 Screwdriver \(1\)](#)
- [Tweezers \(1\)](#)
- [ESD Safe Tweezers Blunt Nose \(1\)](#)

Step 1 — Back Panel

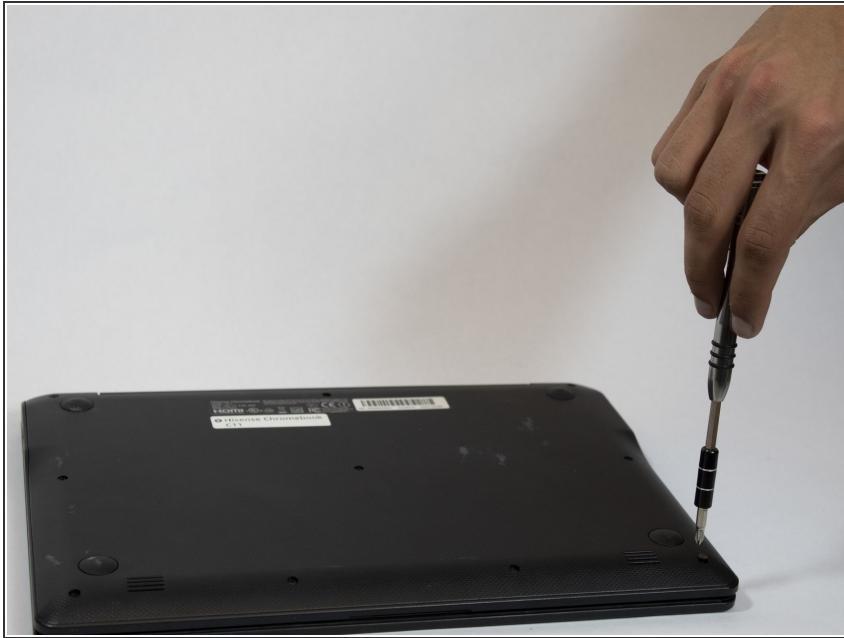

! Make sure that the laptop is turned off and disconnected from any power sources.

- Flip over the Chromebook.
- Unscrew the screws with Phillips #00 screwdriver.

Step 2



- Remove the front two hub caps.

Step 3




- Unscrew the screws with Phillips #00 screwdriver.

Step 4




- Pry the perimeter of the case with a plastic opening tool.
- Remove the back panel.

Step 5 — Trackpad

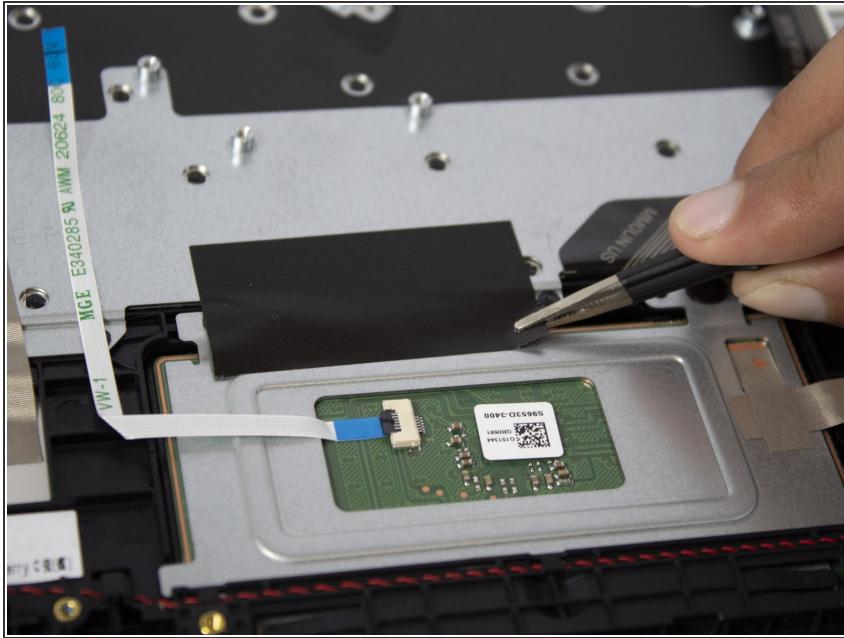


- Remove the electrical tape.

Step 6

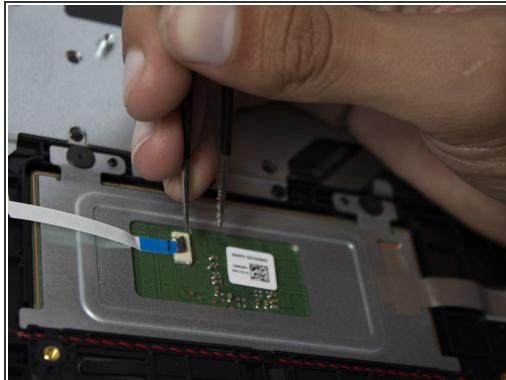

- Flip up the bracket holding the ribbon in place.
- Gently but firmly pull the ribbon free.

Step 7

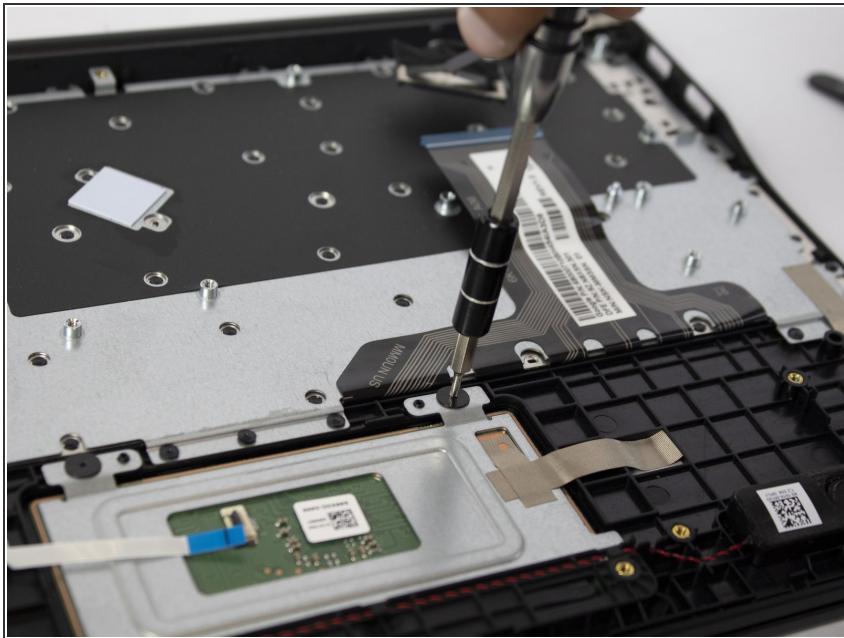


- Using the Phillips Head Screwdriver, remove the screws at the topmost part of the panel holding the trackpad in place.

Step 8



- Using tweezers, remove the silver electrical tape.

Step 9

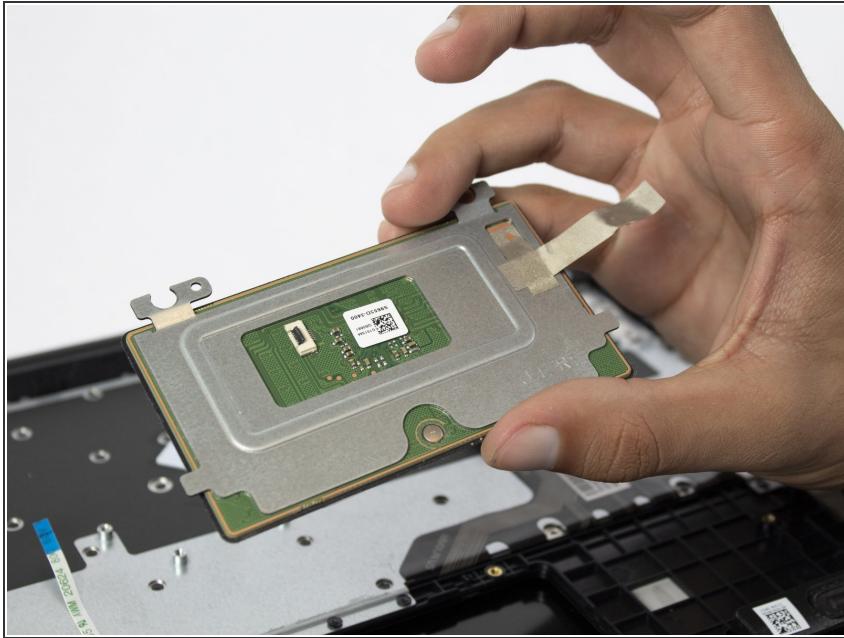

- Carefully remove the trackpad from the computer.

To reassemble your device, follow these instructions in reverse order.