



# Hisense Sero 8 Speaker Replacement

This guide demonstrates how to replace the speaker.

Written By: Katharina



## INTRODUCTION

After extended use, the speakers might lose sound quality and require replacement.

### TOOLS:


- [iFixit Opening Tools](#) (1)
- [Soldering Iron](#) (1)
- [Spudger](#) (1)
- [Phillips #00 Screwdriver](#) (1)

## Step 1 — Speaker



- Remove the back cover of the device using a combination of both plastic opening tools.
- Use your plastic opening tool to pry open a corner of the device. Continue using the tool down the side of the device to open it completely.

## Step 2

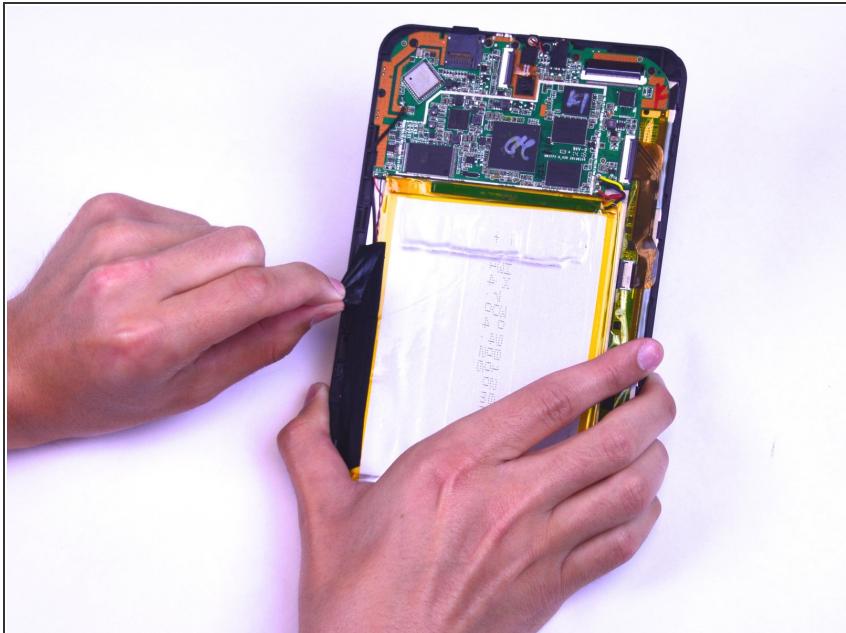

- Remove the black tape located to the left of the device.

## Step 3





- Use a Phillips head #00 screwdriver to remove the two 4.43mm screws on the bottom that keep the speakers in place.

## Step 4



- Unsolder the red and black wires connecting the speaker to the motherboard. Take a look at this [guide](#) to learn how to solder and unsolder connections.

## Step 5

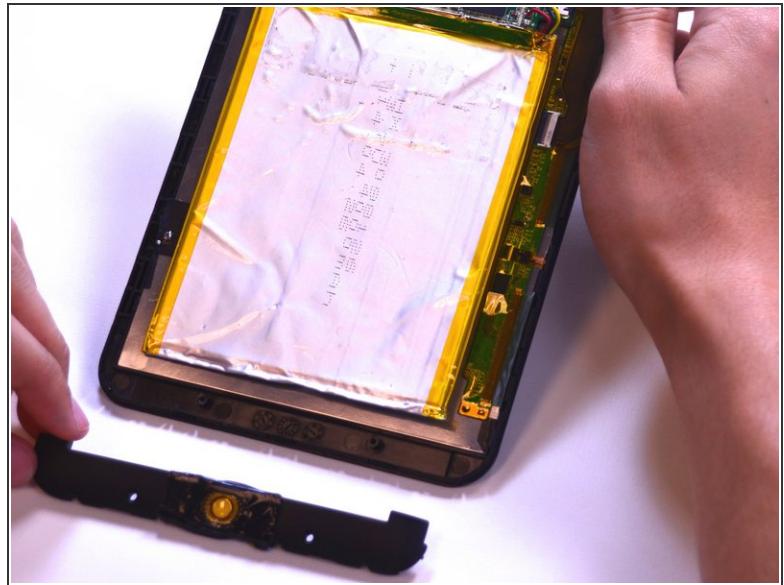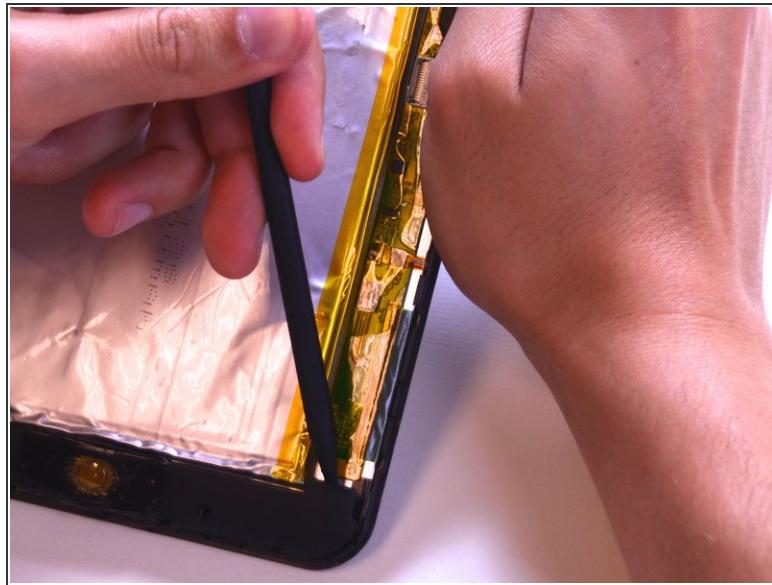

- Use the spudger tool to remove the speaker panel carefully.

To reassemble your device, follow these instructions in reverse order.