



# Honda Fit Reset Oil Life Indicator Replacement

This guide will help owners of a 2007-2010 Honda Fit to reset their engine oil life indicator after an oil change.

Written By: Jasen Friedle



## Step 1 — Ignition



- Turn the key in the ignition to the run position (right before the start position)

## Step 2 — Select/Reset Knob



- Press the SELECT/RESET knob repeatedly until the engine oil life indicator is displayed.

## Step 3 — Select/Reset Knob Continued



- Press and hold the SELECT/RESET knob for more than 10 seconds. The engine oil life indicator and the maintenance code(s) will blink.

## Step 4 — Select/Reset Knob Continued



- Press and hold the SELECT/RESET knob for more than 5 seconds. The maintenance items code(s) will disappear, and the engine oil life will reset to 100%.

## Step 5 — Ignition Again!



- Turn the key in the ignition to the off position, and then start the engine to verify the indicator has been reset.

You did it!