



# Honeywell HY-254-TGT Remote Batteries Replacement

Use this guide to replace the batteries if the remote is not responding.

Written By: Darian Maxwell



## INTRODUCTION

Use this guide to remove the back cover from the remote, which will allow you to access and replace the batteries.

## Step 1 — Remote Batteries



- Remove the battery cover from the back of the remote by gently pressing on the ridged portion and sliding it down.

## Step 2



- Remove the batteries by lifting them from the positive edge.

To reassemble your device, follow these instructions in reverse order.