



Hoover Windtunnel Air Steerable Upright HEPA Filter Replacement

This guide will walk you through how to clean and replace your HEPA filter for your Hoover Windtunnel Air Steerable Upright.

Written By: Spencer Nefores



This document was generated on 2019-10-04 12:38:12 PM (MST).

INTRODUCTION

Over time your Hoovers filters will get dirty and may eventually need to be replaced. This guide will show you how to do this in a few easy steps!



PARTS:

- [Hoover Final Filter #440003905 \(1\)](#)

Step 1 — HEPA Filter



- Put the cleaner into the upright position, turn the power off, and unplug the power cord.

Step 2



- Remove the dirt cup from the cleaner.
- The HEPA filter is located under the dirt cup and under where it says HEPA.
- Twist the top counterclockwise to unlock the cap.

Step 3



- Lift the HEPA filter out.
- ⓘ Tap the filter against the inside of a trashcan to knock out the dirt and debris or replace as necessary.
- ⚡ Do not wash the HEPA Filter.