



Hoover Windtunnel Air Steerable Upright Rinsable and HEPA Filter Replacement

This guide will show you how to replace the rinsable filter for your Hoover Windtunnel Air Steerable Upright.

Written By: Spencer Nefores



This document was generated on 2019-10-14 07:42:08 PM (MST).

INTRODUCTION

Over time your Hoovers filters will get dirty and may eventually need to be replaced. This guide will show you how to do this in a few easy steps!

Step 1 — Rinsable Filter



- Put the cleaner into the upright position, turn off the power and unplug the power cord.

Step 2



- Remove the dirt cup from the cleaner.
- Twist the top of the dirt cup to open it and reveal the rinsable filter.

Step 3



- Remove the rinsable filter from the dirt cup.
- If the rinsable filter is dirty, rinse it with water for 2 minutes or until the water runs clear.
 - Squeeze out excess water and allow to dry for 24 hours.
- **Never put a wet filter back into the cleaner.**