



# Hover-1 Rally Acceleration Lever Replacement

How to replace the acceleration lever on a Hover-1 Rally electric scooter (model number: H1-RALY)

Written By: Van Schneider



## INTRODUCTION

If your Hover-1 Rally (model H1-RALY) scooter will not accelerate, use this guide to replace the acceleration lever. The acceleration lever is located next to the right handlebar grip and is easy to replace. Replace this part if it is damaged or immovable.

Make sure to power off the scooter before starting this guide.

## TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [Phillips #00 Screwdriver](#) (1)

## Step 1 — Acceleration Lever



- Remove one 4 mm Phillips #1 screw located directly above the acceleration lever.

## Step 2



- Turn the right handle grip counterclockwise.

*(i)* The right handle will disconnect from the handlebar, exposing the acceleration lever.

## Step 3



- Remove four 2 mm Phillips #00 screws located on the acceleration throttle.

## Step 4



- Pull the acceleration lever off of the handle.

 The acceleration lever sits perpendicular to the handle.

To reassemble your device, follow these instructions in reverse order.