



Hover-1 Rally Brake Switch Replacement

How to replace the brake switch on a Hover-1 Rally electric scooter (model number: H1-RALY)

Written By: Cami Lowrey



INTRODUCTION

If your Hover-1 Rally (model H1-RALY) scooter will not brake, use this guide to replace the acceleration lever. The brake switch is located next to the left handlebar grip and is easy to replace. Replace this part if it is damaged or immovable.

Check your [brake pad](#) first before using this guide. A worn down brake pad is a more common cause of the scooter not braking.

Make sure to power off the scooter before starting this guide.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)

Step 1 — Brake Switch



- Rotate and pull the left handle to unscrew it from the handlebar.
- *(i)* This will expose the brake switch.

Step 2



- Remove four 2 mm Phillips #00 screws located on the brake switch.

Step 3



- Pull the brake switch off of the handlebar.
- ☒ The brake switch sits perpendicular to the handlebar.

To reassemble your device, follow these instructions in reverse order.