



Hover-1 Ultra Power Button Replacement

Replace the broken power button on your Hover-1 Ultra Hover Board to continue riding.

Written By: Camron Clifton



INTRODUCTION

Will your Hover-1 Ultra not power up, preventing you from riding it? If you face this problem, it can be fixed with a simple replacement of the power button on your device. You will need a Phillips #1 screwdriver to remove the screws and an adjustable crescent wrench to help remove the button



TOOLS:


- [7/16 Crescent Wrench](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Power Button



- Orient the hoverboard so that the pads are facing down.
- With the Phillips #1 screwdriver, remove all 18 of the screws on the underside of the hoverboard.
- Carefully remove the shell, lifting directly up.

Step 2

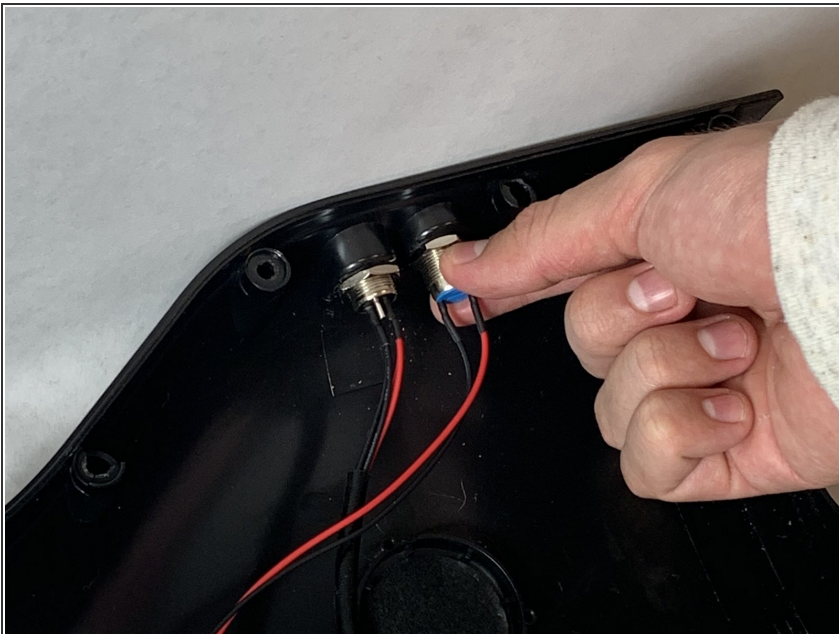

- Unscrew the power button using your hands or an adjustable crescent wrench.
- Turn the power button counter-clockwise to release from the shell.

Step 3



- Unclip the red and black power cables that are attached to the port from the motherboard.

Step 4



- Remove the power button from the hoverboard assembly.

To reassemble your device, follow the instructions for step 1 in reverse order.