



# How To Clean Nikon Coolpix S30 Lens

In the event that there is dirt in front of your camera lens, this will help you get to the part of front of the camera and clean off the lens/ casing.

Written By: Courtney Weida



## INTRODUCTION


You will need a T5 and a PH000 tip from the iFixit's kit.

If the camera is taking fuzzy pictures it may be due to debris blocking the lens.

### TOOLS:

- [Phillips #000 Screwdriver](#) (1)
- [T5 Torx Screwdriver](#) (1)

## Step 1 — Batteries

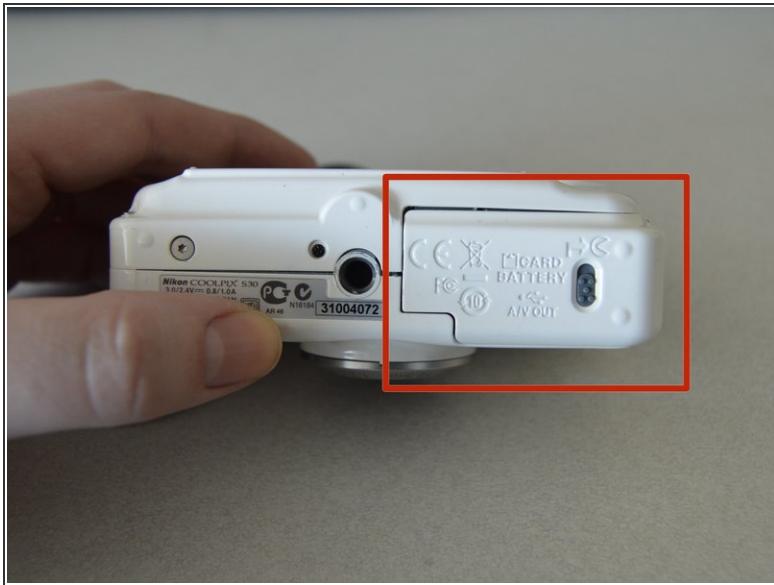

- Slide the battery cover to the right.
- The hinge is on the left side of the cover which will allow the cover to stay attached.

## Step 2



- Slide the second cover (yellow) to the right (similar to the outer cover). This will allow the batteries to be exposed.

## Step 3



- Remove the batteries by gently tipping the camera.

## Step 4 — How To Clean Nikon Coolpix S30 Lens



- Remove the four screws that hold the back of the case to the rest of the camera.

## Step 5



- Remove the left screw from the bottom of the camera first. This can be done using the same T5 tip.
- Unscrew the screw on the right using a different attachment: PH000 (it is a small Phillip's head)

## Step 6




- Remove back case from the rest of the camera carefully.

## Step 7




- Remove the three screws that secure the motherboard to the front case.

## Step 8

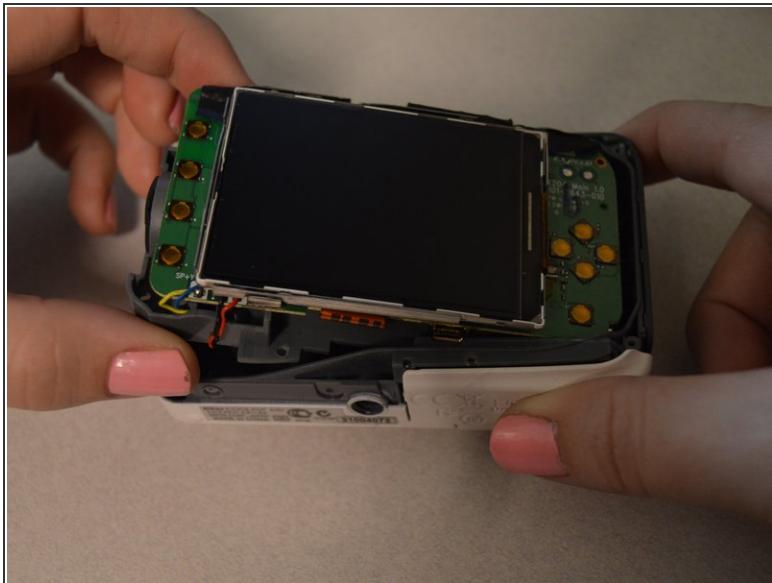

- Remove the motherboard from the front case.
- Leave the red and black wire attached but lay the piece in front of the case.

## Step 9

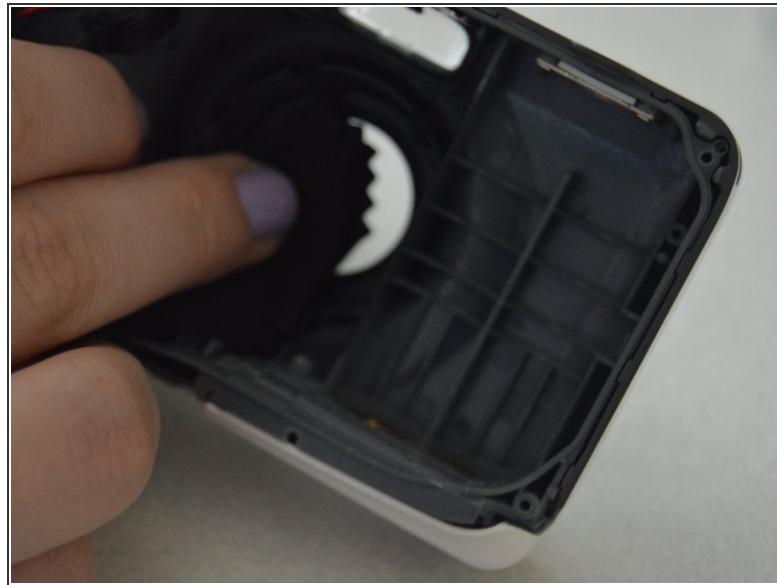

- Wipe the lens and the clear plastic on the front case to remove debris.

To reassemble your device, follow these instructions in reverse order.