



# How to Clean Neato Botvac 80

This guide will show you how to clean Neato.

Written By: Martin Dimitrov



## INTRODUCTION

Welcome to this guide on how to maintain your Neato Botvac. This guide applies to all of the botvac line.

## Step 1 — Clean the brushroll



- Turn over your robot and remove the brush guard. Open up the bearing and remove all the hair that is wrapped in it.
- You can also change the brush completely.
- Tip Change the brush every 3-4 months for best performance.

## Step 2 — Cleaning the cliff sensors



- Clean the cliff detection sensors.

## Step 3 — Cleaning the laser



- Clean out the laser compartment with some compressed air.

## Step 4 — Wipe the robot



- Wipe your robot clean and you're done!

To reassemble your device, follow these instructions in reverse order.