



How to Clean a Fisher and Paykel Aquasmart Washing Machine that is making clothes dirty

This guide will show you how to clean your Fisher and Paykel Aquasmart Washing machine so that it will stop making your clothes dirty..

Written By: Flarnity



This document was generated on 2019-10-26 02:00:27 AM (MST).

INTRODUCTION

I notice that after a lot of washes my Fisher and Paykel Aquasmart started leaving grey and black smudges and dirt/grit on my clothes. The clothes would basically come out dirtier than when they went in! It turns out it needed cleaning (behind the bowl).

TOOLS:

- Hammer (1)
- Philips extra long screw driver (1)
- Flathead Screwdriver (1)
- scrubbing brush (1)

Step 1 — How to Clean a Fisher and Paykel Aquasmart Washing Machine that is making clothes dirty



- To clean the inside of the washing machine follow this youtube video (which although talks about an out of balance fisher and paykel washing machine, actually shows how to clean it):
<https://www.youtube.com/watch?v=HNY54gTr...>

To reassemble your device, follow these instructions in reverse order.