



How to Clean the Keurig K75 Platinum Brewing System Needle

Clean the needle when it has an obstruction or if you find coffee grounds coming out of the K-Cup.

Written By: Alexander Vo



INTRODUCTION

Over time, the Keurig B70 Platinum needle accumulates particles which causes malfunction in the brewing of beverages. The Keurig needle functions as a tool to pierce K-Cups and feed water through the K-Cup.



TOOLS:


- [Paper Clip](#) (1)
-

Step 1 — How to Clean the Keurig K75 Platinum Brewing System Needle



- ⚠ Before needle repair, make sure the brewer is disconnected from any power outlet.
- Lift the handle to open the top of the brewer.
- There are two sharp needles that puncture the K-Cup pack. One is above the K-Cup holder and the other is in the bottom of the holder. Be careful when cleaning the top needle.

Step 2

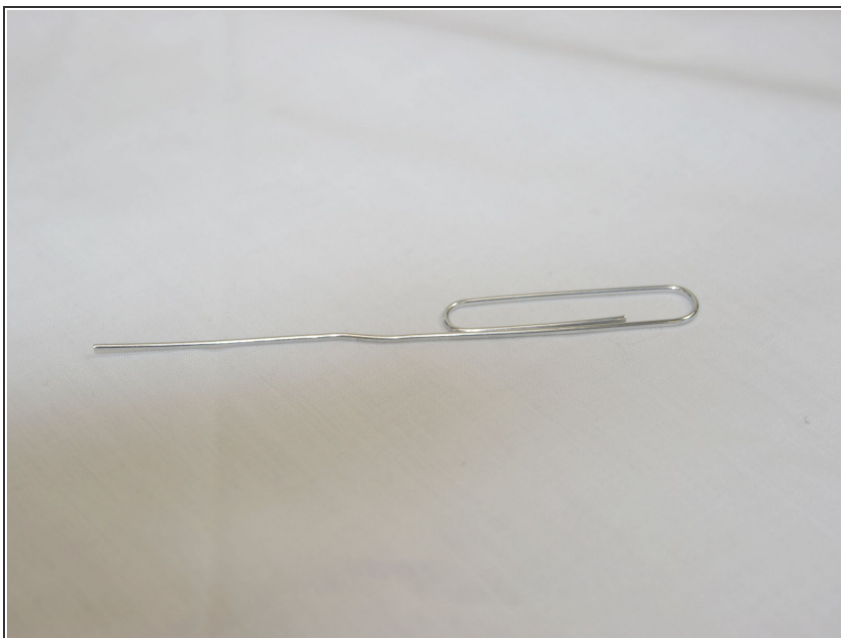

- Bend a paperclip to create a vertical metal piece. This is used to clean the top needle.

Step 3



- Insert a paper clip into the exit needle to loosen the debris and push it out.
 - Repeat this action until the debris is cleared from the top needle.
- ⓘ All external pieces of the brewer are dishwasher safe.

To reassemble your device, follow these instructions in reverse order.