



How to Fix Error 20

How to repair your camera when it receives the Error 20, a Mechanical Malfunction.

Written By: Sean



INTRODUCTION

A walk-through of the steps needed to solve the error 20 on a canon t2i.

Step 1 — Remove Debris



- Check to make sure there is nothing physically preventing the shutter from opening.

⚠️ Do not touch the mirror. You will leave fingerprints.

Step 2 — The Battery



- Remove the battery and wait 30 seconds.
- Put the battery back in.

Step 3 — The Memory Card



- Remove the memory card and wait 30 seconds.
- Put the memory card back in.

Step 4 — The Power



- Turn the power off and wait 30 seconds.
- Turn the power back on.

Step 5 — The Shutter



- If a shutter can be found to be purchased individually, replace the Shutter.

 Be careful to not touch the mirror. You will leave fingerprints.

To reassemble your device, follow these instructions in reverse order.