



# How to Fix an air leak from a Tire valve (Tyre valve)

A method to quickly and quite easily fix an air leak from around the Tire valve stem is shown here.

Written By: jon



## INTRODUCTION

See the video for a simple method to reseal valve stems

### TOOLS:

- Flathead 3/32" or 2.5 mm Screwdriver (1)

### PARTS:

- Gasket Sealant (1)

To reassemble your device, follow these instructions in reverse order.